 




Tondeuse tractée thermique





## Manuel Pièces de Rechange
    
## Ensemble Tondeuse Tractée LBP46

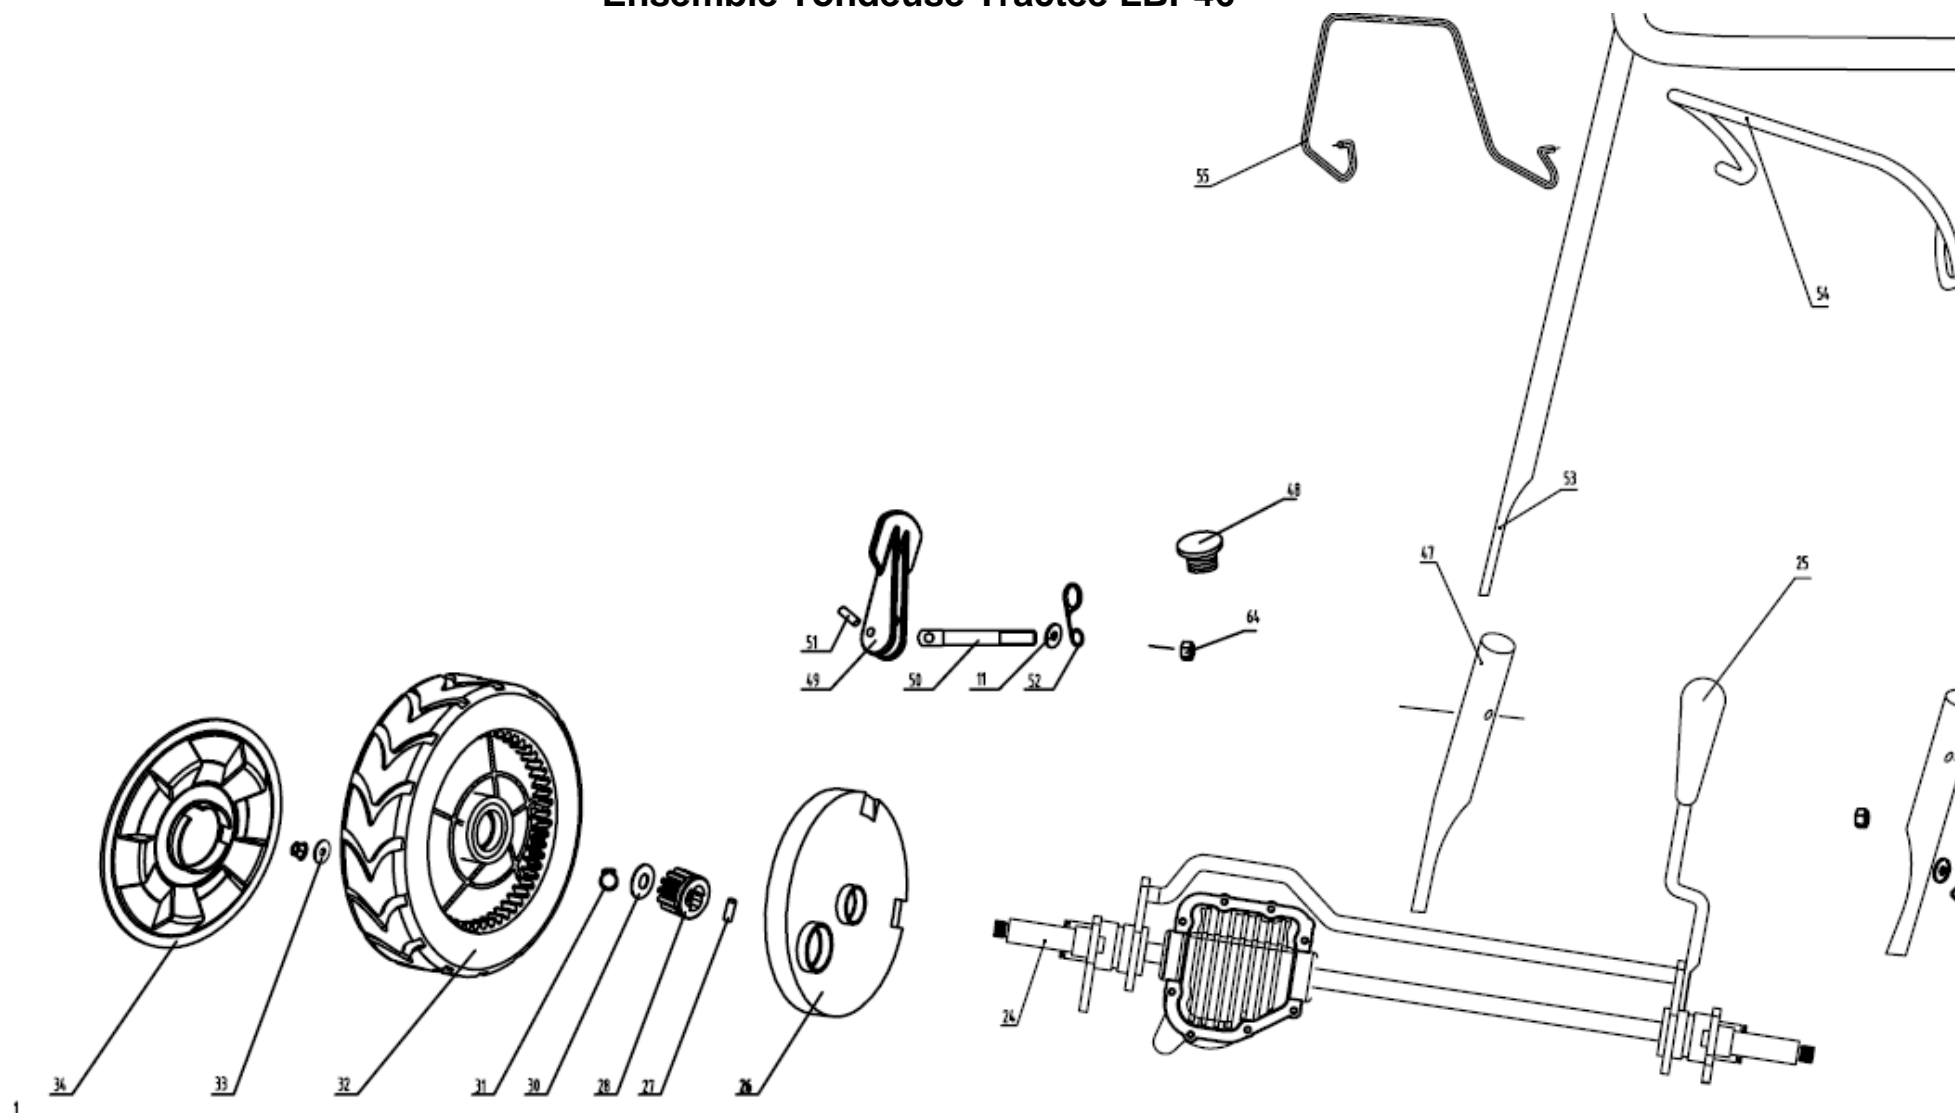

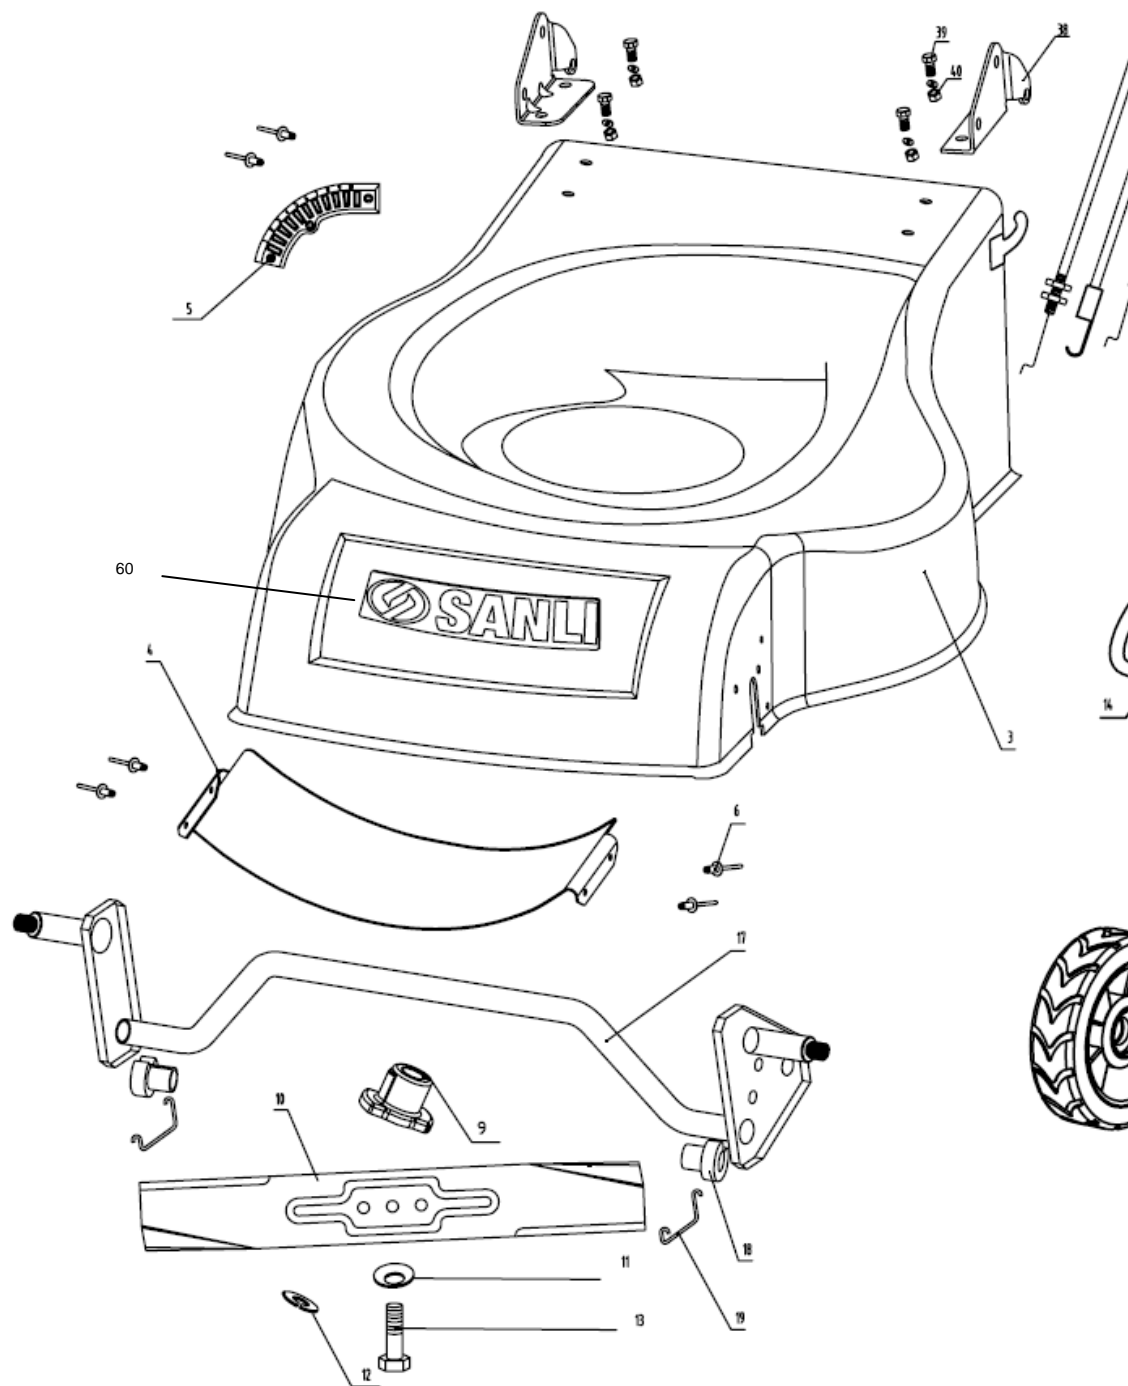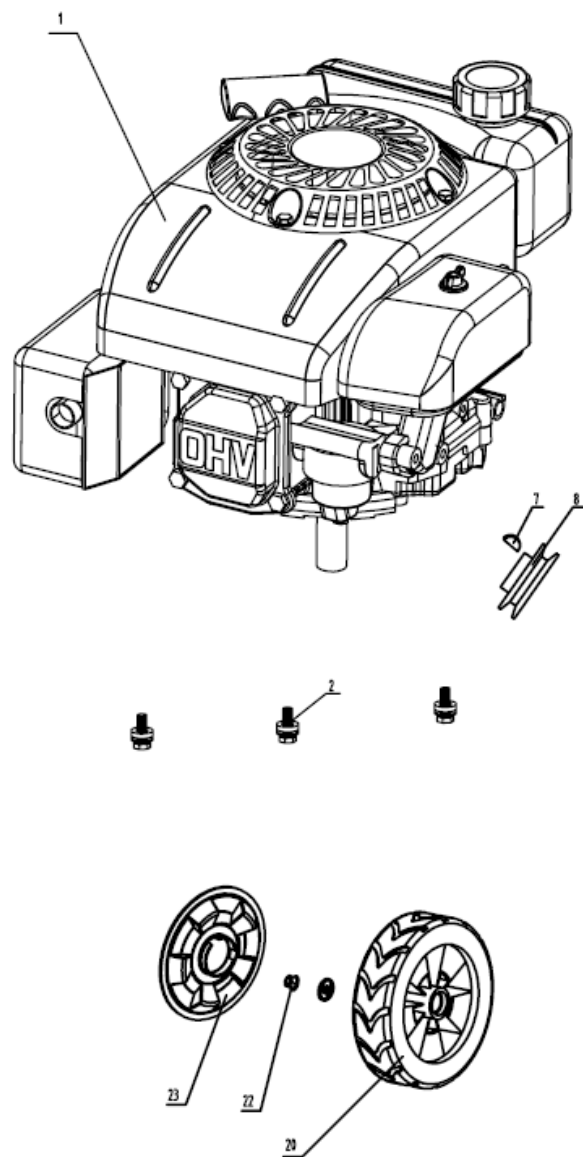

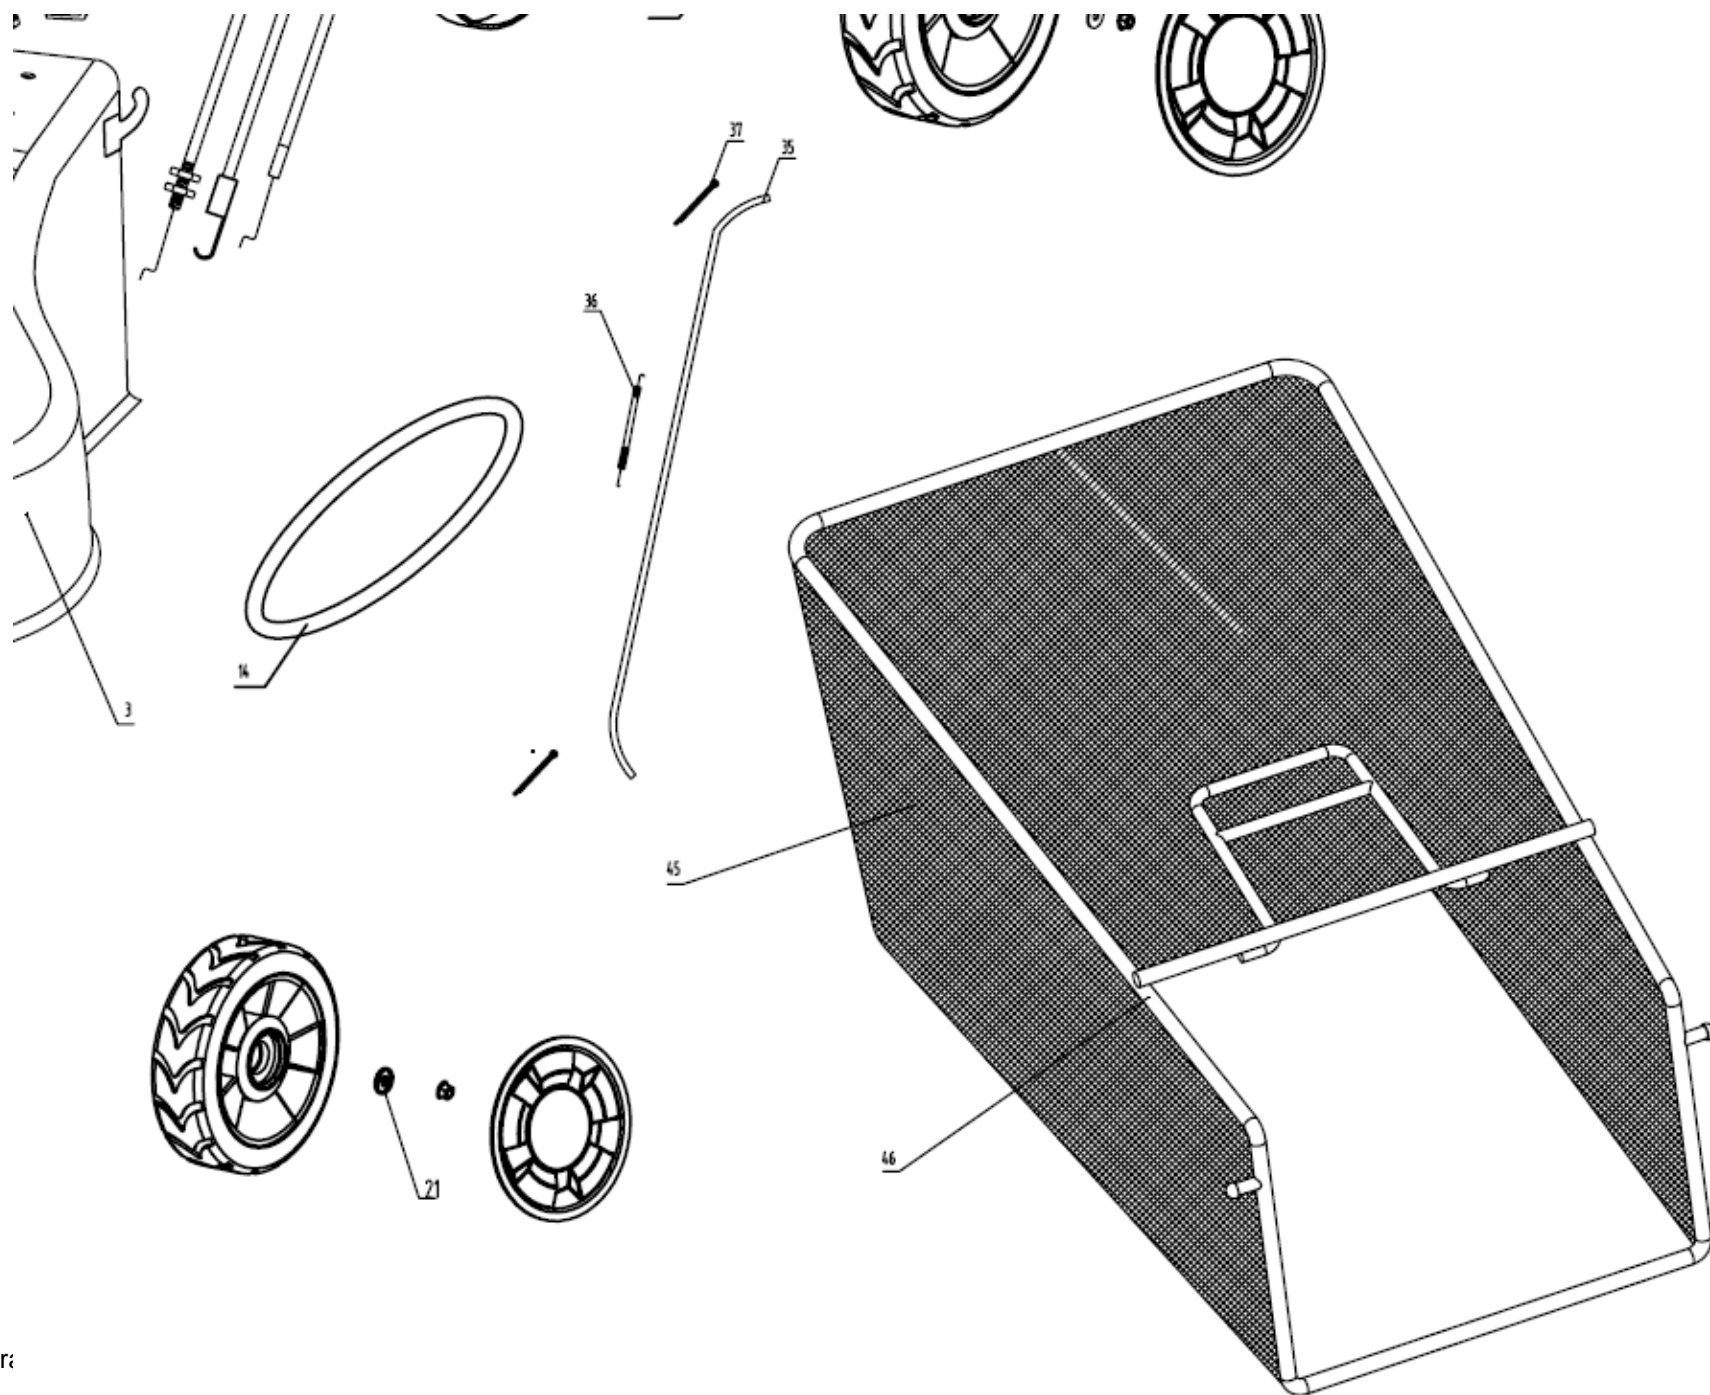




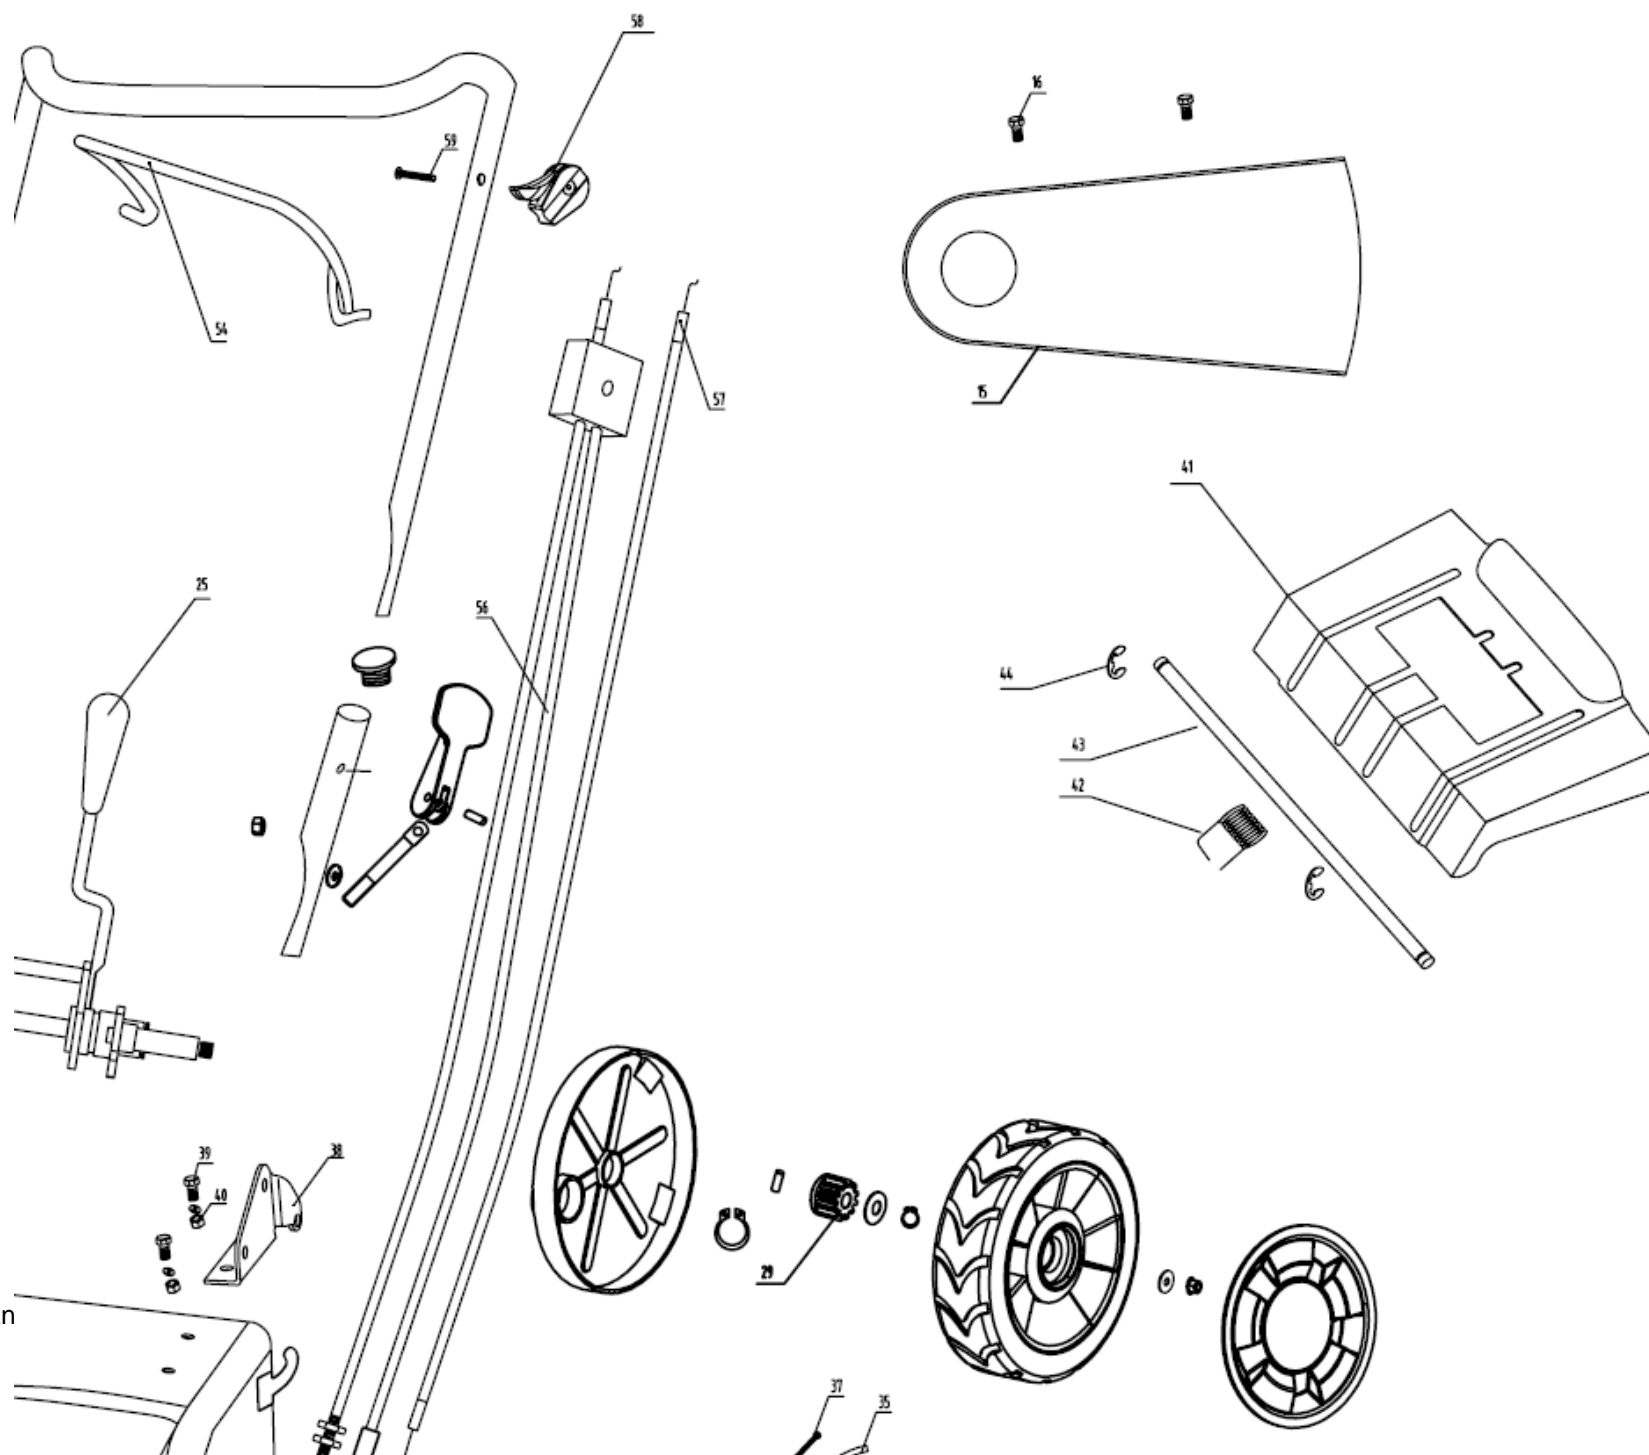


Rep/N°	Libellé	Rep/N°	Libellé	Rep/N°	Libellé
<b>1</b>	Moteur complet	<b>21</b>	Rondelle	<b>41</b>	Volet de bac
<b>2</b>	Boulon M8x42	<b>22</b>	Ecrou M8	<b>42</b>	Ressort de rappel
<b>3</b>	Carter de coupe	<b>23</b>	Cache roue	<b>43</b>	Axe de déflecteur
<b>4</b>	Tôle carénage AV	<b>24</b>	Boîtier de traction	<b>44</b>	Circlip d8
<b>5</b>	Secteur hauteur de coupe	<b>25</b>	Levier de hauteur de coupe	<b>45</b>	Toile de bac
<b>6</b>	Rivet Pop 5x12	<b>26</b>	Cache roue AR	<b>46</b>	Armature de bac
<b>7</b>	Clavette	<b>27</b>	Cliquet	<b>47</b>	Bras inférieur
<b>8</b>	Poulie	<b>28</b>	Pignon AR D	<b>48</b>	Bouchon plastique
<b>9</b>	Moyeu de lame	<b>29</b>	Pignon AR G	<b>49</b>	Levier de verrouillage
<b>10</b>	Lame	<b>30</b>	Rondelle	<b>50</b>	Tige filetée
<b>11</b>	Rondelle plate	<b>31</b>	circlip	<b>51</b>	Axe
<b>12</b>	Rondelle frein	<b>32</b>	Roue AR	<b>52</b>	Support
<b>13</b>	Vis de lame	<b>33</b>	Rondelle	<b>53</b>	Guidon supérieur
<b>14</b>	Courroie d'avancement	<b>34</b>	Cache roue AR	<b>54</b>	Poignée présence opérateur
<b>15</b>	Protection de courroie	<b>35</b>	Tige hauteur centralisée	<b>55</b>	Poignée de traction
<b>16</b>	Vis cruci	<b>36</b>	Ressort hauteur centralisée	<b>56</b>	Câble de traction
<b>17</b>	Axe avant	<b>37</b>	Goupille 2x20	<b>57</b>	Câble régime moteur
<b>18</b>	Manchon axe avant	<b>38</b>	Fixation bras G	<b>58</b>	Levier régime moteur
<b>19</b>	Agrafe de fixation	<b>39</b>	Boulon M8x18	<b>59</b>	Vis M6x52
<b>20</b>	Roue avant	<b>40</b>	Ecrou M8	<b>60</b>	Plaque logo sanli

## REFERENCE DE COMMANDE





 
 
 
 
Rep/N°	Réf Sanli	Gencod	Libellé
<b>1 ;3x2</b>			Moteur B\$\$ DOV 4T-161 cm3
<b>3 ;4 ;5 ;4x6</b>	<b>1125</b>	3700554611253	Carter équipé
<b>5</b>	<b>2055</b>	3700554620552	Secteur de hauteur de coupe
<b>7 ;8 ;15 ;2x16</b>	<b>1126</b>	3700554611260	Kit poulie traction
<b>9 ;11 ;12 ;13</b>	<b>1127</b>	3700554611277	Kit fixation lame
<b>14</b>	<b>1128</b>	3700554611284	Courroie traction
<b>10</b>	<b>1129</b>	3700554611291	Lame 46 cm
<b>17 ;18 ;19</b>			Kit axe avant
<b>20 ;21 ;22 ;23</b>	<b>1131</b>	3700554611314	Roue droite
<b>20a ;21 ;22 ;23</b>	<b>1607</b>	3700554616074	Roue gauche
<b>24</b>			Boîtier de traction
<b>26 ;27 ;28 ;30 ;31 ;33</b>	<b>1133</b>	3700554611338	Kit pignon AR Droit
<b>26 ;27 ;29 ;30 ;31 ;33</b>	<b>1134</b>	3700554611345	Kit pignon AR Gauche
<b>32 ; 34</b>	<b>1723</b>	3700554617231	Roue AR droite
<b>32 ; 34</b>	<b>1724</b>	3700554617248	Roue AR gauche
<b>41 ;42 ;43 ;2x44</b>	<b>1135</b>	3700554611352	Kit volet de bac
<b>45 ;46</b>	<b>1136</b>	3700554611369	Bac complet
<b>11 ;49 ;50 ;51 ;52</b>	<b>1137</b>	3700554611376	Verrouillage guidon
<b>56</b>			Câble de traction
<b>57 ;58</b>			Câble régime moteur
<b>60</b>	<b>1712</b>	3700554617125	Plaque logo sanli
<b>54</b>	<b>1718</b>	3700554617187	Poignée présence opérateur

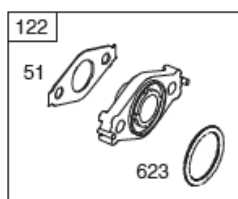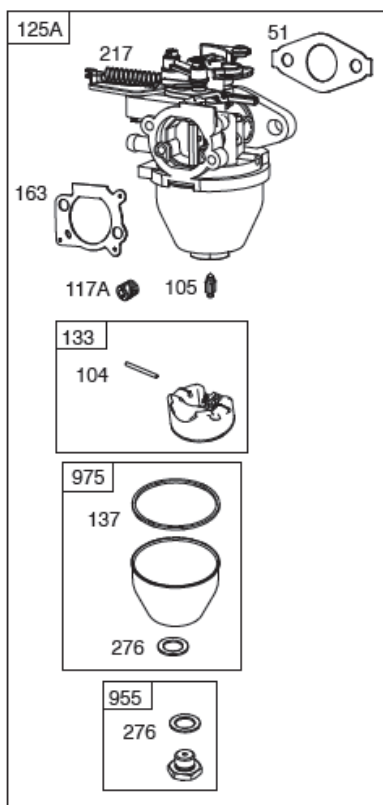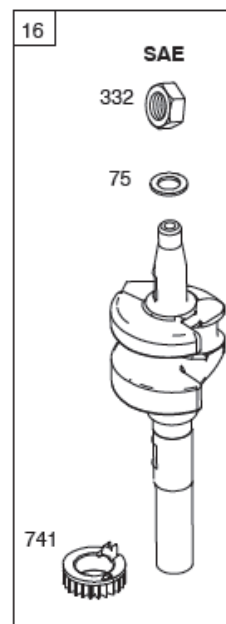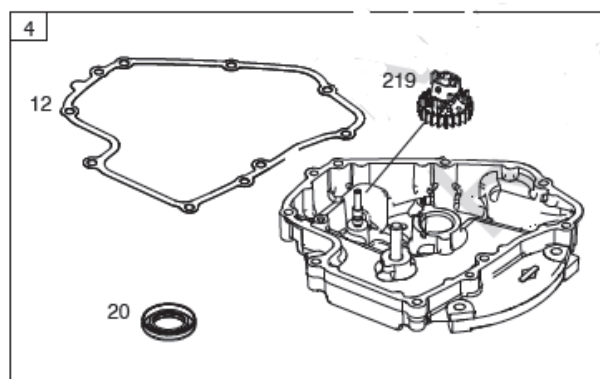


365 118A 











# 100800

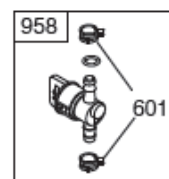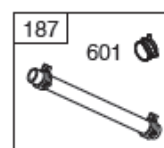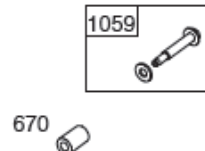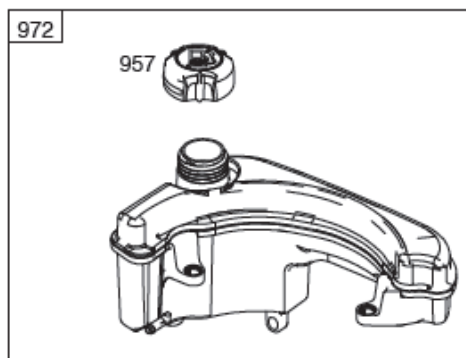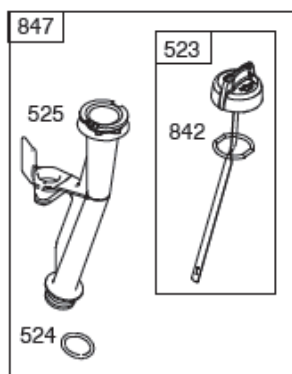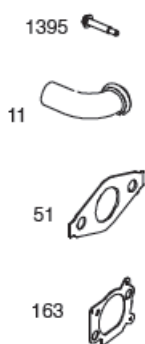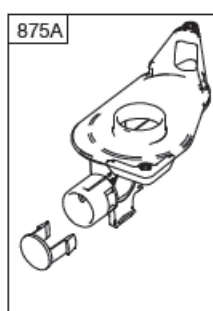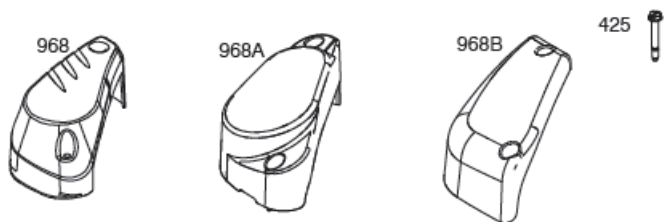        

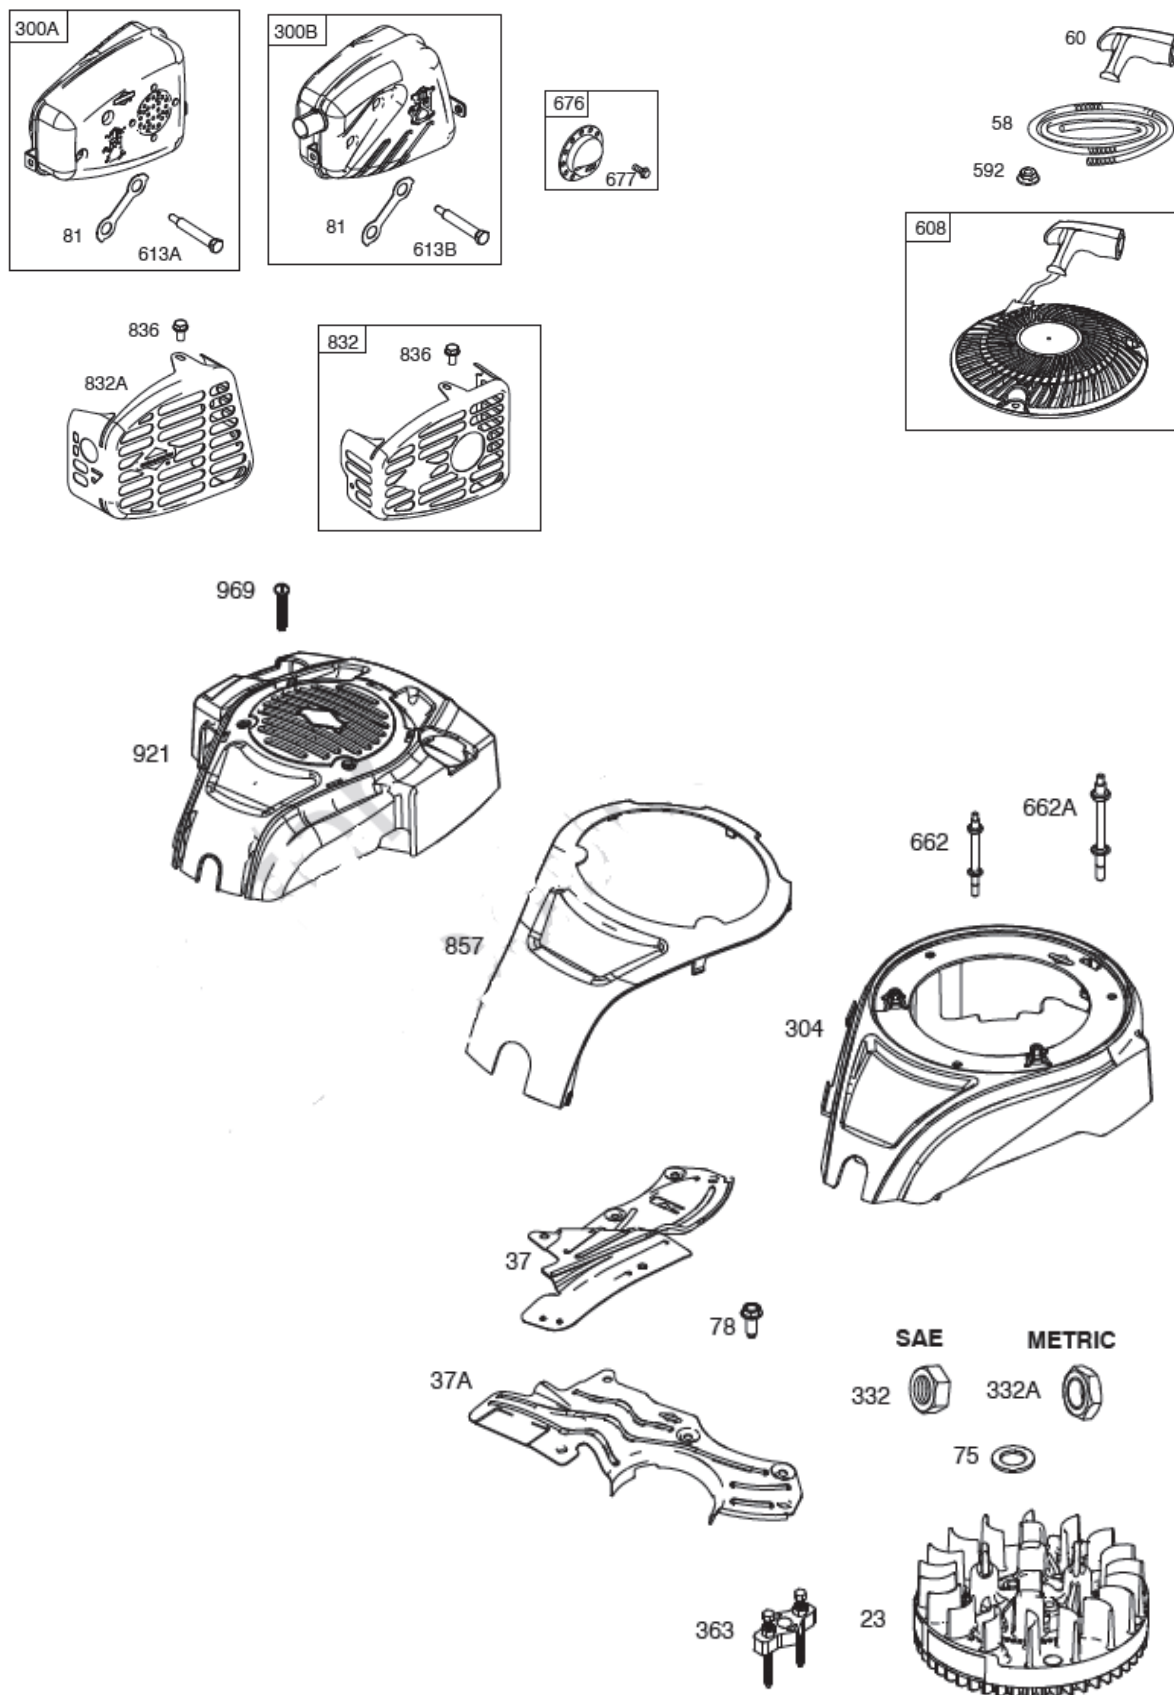 

# 100800

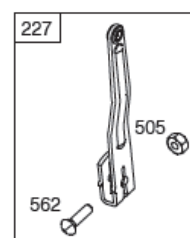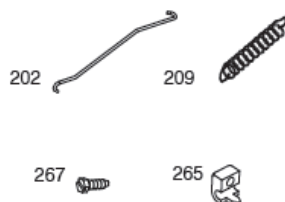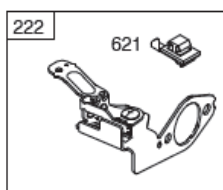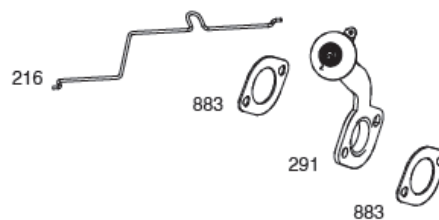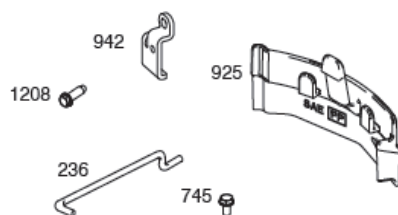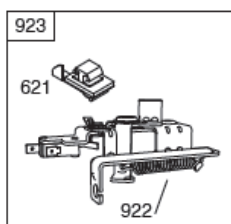       



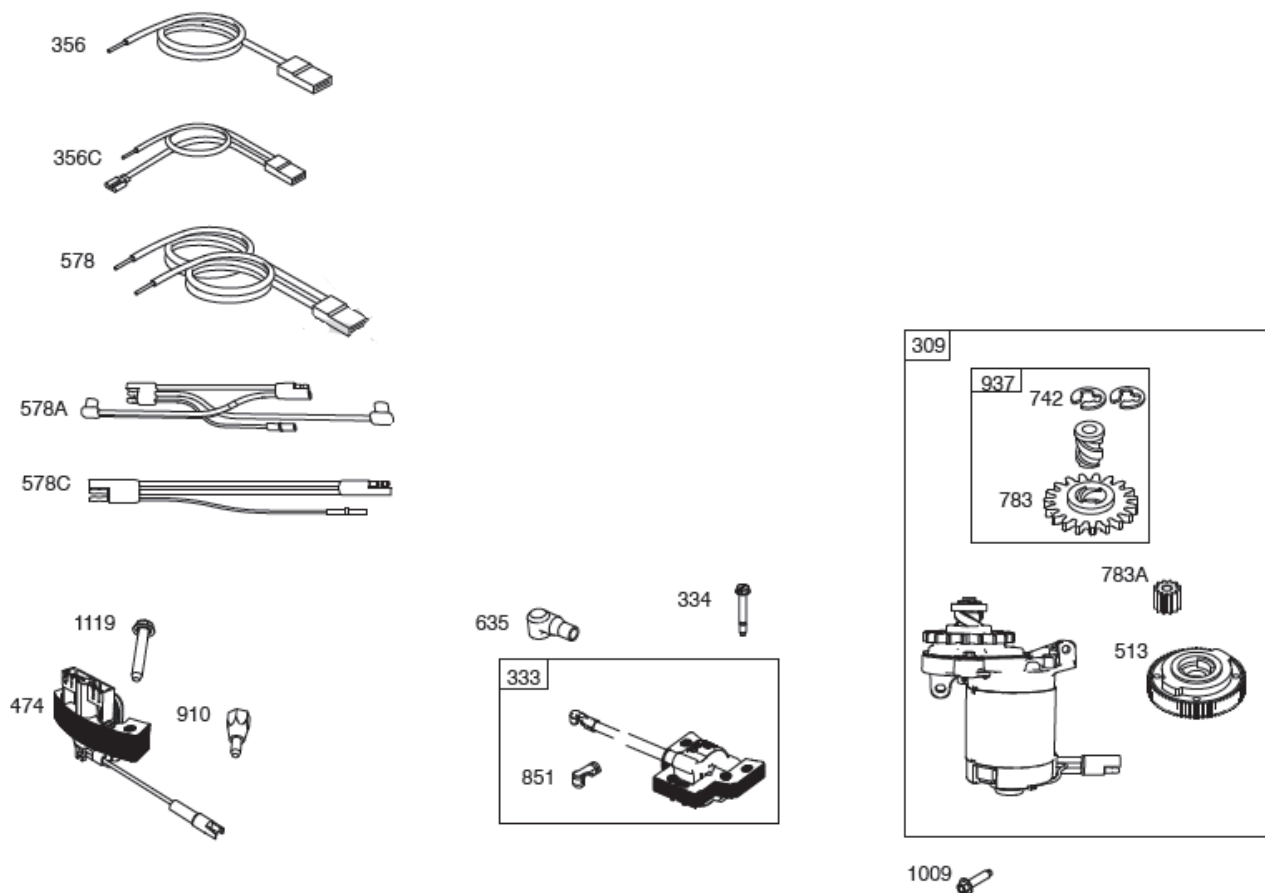 


**100800**

1036 EMISSIONS LABEL

   1058 OPERATOR'S MANUAL

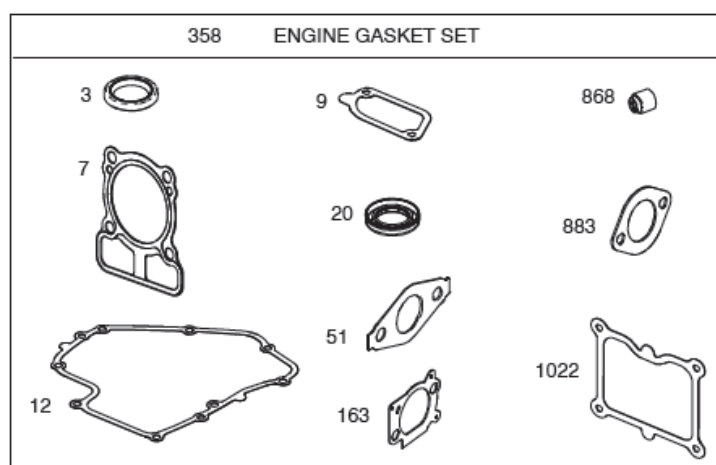

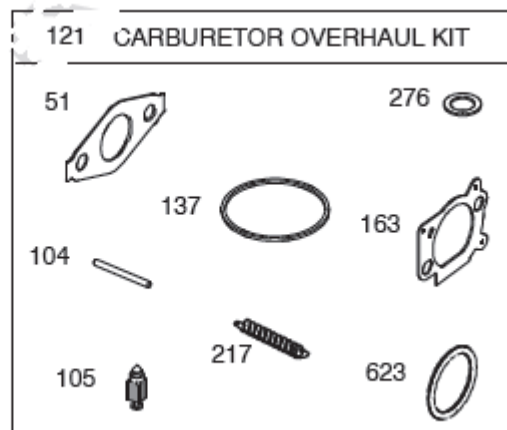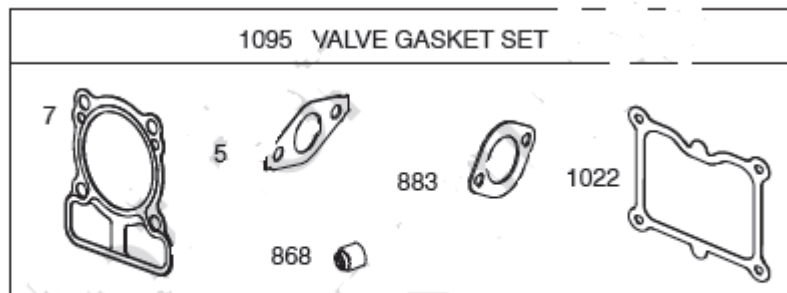

# 100800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	795396	Cylinder Assembly	24	222698S	Key-Flywheel	81	691740	Lock-Muffler Screw
2	796961	Kit-Bushing/Seal	25	793519	Piston Assembly (Standard)	104	698536	Pin-Float Hinge
3	299819S	Seal-Oil (Magnet Side)			----- Note -----	105	698537	Valve-Float Needle
4	793509	Sump-Engine		793518	Piston Assembly (.020" Oversize)	117A	793694	Jet-Main (Standard)
5	793502	Head-Cylinder				118A	793695	Jet-Main (High Altitude)
7	793455	Gasket-Cylinder Head	26	793435	Ring Set (Standard)	121	793622	Kit-Carburetor Overhaul
9	793439	Gasket-Breather			----- Note -----	122	793456	Spacer-Carburetor
11	793447	Tube-Breather		793517	Ring Set (.020" Oversize)	125A	793493	Carburetor (Ready Start System)
12	793445	Gasket-Crankcase (.015" Thick) (Standard)	27	691588	Lock-Piston Pin	133	698539	Float-Carburetor
13	793451	Screw (Cylinder Head) (M8x71.0mm Long)	28	298909	Pin-Piston (Standard)	137	698538	Gasket-Float Bowl
15	691680	Plug-Oil Drain	29	793510	Rod-Connecting	163	691894	Gasket-Air Cleaner
16	793426	Crankshaft Used on Type No(s). 0025, 0062, 0117, 0118, 0124, 0125, 0220, 2025.	32	691664	Screw (Connecting Rod) (1 3/32" Long)	187	791766	Line-Fuel (Cut to Required Length)
		----- Note -----	32A	695759	Screw (Connecting Rod) (1 1/2" Long)	202	793433	Link-Mechanical Governor
	793615	Crankshaft Used on Type No(s). 0015, 0109, 0115, 0116, 0123, 0126, 0136, 2015, 2109, 2112.	33	793505	Valve-Exhaust	209	793427	Spring-Governor Used on Type No(s). 0015, 0025, 0062, 0115, 0117, 0118, 0121, 0126, 0220, 2015, 2025.
			34	793504	Valve-Intake			
			35	793506	Spring-Valve (Intake)			
			36	793506	Spring-Valve (Exhaust)			
								----- Note -----
	793429	Crankshaft Used on Type No(s). 0110, 0111, 0120, 0121, 0134, 0137, 2110, 2111, 2114.	37	793473	Guard-Flywheel (Rewind Starter) Used on Type No(s). 0015, 0025, 0109, 0110, 0111, 0115, 0116, 0117, 0118, 0120, 0121, 0123, 0124, 0125, 0126, 0134, 0136, 0137, 2015, 2025, 2109, 2110, 2111.		793604	Spring-Governor Used on Type No(s). 0109, 0110, 0111, 0123, 0124, 0136, 0137, 2109, 2110, 2111, 2112.
20	399781S	Seal-Oil (PTO Side)					793430	Spring-Governor Used on Type No(s). 0116, 0120, 0125, 0134.
22	793450	Screw (Crankcase Cover/Sump) (40.5mm)					799301	Spring-Governor Used on Type No(s). 2114.
23	793619	Flywheel Used on Type No(s). 0015, 0025, 0115, 0117, 0118, 0120, 0121, 0123, 0124, 0125, 0126, 0134, 0136, 0137, 0220, 2015, 2025.	37A	794106	Guard-Flywheel (Electric Starter) Used on Type No(s). 0062, 0220, 2112, 2114.	216	793494	Link-Choke
		----- Note -----	40	793503	Retainer-Valve	217	797864	Spring-Choke Return
	793682	Flywheel Used on Type No(s). 0062, 0109, 0110, 0111, 0116, 2109, 2110, 2111, 2112, 2114.	51	692555	Gasket-Intake	219	793512	Gear-Governor
			58	697316	Rope-Starter (88 5/8" Long)	222	793487	Bracket-Control
			60	281434S	Grip-Starter Rope	227	793516	Lever-Governor Control
			75	691736	Washer (Flywheel)			
			78	793480	Screw (Flywheel Guard) (M8x14.1mm Long)			



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
236	691826	Link-Lockout Used on Type No(s). 0015, 0025. ----- Note ----- 796161 Link-Lockout Used on Type No(s). 0120, 0125, 0220. 796161 Link-Lockout (Used After Code Date 08061500). Used on Type No(s). 0062, 2015, 2025. 691826 Link-Lockout (Used Before Code Date 08061600). Used on Type No(s). 0062, 2015, 2025.	309	796386	Motor-Starter	445	792038	Filter-Air Cleaner Cartridge
			332	690662	Nut (Flywheel) (SAE) (.625-18 I.D.)	474	794103	Alternator
			332A	792723	Nut (Flywheel) (Metric) (M16x1.5mm I.D.)	505	793515	Nut (Governor Control Lever)
			333	793449	Armature-Magneto	513	795100	Clutch-Drive
			334	793454	Screw (Magneto Armature)	523	793475	Dipstick
			337	692051	Plug-Spark Used on Type No(s). 0015, 0121, 0137, 2015. ----- Note ----- 692720 Plug-Spark Used on Type No(s). 0025, 0062, 0109, 0110, 0111, 0115, 0116, 0117, 0118, 0120, 0123, 0124, 0125, 0126, 0134, 0136, 0220, 2025, 2109, 2110, 2111, 2112, 2114.	524	793476	Seal-Dipstick Tube
238	793535	Cap-Valve				525	793477	Tube-Dipstick
265	690798	Clamp-Casing				535	793676	Filter-Air Cleaner Foam
267	691044	Screw (Casing Clamp)				562	793514	Bolt (Governor Control Lever)
276	793627	Washer-Sealing				578	398153	Wire Assembly Used on Type No(s). 0015, 0025, 0062, 0120, 0125, 0220, 2015, 2025.
291	793498	Thermostat				578A	794104	Wire Assembly Used on Type No(s). 0062, 0220.
300A	793496	Muffler Used on Type No(s). 0015, 0025, 0111, 0115, 0116, 0117, 0118, 0120, 0121, 0124, 0125, 0134, 0136, 0137, 2015, 2025, 2111, 2114.				578C	796996	Wire Assembly Used on Type No(s). 2112.
			356	692390	Wire-Stop Used on Type No(s). 0111, 0115, 0116, 0117, 0118, 0121, 0123, 0124, 0126, 0136, 0137, 2111, 2114.	592	793481	Nut (Rewind Starter)
300B	793679	Muffler Used on Type No(s). 0062, 0109, 0110, 0123, 0126, 0220, 2109, 2110, 2112.	356C	690808	Wire-Stop Used on Type No(s). 0109, 0110, 2109, 2110, 2112.	601	791850	Hose-Clamp (Green)
304	793486	Housing-Blower (Rewind Start) Used on Type No(s). 0015, 0025, 0109, 0110, 0111, 0115, 0116, 0117, 0118, 0120, 0121, 0123, 0124, 0125, 0134, 0136, 0137, 2015, 2025, 2109, 2110, 2111. ----- Note ----- 794105 Housing- Blower (Electric Start) Used on Type No(s). 0062, 0220, 2112, 2114.	358	793623	Gasket Set-Engine	608	793470	Starter-Rewind
			363	19069	Puller-Flywheel	613A	793495	Screw (Muffler)
			365	793458	Screw (Carburetor) (27.0mm)	613B	793680	Screw (Muffler)
			371	794574	Gear-Cam	615	690340	Retainer-Governor Shaft
			383	19576S	Wrench-Spark Plug	616	793448	Crank-Governor
			404	690272	Washer (Governor Crank)	621	692310	Switch-Stop
			425	793460	Screw (Air Cleaner Cover) (36.2mm)	623	793628	Seal-O Ring (Carburetor Spacer)
						635	66538S	Boot-Spark Plug
						662	793478	Stud (Rewind Starter) (M5x32.9mm Long)
						662A	793479	Stud (Rewind Starter) (M5x49.6mm Long)





# 100800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
670	793485	Spacer-Fuel Tank	851	493880S	Terminal-Spark Plug	969	690700	Screw
676	396548	Deflector-Muffler	857	793533	Trim-Blower Housing			(Blower Housing Cover)
677	690661	Screw			Cover	972	793472	Tank-Fuel
		(Deflector) (SAE)	868	793507	Seal-Valve	975	793404	Down-Float
		----- Note -----	875A	793192	Base Air Cleaner	976	694395	Primer-Carburetor
	699203	Screw	883	793497	Gasket-Exhaust	1009	794099	Screw
		(Deflector) (Metric)	910	794101	Stud			(Starter Motor)
718	690959	Pin-Locating			(Alternator)			(M6x26mm Long)
		(Cylinder)	914	794451	Screw	1022	793437	Gasket-Rocker Cover
741	793446	Gear-Timing			(Rocker Cover)	1023	793436	Cover-Rocker
742	795094	Retainer-E Ring			(15.8mm)	1036		Label-Emissions
745	793491	Screw	921	793531	Cover-Blower Housing			(Available from
		(Brake)	922	692135	Spring-Brake			A Briggs & Stratton
		(M5x25.3mm Long)	923	796635	Brake			Authorized Dealer)
783	795099	Gear-Pinion			----- Note -----	1058	277099	Operator's Manual
783A	795096	Gear-Pinion			793490 Brake	1059	793471	Kit-Screw/Washer
787	793513	Arm-Lever			(No Longer Available)			(Fuel Tank)
793	793511	Screw/Nut Set			Used on Type No(s).	1095	793624	Gasket Set-Valve
		(Lever Arm)			0015, 0025.	1119	794100	Screw
832	793499	Guard-Muffler	925	793678	Cover-Linkage			(Alternator)
		Used on Type No(s).	937	798330	Spline-Starter			(M5x29.8mm Long)
		0015, 0025, 0111,	942	793673	Bracket-Brake	1208	699776	Screw
		0115, 0116, 0117,	955	793465	Plug-Carburetor			(Brake Bracket)
		0118, 0120, 0125,	957	692046	Cap-Fuel Tank	1263	697124	Reed-Breather
		0136, 0137, 2015,			(Black)	1264	793453	Screw
		2025, 2111, 2114.	957A	793606	Cap-Fuel Tank			(Breather Reed)
832A	793681	Guard-Muffler			(Fresh Start)			(M4x12.4mm Long)
		Used on Type No(s).	958	698183	Valve-Fuel Shut Off	1319	794467	Label-Warning
		0062, 0109, 0110,			(Plastic)			
		0123, 0126, 0134,						
		0220, 2109, 2110,						
		2112.						
			968	793428	Cover-Air Cleaner	1375	793442	Cover-Breather/Reed
					Used on Type No(s).	1376	699851	Screw
					0015, 0025, 0062,			(Breather/Reed Cover)
836	793500	Screw			0109, 0110, 0137,	1395	793459	Screw
		(Muffler Guard)			2015, 2025, 2109,			(Air Cleaner Base
		(M5x12.3mm Long)			2110, 2112, 2114.			to Carburetor)
842	691031	Seal-O Ring	968A	793432	Cover-Air Cleaner			(34 15/16" Long)
		(Dipstick)			Used on Type No(s).			
843	691884	Sleeve-Lever			0123, 0126.			
847	793474	Dipstick/Tube	968B	793532	Cover-Air Cleaner			
		Assembly			Used on Type No(s).			
					0111, 0115, 0116,			
					0117, 0118, 0120,			
					0121, 0124, 0125,			
					0134, 0136, 0220,			
					2111.			

