


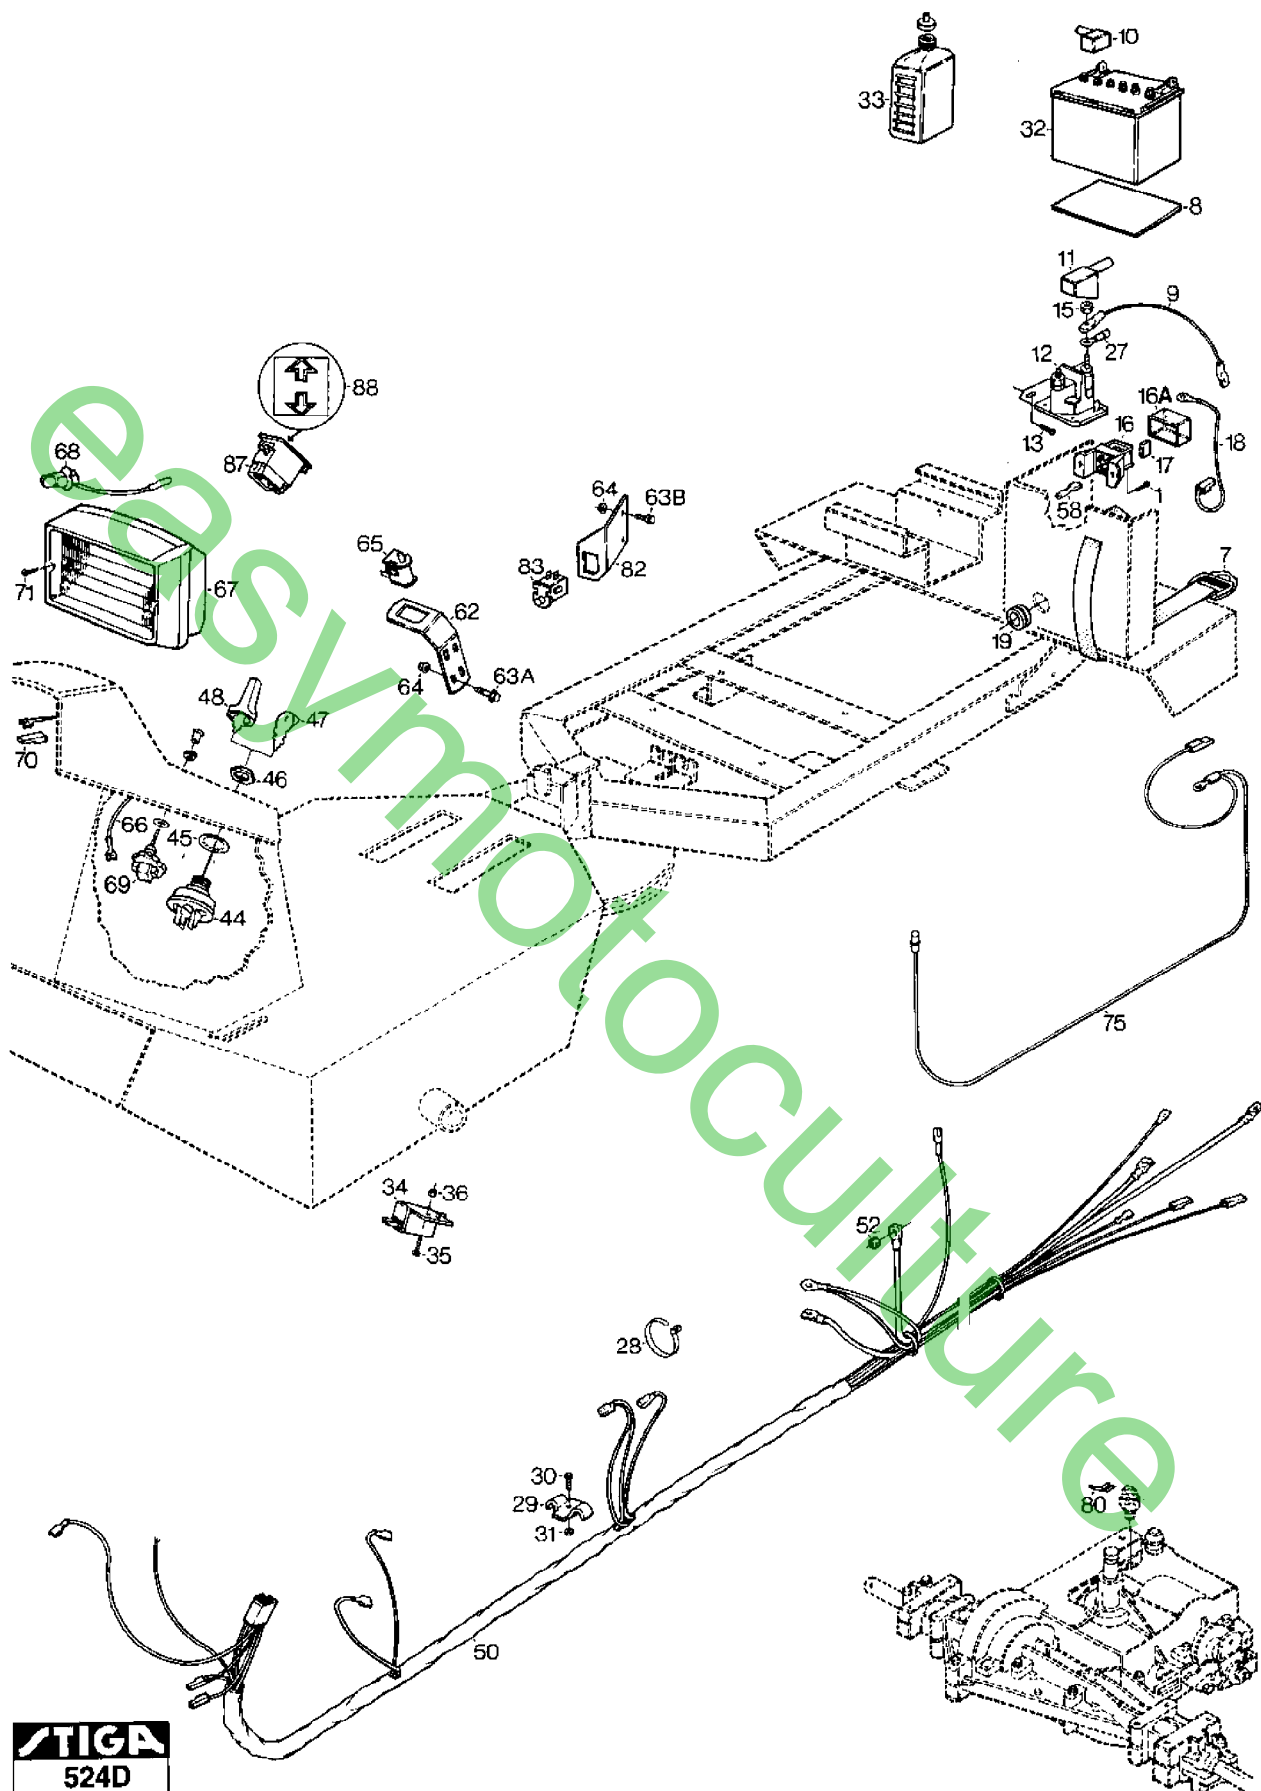


## Section: PARK ELECTRICAL SYSTEM

| Pos. | Quantity |      | Spare part No | Description | Kit          | Notes               | New               |
|------|----------|------|---------------|-------------|--------------|---------------------|-------------------|
|      | 1258     | 1358 | 1458          | 1818        |              |                     |                   |
|      | 1442     | 1443 | 1446          | 1448        |              |                     |                   |
| 1    | 2        | 2    | 2             | 2           | 9849-8006-16 | Screw               |                   |
| 7    | 1        | 1    | 1             | 1           | 9400-0064-02 | Battery holder      |                   |
| 8    | 1        | 1    | 1             | 1           | 1134-2333-02 | Battery pad         |                   |
| 9    | 1        | 1    | 1             | 1           | 1134-0234-01 | Battery cable ( + ) |                   |
| 10   | 1        | 1    | 1             | 1           | 1134-2310-01 | Guard cap           |                   |
| 11   | 1        | 1    | 1             | 1           | 1134-2948-01 | Guard cap           |                   |
| 12   | 1        | 1    | 1             | 1           | 1134-2962-01 | Solenoid assy       | Inkl pos 15       |
| 13   | 2        | 2    | 2             | 2           | 9849-8009-16 | Screw               |                   |
| 15   | 2        | 2    | 2             | 2           | 9794-5131-02 | .Nut                |                   |
| 16   | 1        | 1    | 1             | 1           | 1134-3491-01 | Fuse holder         |                   |
| 16A  | 1        | 1    | 1             | 1           | 1134-3631-01 | Cover-fuse holder   |                   |
| 17   | 2        | 2    |               |             | 1134-3496-01 | Fuse                | 10A               |
| 17   |          | 1    | 1             |             | 1134-3496-02 | Fuse-spade type     | 25A               |
| 18   | 1        | 1    |               |             | 1134-3874-01 | Cable               |                   |
| 19   | 1        | 1    | 1             | 1           | 1134-3203-05 | Grommet             |                   |
| 27   | 1        | 1    |               |             | 9400-0223-00 | Cable fitting       |                   |
| 28   | 9        | 8    | 10            | 10          | 9579-0003-00 | Cable holder        |                   |
| 29   | 1        | 1    | 1             | 1           | 1134-2782-01 | Clamp               |                   |
| 30   | 1        | 1    | 1             | 1           | 9997-0520-16 | Screw               |                   |
| 31   | 1        | 1    | 1             | 1           | 9739-0531-22 | Nut                 |                   |
| 32   | 1        | 1    | 1             | 1           | 1134-2892-01 | Battery w/o acid    |                   |
| 33   | 1        | 1    | 1             | 1           | 1134-3300-01 | Battery acid        | 2 x 0.85 liter    |
| 34   |          |      | 1             | 1           | 1134-3399-01 | Switch              |                   |
| 34   | 1        | 1    |               |             | 1134-3399-02 | Switch              |                   |
| 35   | 2        | 2    | 2             | 2           | 9997-0520-16 | Screw               |                   |
| 36   | 2        | 2    | 2             | 2           | 9747-0531-02 | Nut                 |                   |
| 44   | 1        | 1    | 1             | 1           | 1134-1814-01 | Starter switch assy |                   |
| 45   | 1        | 1    | 1             | 1           | 1134-2853-01 | .Washer             |                   |
| 46   | 1        | 1    | 1             | 1           | 1134-2852-01 | .Nut                |                   |
| 47   | 1        | 1    | 1             | 1           | 1134-2848-01 | .Ignition key       |                   |
| 48   | 1        | 1    | 1             | 1           | 1134-3368-01 | Ignition key w. gua |                   |
| 50   |          | 1    |               |             | 1134-3489-01 | Harness             | 1358              |
| 50   |          | 1    |               |             | 1134-3492-01 | Harness             | 1443              |
| 50   |          |      | 1             |             | 1134-3644-01 | Harness             | 1458              |
| 50   |          |      | 1             |             | 1134-3645-01 | Harness             | 1446              |
| 50   |          |      |               | 1           | 1134-3689-01 | Harness             | 1818,1448         |
| 50   | 1        |      |               |             | 1134-3697-01 | Harness             | 1258              |
| 50   | 1        |      |               |             | 1134-3718-01 | Harness             | 1442              |
| 52   | 1        | 1    | 1             | 1           | 9795-3531-02 | Nut                 |                   |
| 58   |          | 1    |               |             | 9400-0238-00 | Cable connection    |                   |
| 62   | 1        |      |               |             | 1134-3251-01 | Bracket             |                   |
| 62   |          |      | 1             | 1           | 1134-3251-02 | Bracket             |                   |
| 63A  | 2        | 2    | 2             | 2           | 9959-0612-16 | Screw               | 12 mm             |
| 63B  | 2        |      | 2             |             | 9959-0616-16 | Screw               | 16 mm (1442,1446) |
| 64   | 2        | 2    | 2             | 2           | 9739-0631-22 | Nut                 |                   |
| 65   |          |      | 1             | 1           | 1134-3156-02 | Switch              |                   |
| 65   | 1        |      |               |             | 1134-3156-01 | Seat switch         |                   |
| 66   |          | 1    | 1             | 1           | 1134-3732-01 | Cable               |                   |
| 67   |          | 1    | 1             | 1           | 1134-1466-01 | Headlamp assy.      |                   |
| 68   |          | 1    | 1             | 1           | 9400-0075-00 | .Glow lamp          |                   |
| 69   |          | 1    | 1             | 1           | 9400-0063-00 | Switch              |                   |
| 70   |          |      | 2             | 2           | 1134-3733-01 | Isolation bushing   |                   |
| 71   |          | 2    | 2             | 2           | 9847-7919-16 | Screw               |                   |
| 75   |          |      | 1             | 1           | 1134-3875-01 | Cable               |                   |
| 80   | 2        |      |               |             | 9400-0171-00 | Cable connection    |                   |
| 82   | 1        | 1    | 1             |             | 1134-3551-01 | Attachment          | 1442,1443,1446    |
| 83   | 1        | 1    | 1             |             | 1134-3156-01 | Seat switch         | 1442,1443,1446    |
| 87   |          |      |               | 1           | 1134-2857-01 | Switch              | Baklyft/rear lift |
| 88   |          |      |               | 1           | 1134-3329-03 | Symbol plate-blue   |                   |


PARK 12

PARK 13HST, 16HST, 18HST

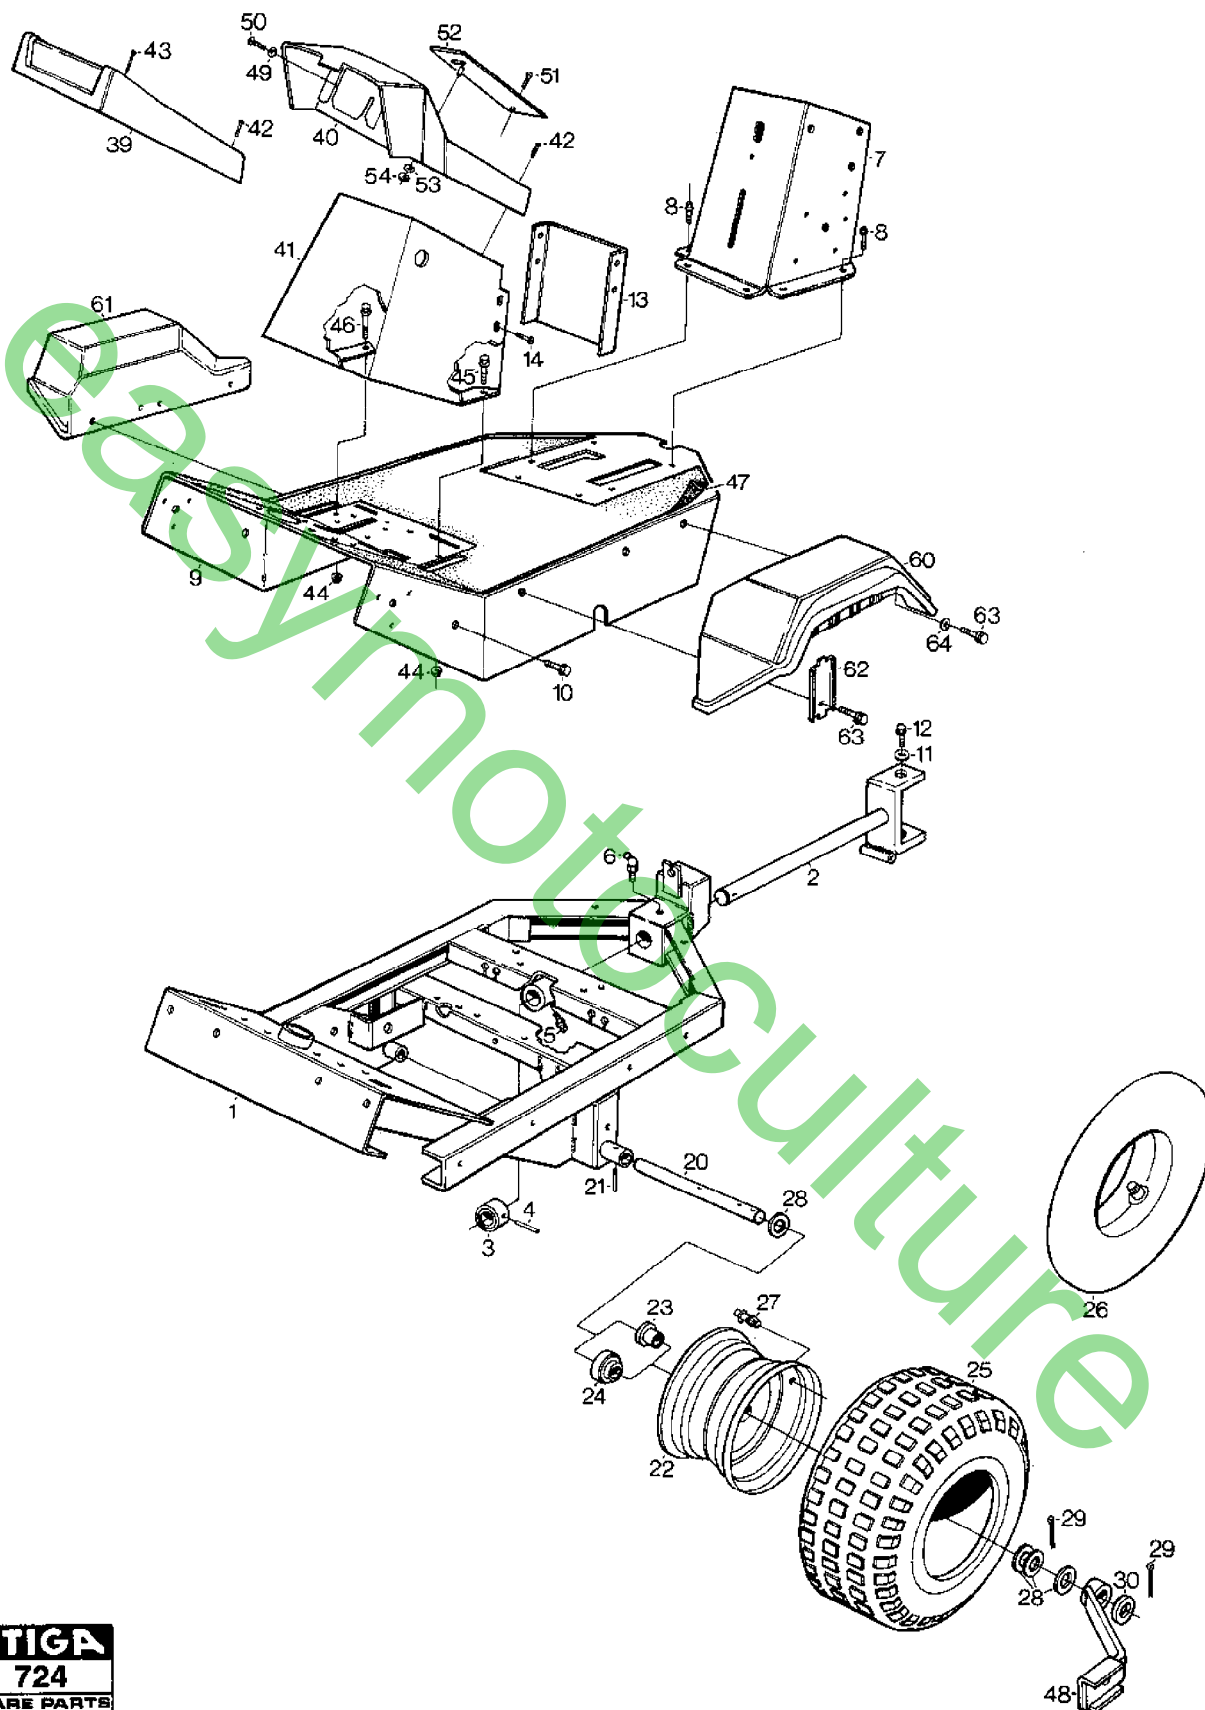


## Section: PARK FRONT FRAME

| Pos. | Quantity |      |      |      | Spare part No | Description         | Kit | Notes               | New |
|------|----------|------|------|------|---------------|---------------------|-----|---------------------|-----|
|      | 1258     | 1358 | 1458 | 1818 |               |                     |     |                     |     |
|      | 1442     | 1443 | 1446 | 1448 |               |                     |     |                     |     |
| 1    | 1        | 1    | 1    | 1    | 1134-3411-03  | Front frame         |     |                     |     |
| 2    | 1        | 1    | 1    | 1    | 1134-1757-07  | .Clevis             |     |                     |     |
| 3    | 1        | 1    | 1    | 1    | 1134-0031-00  | .Pivot shaft stop   |     |                     |     |
| 4    | 1        | 1    | 1    | 1    | 9595-0262-00  | .Locating pin       |     |                     |     |
| 5    | 1        | 1    | 1    | 1    | 9501-0500-00  | Grease joint        |     |                     |     |
| 6    | 1        | 1    | 1    | 1    | 9501-0502-00  | Grease joint        |     |                     |     |
| 7    | 1        | 1    | 1    | 1    | 1134-3800-01  | Seat bracket-yellow |     |                     |     |
| 8    | 6        | 6    | 6    | 6    | 9942-0816-16  | Screw               |     |                     |     |
| 9    | 1        | 1    | 1    | 1    | 1134-1192-22  | Floor plate         |     |                     |     |
| 10   | 4        | 4    | 4    | 4    | 9942-0816-16  | Screw               |     |                     |     |
| 11   | 1        | 1    | 1    | 1    | 9699-0035-02  | Flat washer         |     |                     |     |
| 12   | 1        | 1    | 1    | 1    | 9959-1020-16  | Screw               |     |                     |     |
| 13   |          | 1    | 1    | 1    | 1134-3363-01  | Cover               |     |                     |     |
| 14   |          | 4    | 4    | 4    | 9849-8013-16  | Screw               |     |                     |     |
| 20   | 2        | 2    | 2    | 2    | 1134-0075-01  | Front axle          |     |                     |     |
| 21   | 2        | 2    | 2    | 2    | 9595-0258-00  | Locating pin        |     |                     |     |
| 22   | 2        | 2    |      |      | 1134-2668-02  | Rim w.bearings      |     |                     |     |
| 22   |          |      | 2    | 2    | 1134-2888-02  | Rim w.ball bearings |     |                     |     |
| 23   | 1        | 1    |      |      | 1134-9026-01  | .Bearing bush kit   |     | Sats 4 st/kit of 4  |     |
| 24   |          |      | 2    | 2    | 9549-0036-00  | .Ball bearing       |     |                     |     |
| 25   | 2        | 2    | 2    | 2    | 9545-0116-00  | Tyre                |     | 16 x 7.50 - 8       |     |
| 26   |          |      |      |      | 9545-0203-00  | Inner tube          |     | Reservdel/spare par |     |
| 27   | 2        | 2    | 2    | 2    | 9545-0500-00  | Valve               |     |                     |     |
| 28   | 8        | 8    | 8    | 8    | 1134-0341-01  | Washer              |     |                     |     |
| 29   | 4        | 4    | 4    | 4    | 9599-0080-02  | Cotter pin          |     |                     |     |
| 30   | 2        | 2    | 2    | 2    | 9699-0042-02  | Flat washer         |     |                     |     |
| 39   | 1        |      |      |      | 1134-3370-01  | Panel               |     |                     |     |
| 40   |          |      | 1    | 1    | 1134-3371-05  | Panel               |     |                     |     |
| 40   |          | 1    |      |      | 1134-3761-01  | Panel               |     |                     |     |
| 41   | 1        | 1    | 1    | 1    | 1134-2833-10  | Front trim plate    |     |                     |     |
| 42   | 2        | 1    | 1    | 1    | 9849-8013-16  | Screw               |     |                     |     |
| 43   | 2        |      |      |      | 9849-8032-16  | Screw               |     |                     |     |
| 44   | 6        | 6    | 6    | 6    | 9739-0831-22  | Nut                 |     |                     |     |
| 45   | 2        | 2    | 2    | 2    | 9959-0816-16  | Screw               |     | L = 16 mm           |     |
| 46   | 4        | 4    | 4    | 4    | 9959-0820-16  | Screw               |     | L = 20 mm           |     |
| 47   |          | 1    | 1    | 1    | 1134-3546-01  | Floor mat           |     |                     |     |
| 47   | 1        |      |      |      | 1134-3535-01  | Floor mat           |     |                     |     |
| 48   | 2        | 2    | 2    | 2    | 1134-3710-01  | Attachment          |     |                     |     |
| 49   |          | 2    | 2    | 2    | 9699-0099-02  | Washer              |     |                     |     |
| 50   |          | 2    | 2    | 2    | 9849-8013-16  | Screw               |     |                     |     |
| 51   |          | 1    | 1    | 1    | 9849-8032-16  | Screw               |     |                     |     |
| 52   |          | 1    |      |      | 1134-3755-01  | Cover               |     |                     |     |
| 52   |          |      | 1    | 1    | 1134-3758-01  | Cover               |     |                     |     |
| 53   |          | 1    |      |      | 9699-0062-02  | Flat washer         |     |                     |     |
| 54   |          | 1    |      |      | 9675-0012-02  | Locking washer      |     |                     |     |
| 60   | 1        | 1    | 1    | 1    | 1134-2174-01  | Mudguard-L.H.       |     |                     |     |
| 61   | 1        | 1    | 1    | 1    | 1134-2174-02  | Mudguard-R.H.       |     |                     |     |
| 62   | 4        | 4    | 4    | 4    | 1134-0225-00  | Support plate       |     |                     |     |
| 63   | 6        | 6    | 6    | 6    | 9942-0816-16  | Screw               |     |                     |     |
| 64   | 2        | 2    | 2    | 2    | 9699-0056-02  | Flat washer         |     |                     |     |

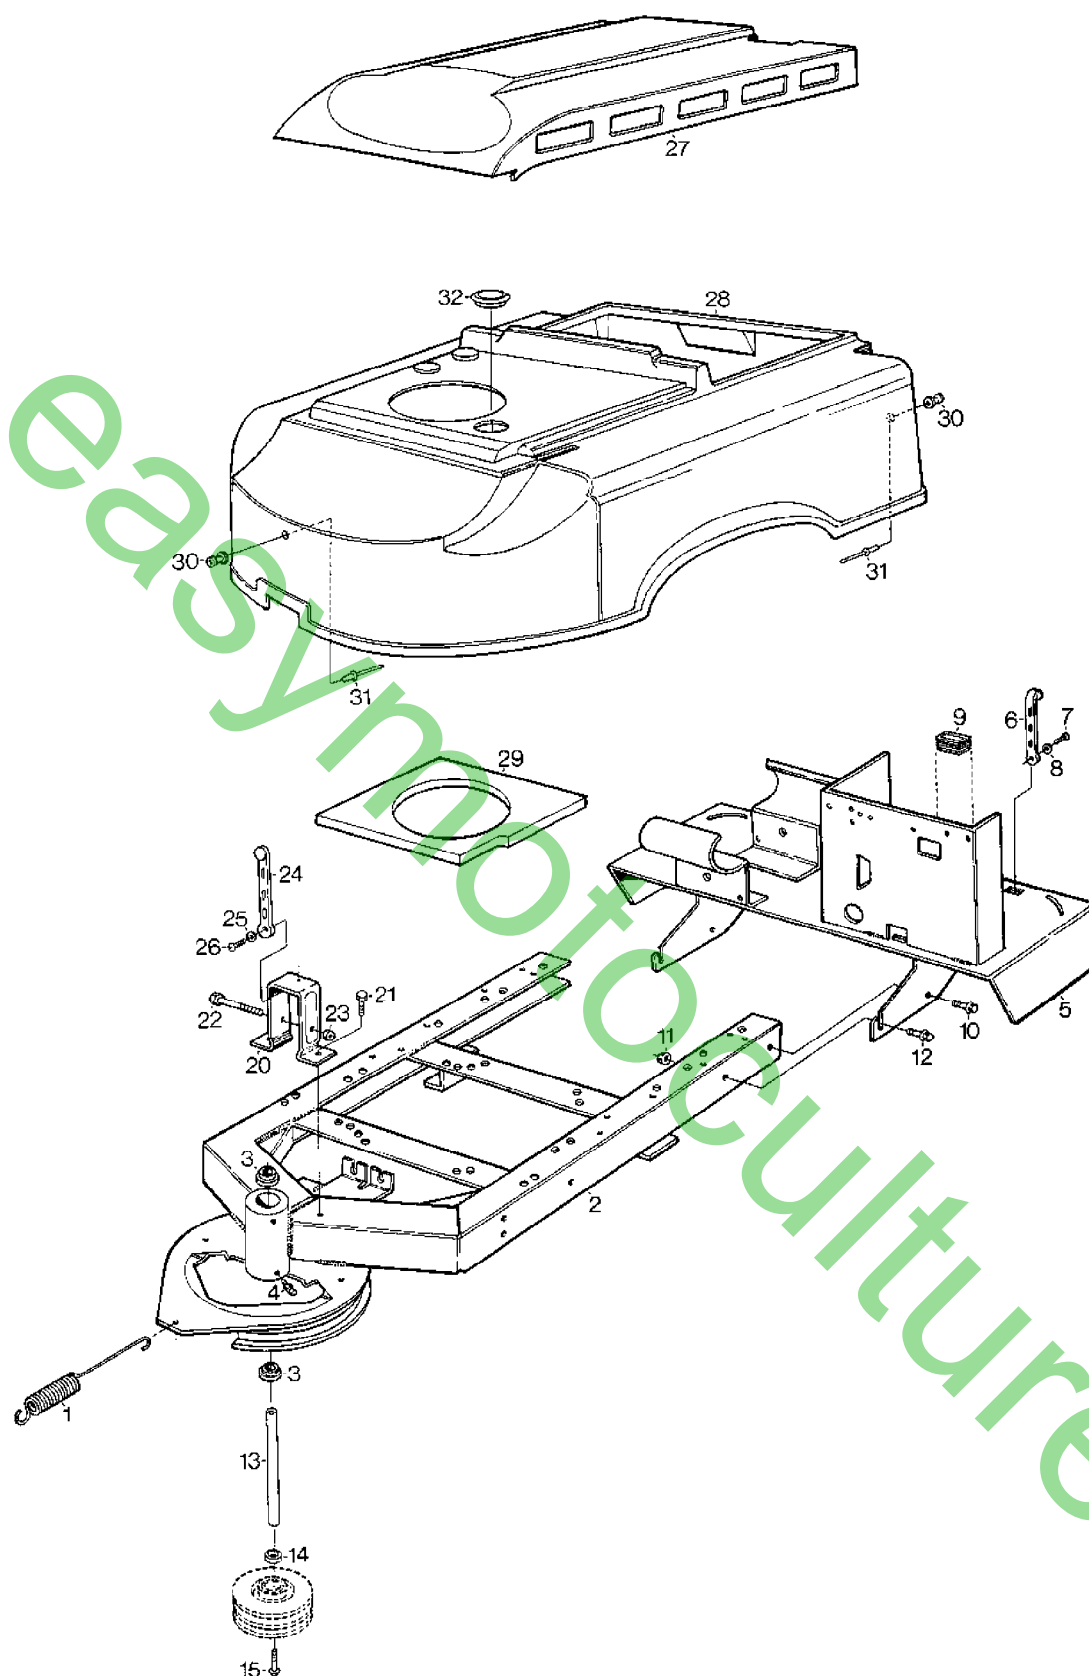

## Section: PARK REAR FRAME

| Pos. | Quantity            | Spare part No | Description | Kit | Notes                            | New                 |
|------|---------------------|---------------|-------------|-----|----------------------------------|---------------------|
|      | 1258 1358 1458 1818 |               |             |     |                                  |                     |
|      | 1442 1443 1446 1448 |               |             |     |                                  |                     |
| 1    | 1                   | 1             | 1           | 1   | 1134-2171-01 Spring              |                     |
| 2    | 1                   | 1             | 1           | 1   | 1134-3412-01 Rear frame assy     |                     |
| 3    | 2                   | 2             | 2           | 2   | 9547-0001-00 .Bearing            |                     |
| 4    | 2                   | 2             | 2           | 2   | 9501-0500-00 Grease joint        |                     |
| 5    | 1                   | 1             | 1           | 1   | 1134-2899-03 Bumper-rear         |                     |
| 6    | 1                   | 1             | 1           | 1   | 1134-9028-01 Rubber strap kit    | Sats 3 st/kit of 3  |
| 7    | 2                   | 2             | 2           | 2   | 9849-8013-16 Screw               |                     |
| 8    | 2                   | 2             | 2           | 2   | 9699-0087-02 Flat washer         |                     |
| 9    | 3                   | 3             | 3           | 3   | 1134-3540-01 Plastic plug        | 1442,1443,1446,1448 |
| 10   | 2                   | 2             | 2           | 2   | 9942-0816-16 Screw               |                     |
| 11   | 2                   | 2             | 2           | 2   | 9739-0831-22 Nut                 |                     |
| 12   | 2                   | 2             | 2           | 2   | 9959-0820-16 Screw               |                     |
| 13   | 1                   | 1             | 1           | 1   | 1134-0057-00 Centre shaft        |                     |
| 14   | 1                   | 1             | 1           | 1   | 1134-0052-00 Bearing spacer      |                     |
| 15   | 1                   | 1             | 1           | 1   | 9959-1025-16 Screw               |                     |
| 20   | 1                   | 1             | 1           | 1   | 1134-2951-01 Engine cover suppor |                     |
| 21   | 2                   | 2             | 2           | 2   | 9942-0612-16 Screw               |                     |
| 22   | 1                   | 1             | 1           | 1   | 9997-0670-12 Screw               |                     |
| 23   | 1                   | 1             | 1           | 1   | 9747-0631-02 Lock nut            |                     |
| 24   | 1                   | 1             | 1           | 1   | 1134-9028-01 Rubber strap kit    | Sats 3 st/kit of 3  |
| 25   | 1                   | 1             | 1           | 1   | 9699-0087-02 Flat washer         |                     |
| 26   | 1                   | 1             | 1           | 1   | 9849-8013-16 Screw               |                     |
| 27   | 1                   | 1             | 1           | 1   | 1134-2215-01 Engine cover        |                     |
| 28   | 1                   | 1             | 1           | 1   | 1134-3215-01 Engine hood         |                     |
| 29   | 1                   | 1             |             |     | 1134-2053-01 Foam pad            | H = 15 mm           |
| 29   |                     |               | 1           |     | 1134-2053-02 Foam pad            | H = 10 mm           |
| 29   |                     |               | 1           |     | 1134-2053-04 Foam pad            | H = 5 mm            |
| 30   | 3                   | 3             | 3           | 3   | 9405-0029-00 Knob                |                     |
| 31   | 3                   | 3             | 3           | 3   | 9632-0516-00 Pop rivet           |                     |
| 32   |                     |               | 1           | 1   | 1134-2944-01 Cover               |                     |

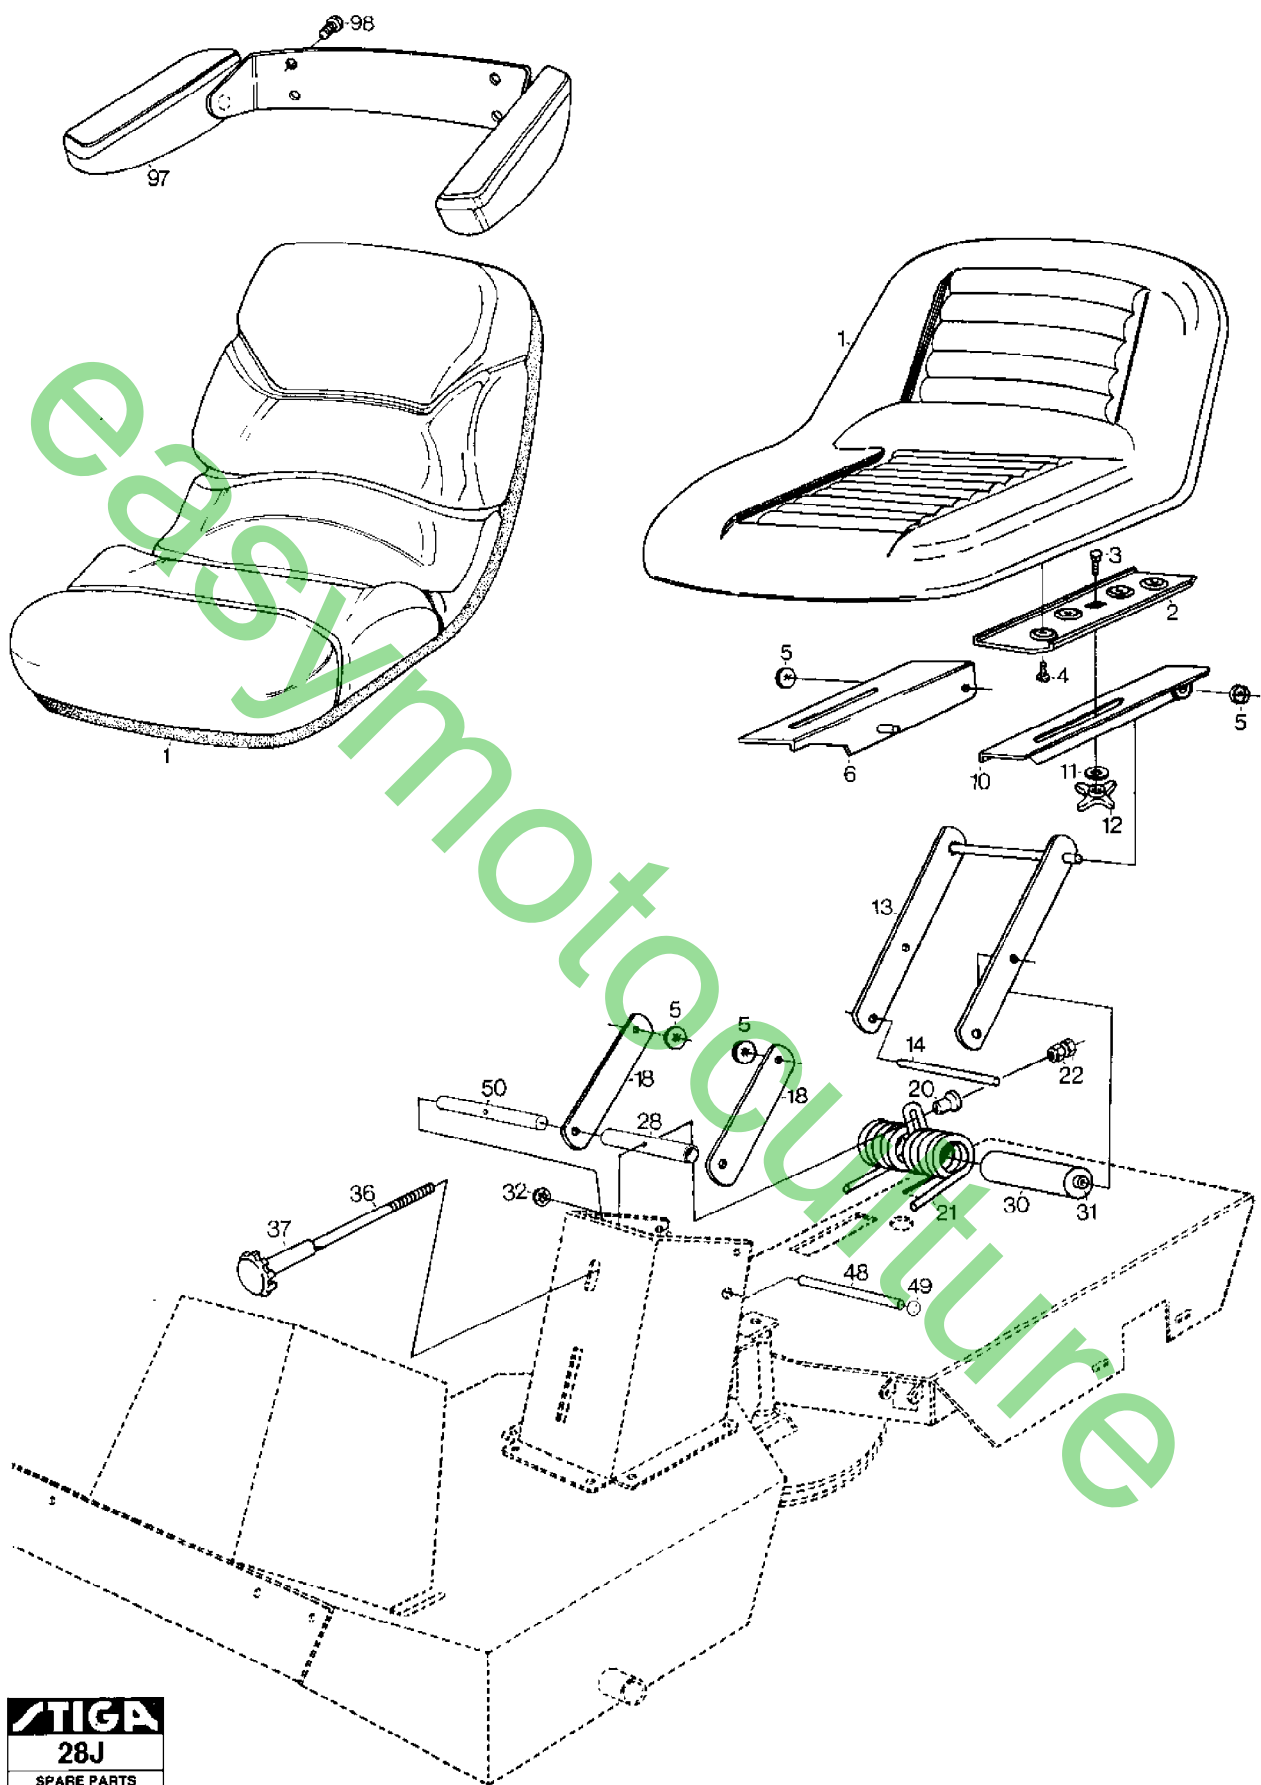


## Section: PARK SEAT

| Pos. | Quantity |      |      |      | Spare part No | Description       | Kit | Notes               | New |
|------|----------|------|------|------|---------------|-------------------|-----|---------------------|-----|
|      | 1258     | 1358 | 1458 | 1818 |               |                   |     |                     |     |
|      | 1442     | 1443 | 1446 | 1448 |               |                   |     |                     |     |
| 1    | 1        | 1    | 1    |      | 1134-2541-01  | Seat              |     | 1258,1358,1443,1446 |     |
| 1    |          |      | 1    | 1    | 1134-3286-01  | Seat              |     | 1448,1458,1818      |     |
| 1    | 1        |      |      |      | 1134-0800-06  | Seat              |     | 1442                |     |
| 2    | 2        | 2    | 2    | 2    | 1134-2961-01  | Seat adapter      |     |                     |     |
| 3    | 2        | 2    | 2    | 2    | 9898-0820-16  | Screw             |     |                     |     |
| 4    | 4        | 4    | 4    | 4    | 9988-3616-16  | Screw             |     |                     |     |
| 5    | 4        | 4    | 4    | 4    | 9675-0017-02  | Lock washer       |     |                     |     |
| 6    | 1        | 1    | 1    | 1    | 1134-3618-01  | Seat bracket-R.H. |     |                     |     |
| 10   | 1        | 1    | 1    | 1    | 1134-3618-02  | Seat bracket-L.H. |     |                     |     |
| 11   | 2        | 2    | 2    | 2    | 9699-0062-02  | Flat washer       |     |                     |     |
| 12   | 2        | 2    | 2    | 2    | 1134-1711-01  | Knob              |     |                     |     |
| 13   | 1        | 1    | 1    | 1    | 1134-1652-01  | Spring shackle    |     |                     |     |
| 14   | 1        | 1    | 1    | 1    | 1134-0050-00  | Seat rod          |     |                     |     |
| 18   | 2        | 2    | 2    | 2    | 1134-1650-01  | Tie bar           |     |                     |     |
| 20   | 1        | 1    | 1    | 1    | 1134-0493-00  | Spring nut        |     |                     |     |
| 21   | 1        | 1    | 1    | 1    | 1134-0015-00  | Seat spring       |     |                     |     |
| 22   | 2        | 2    | 2    | 2    | 9799-0831-02  | Nut               |     |                     |     |
| 28   | 1        | 1    | 1    | 1    | 1134-2846-01  | Tube              |     |                     |     |
| 30   | 1        | 1    | 1    | 1    | 1134-1883-01  | Axle              |     |                     |     |
| 31   | 1        | 1    | 1    | 1    | 1134-0022-00  | Control rod       |     |                     |     |
| 32   | 2        | 2    | 2    | 2    | 9672-0004-02  | Lock washer       |     |                     |     |
| 36   | 1        | 1    | 1    | 1    | 1134-2163-01  | Rod               |     |                     |     |
| 37   | 1        | 1    | 1    | 1    | 1134-2166-01  | Spacer            |     |                     |     |
| 48   | 1        | 1    | 1    | 1    | 1134-2454-01  | Shaft             |     |                     |     |
| 49   | 2        | 2    | 2    | 2    | 9672-0006-02  | Lock washer       |     |                     |     |
| 50   | 1        | 1    | 1    | 1    | 1134-2847-01  | Shaft             |     |                     |     |
| 97   |          |      |      | 1    | ..13-1962-11  | Arm rest          |     |                     |     |
| 98   |          |      |      | 2    | 9988-3719-16  | .Screw            |     | 3/8"                |     |




## Section: PARK STEERING

| Pos. | Quantity | Spare part No | Description  | Kit                 | Notes              | New |
|------|----------|---------------|--------------|---------------------|--------------------|-----|
| 1258 | 1358     | 1458          | 1818         |                     |                    |     |
| 1442 | 1443     | 1446          | 1448         |                     |                    |     |
| 2    | 2        | 2             | 1134-9025-01 | Steering pulley-kit | Sats 2 st/kit of 2 |     |
| 3    | 3        | 3             | 1134-0041-01 | Bushing             |                    |     |
| 4    | 2        | 2             | 1134-3022-01 | Cable holder        |                    |     |
| 6    | 3        | 3             | 9997-1030-16 | Screw               |                    |     |
| 7    | 3        | 3             | 9739-1031-22 | Nut                 |                    |     |
| 8    | 5        | 5             | 9699-0035-02 | Flat washer         |                    |     |
| 9    | 4        | 4             | 1134-2816-01 | Sprocket            |                    |     |
| 11   | 4        | 4             | 1134-0041-02 | Idler wheel bush    |                    |     |
| 12   | 2        | 2             | 9997-1040-12 | Screw               |                    |     |
| 13   | 2        | 2             | 9897-1040-12 | Screw               |                    |     |
| 14   | 4        | 4             | 9739-1031-22 | Nut                 |                    |     |
| 15   | 1        | 1             | 1134-2820-01 | Chain w/o lock      |                    |     |
| 16   | 2        | 2             | 1134-2824-01 | Chain lock          |                    |     |
| 19   | 1        | 1             | 1134-2817-01 | Steering cable-LH   | L = 939 mm         |     |
| 20   | 1        | 1             | 1134-2817-02 | Steering cable-RH   | L = 990 mm         |     |
| 21   | 2        | 2             | 1134-2818-01 | Spring              |                    |     |
| 22   | 2        | 2             | 9699-0090-02 | Flat washer         |                    |     |
| 23   | 2        | 2             | 9747-0831-02 | Lock nut            |                    |     |
| 24   | 1        | 1             | 1134-1966-03 | Steering wheel      |                    |     |
| 25   | 1        | 1             | 9595-0262-00 | Locating pin        |                    |     |
| 26   | 1        | 1             | 9699-0103-02 | Flat washer         | 0.5 mm             |     |
| 26   | 1        | 1             | 9699-0114-02 | Flat washer         | 1.0 mm             |     |
| 29   | 1        | 1             | 1134-1305-03 | Steering column-low |                    |     |
| 29   |          | 1             | 1134-3085-01 | Steering column-low |                    |     |
| 30   | 2        | 2             | 1134-1901-01 | Bearing             |                    |     |
| 30   |          | 2             | 9549-0017-00 | Ball bearing        |                    |     |
| 31   | 2        | 2             | 9942-0612-16 | Screw               |                    |     |
| 32   | 1        | 1             | 1134-2821-01 | Steering rod        |                    |     |
| 32   |          | 1             | 1134-3084-01 | Steering rod        |                    |     |
| 33   |          | 1             | 1134-2837-02 | Spacer              |                    |     |
| 33   | 1        | 1             | 1134-2837-01 | Spacer              |                    |     |
| 34   |          | 1             | 9695-0011-00 | Washer              |                    |     |
| 42   |          | 3             | 1134-3547-01 | Sprocket            |                    |     |
| 43   |          | 2             | 1134-2820-02 | Chain               | 41 länk/link       |     |
| 44   |          | 1             | 1134-2820-02 | Chain               | 41 länk/link       |     |
| 45   |          | 1             | 1134-2820-04 | Chain               | 45 länk/link       |     |
| 46   |          | 2             | 1134-3550-01 | End nipple          |                    |     |
| 47   |          | 4             | 1134-3565-01 | Connection nipple   |                    |     |

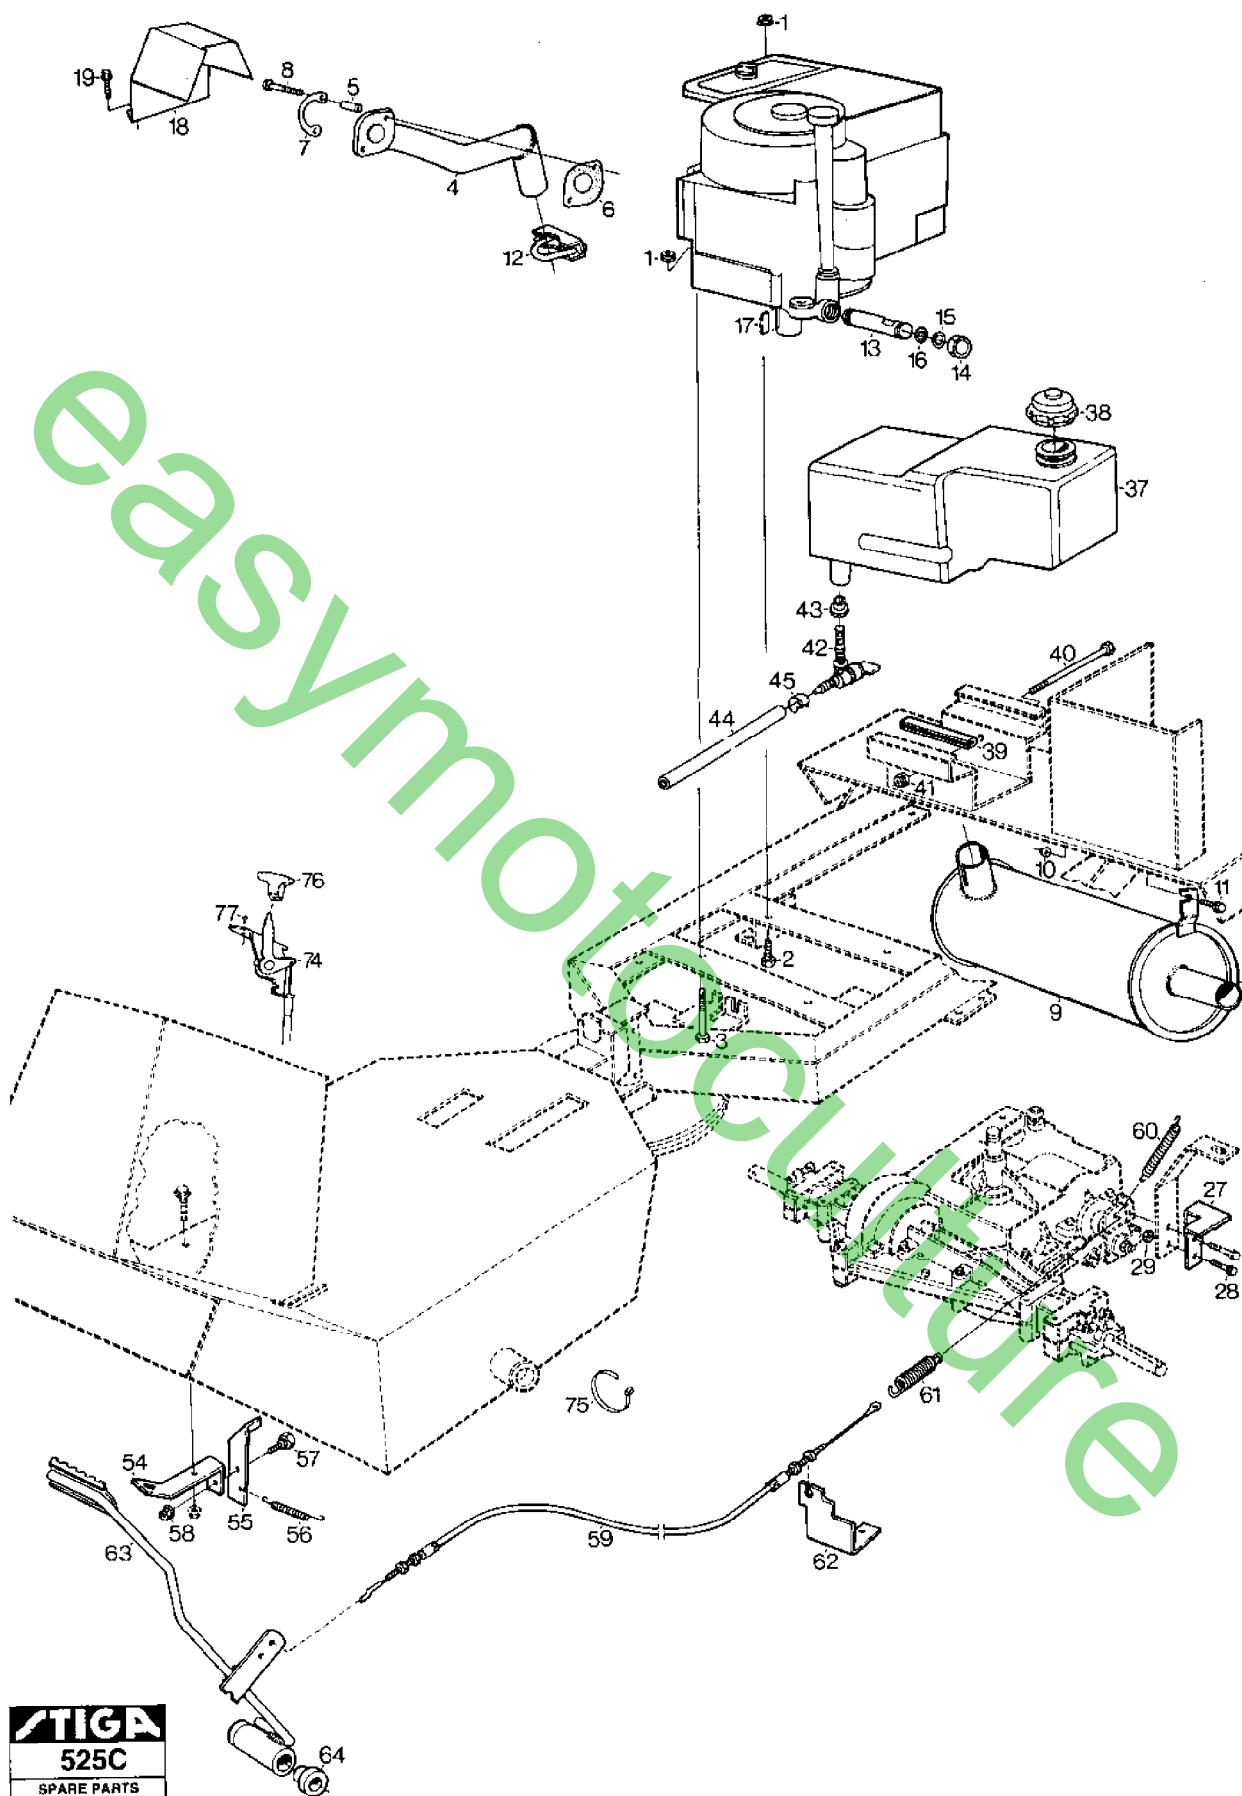


## Section: PARK CLASSIC ENGINE BRAKE

| Pos. | Quantity | Spare part No | Description         | Kit | Notes              | New |
|------|----------|---------------|---------------------|-----|--------------------|-----|
|      | 1258     |               |                     |     |                    |     |
|      | 1442     |               |                     |     |                    |     |
| 1    | 4        | 9739-0831-22  | Nut                 |     |                    |     |
| 2    | 3        | 9997-0840-16  | Screw               |     | L = 40 mm          |     |
| 3    | 1        | 9997-0870-16  | Screw               |     | L = 70 mm          |     |
| 4    | 1        | 1134-3738-01  | Exhaust pipe        |     |                    |     |
| 5    | 2        | 1134-1565-01  | Spacer              |     |                    |     |
| 6    | 1        | 1134-0433-00  | Muffler gasket      |     |                    |     |
| 7    | 1        | 1134-2462-01  | Lock                |     |                    |     |
| 8    | 2        | 9988-3651-12  | Screw               |     |                    |     |
| 9    | 1        | 1134-3244-01  | Silencer            |     |                    |     |
| 10   | 1        | 9739-0831-22  | Nut                 |     |                    |     |
| 11   | 1        | 9959-0816-16  | Screw               |     |                    |     |
| 12   | 1        | 9578-0011-00  | Clamp               |     |                    |     |
| 13   | 1        | 1134-2212-01  | Oil drain pipe assy |     |                    |     |
| 14   | 1        | 1134-0995-01  | .Plug               |     |                    |     |
| 15   | 1        | 9404-0020-00  | .O-ring             |     |                    |     |
| 16   | 1        | 1134-0997-01  | .Fibre gasket       |     |                    |     |
| 17   | 1        | 9600-0250-00  | Key                 |     |                    |     |
| 18   | 1        | 1134-2733-01  | Heat protection     |     |                    |     |
| 19   | 2        | 9942-0612-16  | Screw               |     |                    |     |
| 27   | 1        | 1134-2045-01  | Brake stop          |     |                    |     |
| 28   | 1        | 9959-0816-16  | Screw               |     |                    |     |
| 29   | 1        | 9739-0831-22  | Nut                 |     |                    |     |
| 37   | 1        | 1134-3593-01  | Fuel tank           |     |                    |     |
| 38   | 1        | 1134-2877-02  | Fuel tank cap       |     |                    |     |
| 39   | 2        | 1134-2941-01  | Protection strip    |     |                    |     |
| 40   | 1        | 9997-0812-02  | Screw               |     |                    |     |
| 41   | 1        | 9747-0831-02  | Lock nut            |     |                    |     |
| 42   | 1        | 1134-3224-01  | Fuel shut-off valve |     |                    |     |
| 43   | 1        | 1134-3225-01  | Grommet             |     |                    |     |
| 44   | 1        | 1134-2975-06  | Fuel hose           |     |                    |     |
| 45   | 2        | 1134-3499-01  | Hose clamp          |     |                    |     |
| 54   | 1        | 1134-1184-02  | Bracket             |     |                    |     |
| 55   | 1        | 1134-2151-01  | Stop                |     |                    |     |
| 56   | 1        | 1131-1497-01  | Spring              |     |                    |     |
| 57   | 1        | 1134-0245-00  | Shoulder screw      |     |                    |     |
| 58   | 1        | 9739-0831-22  | Nut                 |     |                    |     |
| 59   | 1        | 1134-3410-02  | Brake cable         |     |                    |     |
| 60   | 1        | 1131-1506-00  | Spring              |     |                    |     |
| 61   | 1        | 1134-3280-01  | Spring              |     |                    |     |
| 62   | 1        | 1134-3403-01  | Wire holder         |     |                    |     |
| 63   | 1        | 1134-2170-03  | Pedal assy          |     |                    |     |
| 64   | 1        | 1134-9024-01  | .Bearing kit        |     | Sats 4 st/kit of 4 |     |
| 74   | 1        | 1134-1975-11  | Gas control         |     |                    |     |
| 75   | 1        | 9579-0008-00  | Cable holder        |     |                    |     |
| 76   | 1        | 9403-0035-10  | Handle              |     |                    |     |
| 77   | 2        | 9849-8013-16  | Screw               |     |                    |     |

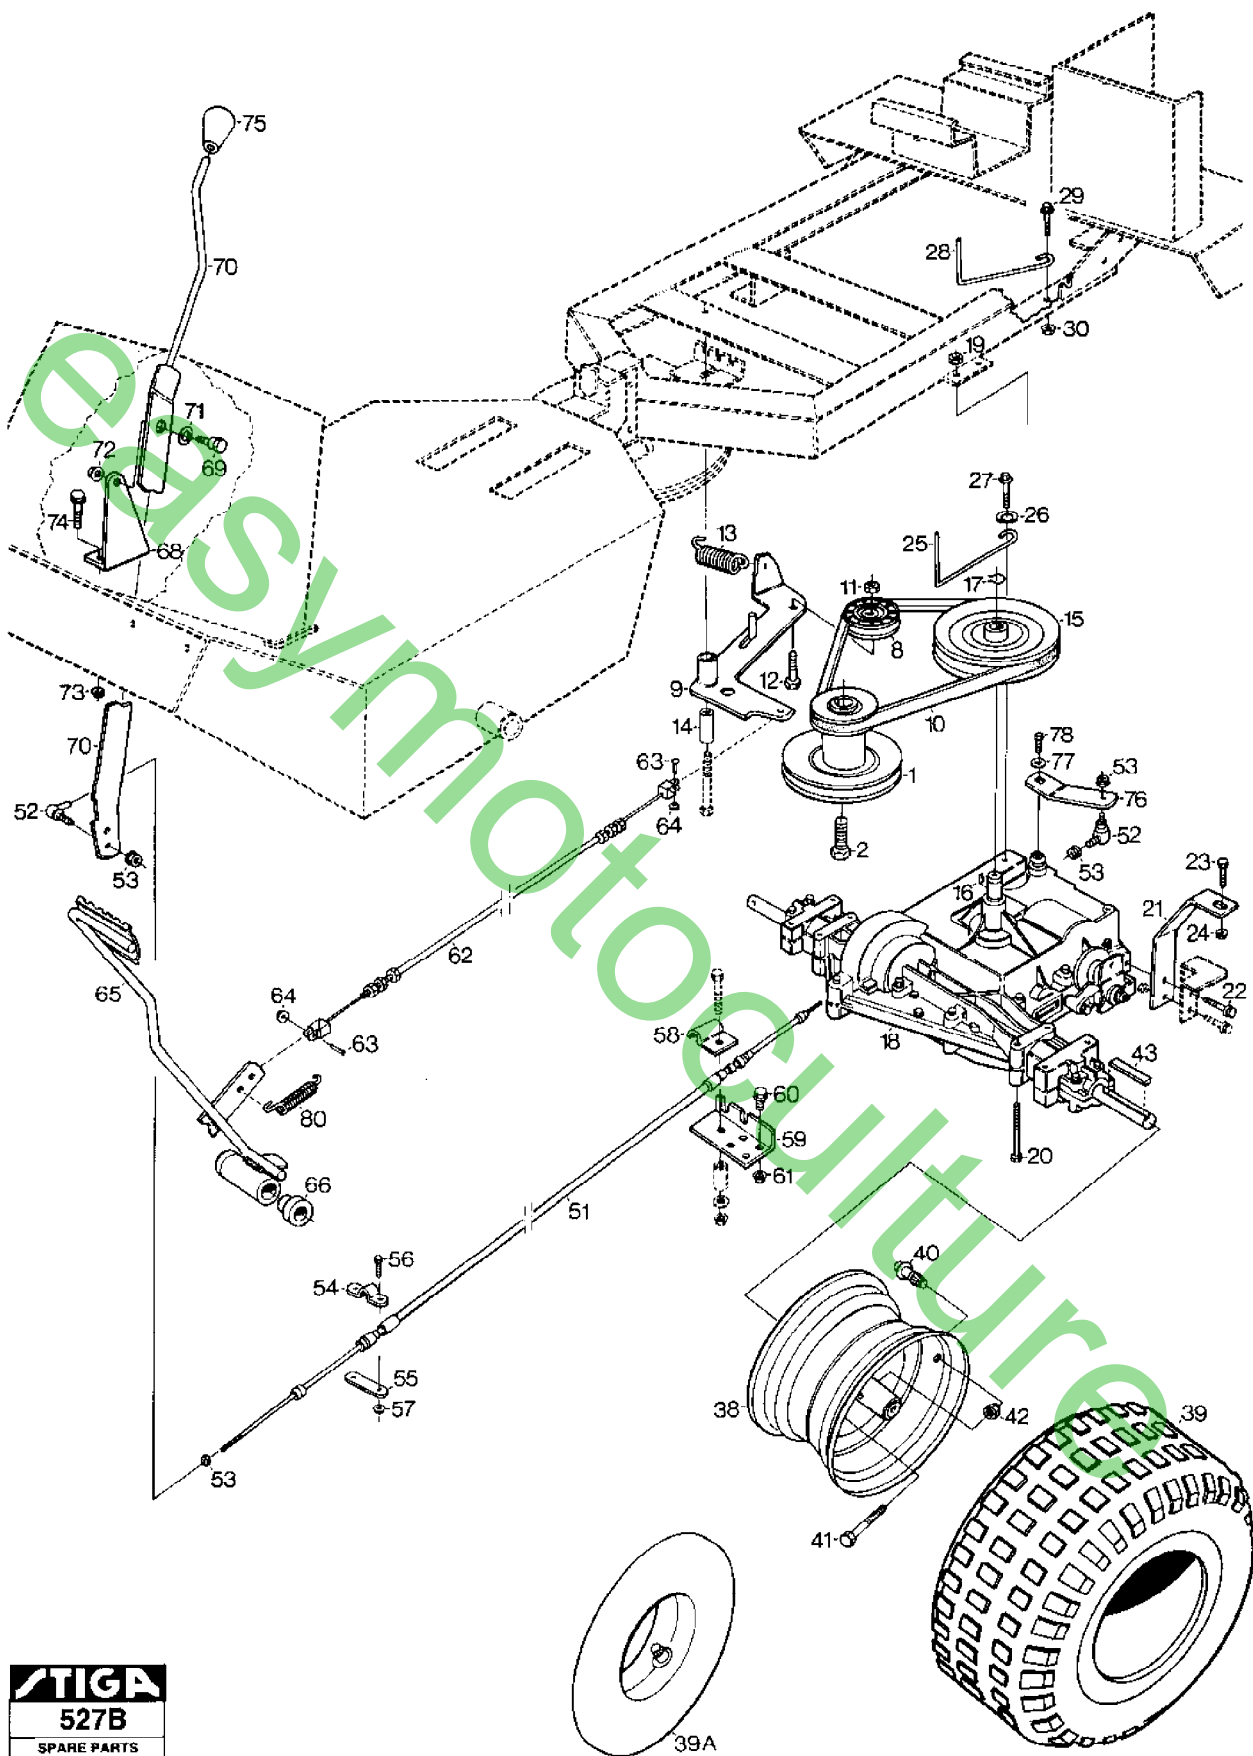

## Section: PARK CLASSIC TRANSMISSION

| Pos.      | Quantity | Spare part No | Description  | Kit                 | Notes               | New |
|-----------|----------|---------------|--------------|---------------------|---------------------|-----|
| 1258 1442 |          |               |              |                     |                     |     |
| 1         | 1        | 1             | 1134-2020-01 | Engine pulley       |                     |     |
| 2         | 1        | 1             | 9987-5338-12 | Screw               |                     |     |
| 8         | 1        | 1             | 1134-9027-01 | Tension roller      |                     |     |
| 9         | 1        | 1             | 1134-2015-03 | Tension arm         |                     |     |
| 10        | 1        | 1             | 1134-9035-01 | V-belt              | = 9585-0078-00      |     |
| 11        | 1        | 1             | 9799-1031-02 | Nut                 |                     |     |
| 12        | 1        | 1             | 9997-1030-16 | Screw               |                     |     |
| 13        | 1        | 1             | 1134-0645-00 | Spring              |                     |     |
| 14        | 1        | 1             | 1134-1565-01 | Spacer              |                     |     |
| 15        | 1        | 1             | 1134-1849-01 | Belt pulley         |                     |     |
| 16        | 1        | 1             | 9600-0050-00 | Key                 |                     |     |
| 17        | 1        | 1             | 9650-0016-04 | Lock ring           |                     |     |
| 18        | 1        | 1             | 1134-3716-01 | Transaxle assy      | Peerless MST205-529 |     |
| 18        |          | 1             | 1134-3716-02 | Transaxle assy      |                     |     |
| 19        | 4        | 4             | 9739-0831-22 | Nut                 |                     |     |
| 20        | 4        | 4             | 9997-0870-16 | Screw               |                     |     |
| 21        | 1        | 1             | 1134-2986-01 | Bracket             |                     |     |
| 22        | 1        | 1             | 9942-0820-16 | Screw               |                     |     |
| 23        | 1        | 1             | 9959-0820-16 | Screw               |                     |     |
| 24        | 1        | 1             | 9739-0831-22 | Nut                 |                     |     |
| 25        | 1        | 1             | 1134-3289-01 | Belt guide          |                     |     |
| 26        | 1        | 1             | 9699-0056-02 | Flat washer         |                     |     |
| 27        | 1        | 1             | 9942-0820-16 | Screw               |                     |     |
| 28        | 1        | 1             | 1134-3289-01 | Belt guide          |                     |     |
| 29        | 1        | 1             | 9959-0820-16 | Screw               |                     |     |
| 30        | 1        | 1             | 9739-0831-22 | Nut                 |                     |     |
| 38        | 2        | 2             | 1134-3175-02 | Rim-rear            |                     |     |
| 39        | 2        | 2             | 9545-0116-00 | Tyre                | 16 x 7.50 - 8       |     |
| 39A       |          |               | 9545-0203-00 | Inner tube          | Reservdel/spare par |     |
| 40        | 2        | 2             | 9545-0500-00 | Valve               |                     |     |
| 41        | 2        | 2             | 9997-0840-16 | Screw               |                     |     |
| 42        | 2        | 2             | 9747-0831-02 | Lock nut            |                     |     |
| 43        | 2        | 2             | 1134-2471-01 | Key                 |                     |     |
| 51        | 1        | 1             | 1134-2031-02 | Gear shifter cable  |                     |     |
| 52        | 2        | 2             | 9570-0001-00 | Elbow link          |                     |     |
| 53        | 4        | 4             | 9739-0531-22 | Nut                 |                     |     |
| 54        | 1        | 1             | 1134-0266-00 | Attaching clamp     |                     |     |
| 55        | 1        | 1             | 1134-0267-00 | Clamp plate         |                     |     |
| 56        | 2        | 2             | 9997-0520-16 | Screw               |                     |     |
| 57        | 2        | 2             | 9739-0531-22 | Nut                 |                     |     |
| 58        | 1        | 1             | 1134-2021-01 | Clamp               |                     |     |
| 59        | 1        | 1             | 1134-3400-01 | Angle plate         |                     |     |
| 60        | 2        | 2             | 9959-0816-16 | Screw               |                     |     |
| 61        | 2        | 2             | 9739-0831-22 | Nut                 |                     |     |
| 62        | 1        | 1             | 1134-2030-04 | Clutch cable        |                     |     |
| 63        | 2        | 2             | 9646-0036-22 | Rivet               |                     |     |
| 64        | 2        | 2             | 9675-0008-02 | Locking washer      |                     |     |
| 65        | 1        | 1             | 1134-3450-02 | Pedal assy          |                     |     |
| 66        | 1        | 1             | 1134-9024-01 | .Bearing kit        | Sats 4 st/kit of 4  |     |
| 68        | 1        | 1             | 1134-0220-01 | Gear shifter bracke |                     |     |
| 69        | 1        | 1             | 1134-0240-00 | Shoulder screw      |                     |     |
| 70        | 1        | 1             | 1134-2328-01 | Gear lever          |                     |     |
| 71        | 1        | 1             | 9696-0013-01 | Bowed washer        |                     |     |
| 72        | 1        | 1             | 9739-0831-22 | Nut                 |                     |     |
| 73        | 2        | 2             | 9739-0831-22 | Nut                 |                     |     |
| 74        | 2        | 2             | 9959-0816-16 | Screw               |                     |     |
| 75        | 1        | 1             | 1134-2551-01 | Knob                |                     |     |
| 76        | 1        | 1             | 1134-3279-01 | Gear shifter arm    |                     |     |
| 77        | 1        | 1             | 9699-0060-02 | Flat washer         |                     |     |
| 78        | 1        | 1             | 9987-5016-16 | Screw               |                     |     |
| 80        | 1        | 1             | 1131-1506-00 | Spring              |                     |     |

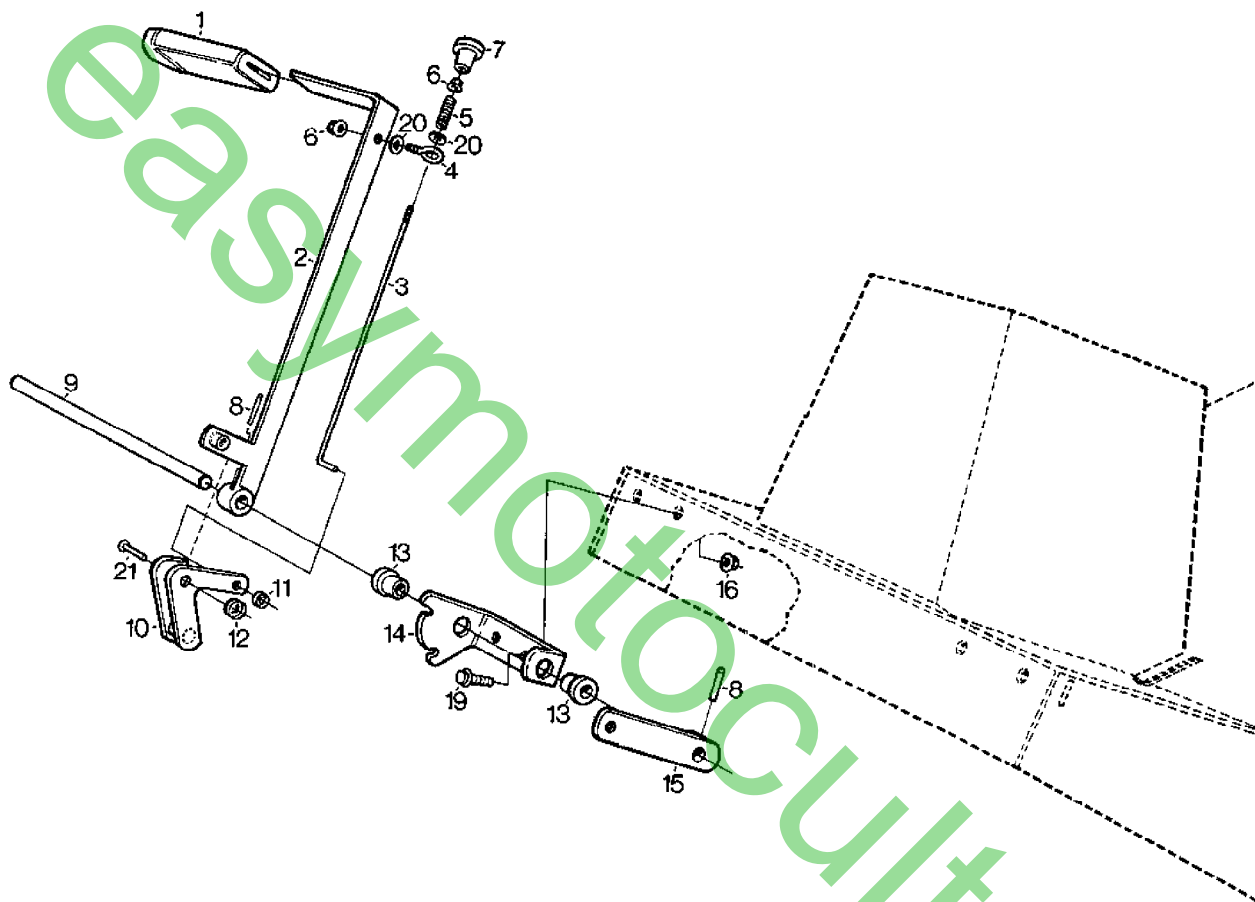


## Section: PARK CLASSIC- PRESIDENT-PRO 16 MANUAL LIFTING DEVICE

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|-------------|-----|-------|-----|
|------|----------|---------------|-------------|-----|-------|-----|


|      |      |      |  |  |  |  |
|------|------|------|--|--|--|--|
| 1258 | 1358 | 1458 |  |  |  |  |
| 1442 | 1443 | 1446 |  |  |  |  |

|    |   |   |   |              |                     |  |
|----|---|---|---|--------------|---------------------|--|
| 0  | 1 | 1 | 1 | 1134-0410-08 | Lifting device assy |  |
| 1  | 1 | 1 | 1 | 9403-0110-01 | .Handle             |  |
| 2  | 1 | 1 | 1 | 1134-0859-03 | .Lift lever         |  |
| 3  | 1 | 1 | 1 | 1134-0858-00 | .Push rod           |  |
| 4  | 1 | 1 | 1 | 1134-1889-01 | .Eyebolt            |  |
| 5  | 1 | 1 | 1 | 1111-0053-00 | .Compression spring |  |
| 6  | 2 | 2 | 2 | 9739-0631-22 | .Nut                |  |
| 7  | 1 | 1 | 1 | 1134-0583-00 | .Plastic knob       |  |
| 8  | 2 | 2 | 2 | 9595-0258-00 | .Locating pin       |  |
| 9  | 1 | 1 | 1 | 1134-1884-01 | .Lifting shaft      |  |
| 10 | 1 | 1 | 1 | 1134-2911-01 | .Locking pawl       |  |
| 11 | 1 | 1 | 1 | 9675-0008-02 | .Locking washer     |  |
| 12 | 1 | 1 | 1 | 9675-0012-02 | .Locking washer     |  |
| 13 | 2 | 2 | 2 | 1134-2684-01 | .Bearing            |  |
| 14 | 1 | 1 | 1 | 1134-0536-00 | .Lift quadrant      |  |
| 15 | 1 | 1 | 1 | 1134-0857-00 | .Trippet            |  |
| 16 | 2 | 2 | 2 | 9739-1031-22 | Nut                 |  |
| 19 | 2 | 2 | 2 | 9959-1020-16 | .Screw              |  |
| 20 | 2 | 2 | 2 | 9699-0025-02 | .Washer             |  |
| 21 | 1 | 1 | 1 | 9646-0099-22 | .Rivet              |  |

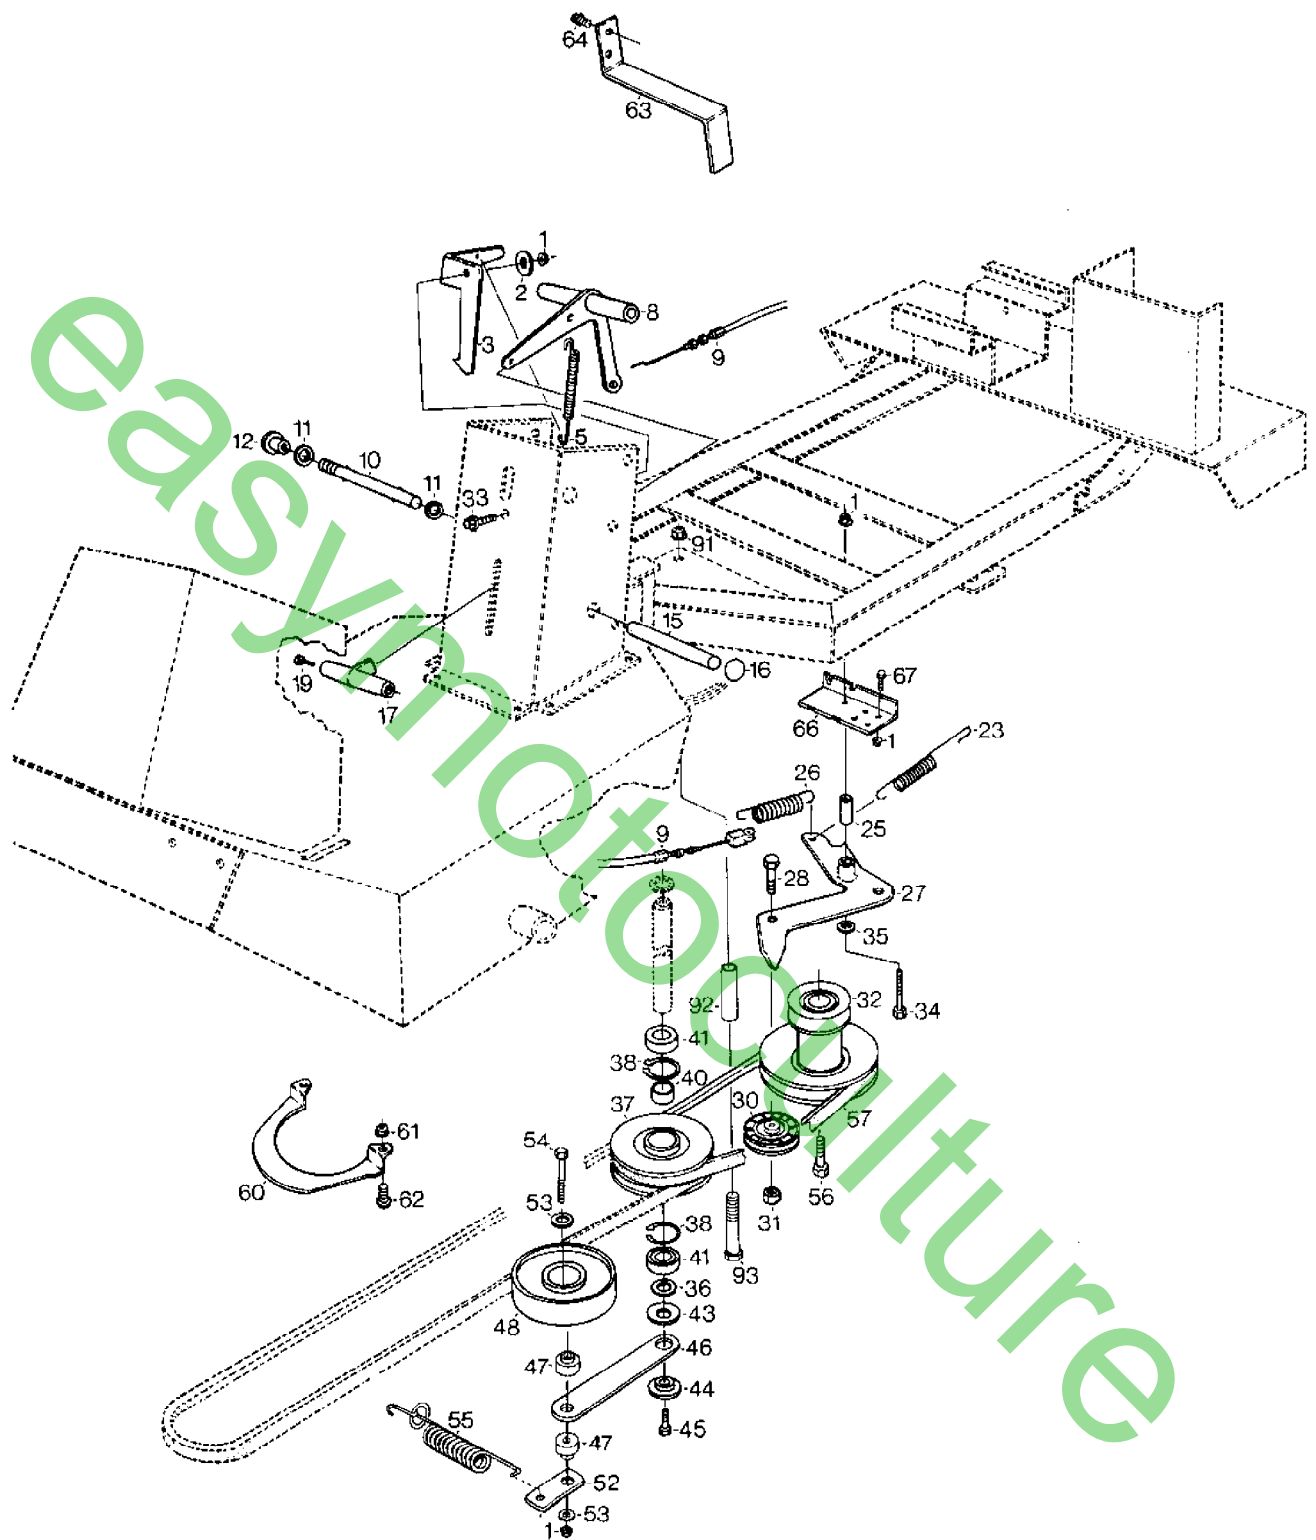

## Section: PARK CLASSIC- PRESIDENT-PRO 16 POWER TAKE-OFF

| Pos. | Quantity       | Spare part No | Description | Kit          | Notes              | New                 |
|------|----------------|---------------|-------------|--------------|--------------------|---------------------|
|      | 1258 1358 1458 |               |             |              |                    |                     |
|      | 1442 1443 1446 |               |             |              |                    |                     |
| 1    | 3              | 5             | 3           | 9739-0831-22 | Nut                |                     |
| 2    | 1              | 1             | 1           | 1134-0143-00 | Stop washer        |                     |
| 3    | 1              | 1             | 1           | 1134-2453-01 | Locking pawl       |                     |
| 5    | 1              | 1             | 1           | 1131-1497-01 | Spring             |                     |
| 8    | 1              | 1             | 1           | 1134-0027-01 | Control lever      |                     |
| 8    | 1              | 1             | 1           | 1134-1396-02 | Control lever      | 1442,1443,1446      |
| 9    | 1              | 1             | 1           | 1134-3573-01 | Pto cable          |                     |
| 10   | 1              | 1             | 1           | 1134-1972-01 | Disengaging lever  |                     |
| 11   | 2              | 2             | 2           | 9699-0025-02 | Washer             |                     |
| 12   | 1              | 1             | 1           | 1134-0583-00 | Plastic knob       |                     |
| 15   | 1              | 1             | 1           | 1134-0022-00 | Control rod        |                     |
| 16   | 2              | 2             | 2           | 9672-0004-02 | Lock washer        |                     |
| 17   | 1              | 1             | 1           | 1134-0153-00 | Handle             |                     |
| 19   | 1              | 1             | 1           | 9847-8016-16 | Screw              |                     |
| 23   | 1              | 1             | 1           | 1131-1506-00 | Spring             |                     |
| 25   | 1              | 1             | 1           | 1134-1565-01 | Spacer             |                     |
| 26   | 1              | 1             | 1           | 1134-1242-02 | Spring             |                     |
| 27   | 1              | 1             | 1           | 1134-2018-01 | Tensioning arm     |                     |
| 28   | 1              | 1             | 1           | 9997-1030-16 | Screw              |                     |
| 30   | 1              | 1             | 1           | 1134-9027-01 | Tension roller     |                     |
| 31   | 1              | 1             | 1           | 9799-1031-02 | Nut                |                     |
| 32   | 1              | 1             |             | 1134-2020-01 | Engine pulley      |                     |
| 32   |                |               | 1           | 1134-3394-01 | Engine pulley      |                     |
| 32A  | 1              | 1             | 1           | 9997-1450-16 | Puller-belt pulley | Tillbehör/accessory |
| 33   | 1              | 1             | 1           | 9959-0820-16 | Screw              |                     |
| 34   | 1              | 1             | 1           | 9997-0850-16 | Screw              |                     |
| 35   | 1              | 1             | 1           | 9699-0056-02 | Flat washer        |                     |
| 36   | 1              | 1             | 1           | 1134-0052-00 | Bearing spacer     |                     |
| 37   | 1              | 1             | 1           | 1134-1769-02 | Belt pulley assy   |                     |
| 38   | 2              | 2             | 2           | 9651-0040-04 | .Retaining ring    |                     |
| 40   | 1              | 1             | 1           | 1134-0051-09 | .Spacer            |                     |
| 41   | 2              | 2             | 2           | 9549-0019-00 | .Ball bearing      |                     |
| 43   | 1              | 1             | 1           | 9699-0109-02 | Flat washer        |                     |
| 44   | 1              | 1             | 1           | 1134-0222-00 | Washer             |                     |
| 45   | 1              | 1             | 1           | 9959-1025-16 | Screw              |                     |
| 46   | 1              | 1             | 1           | 1134-1730-01 | Tension wheel arm  |                     |
| 47   | 2              | 2             | 2           | 1134-1888-01 | Spacer             |                     |
| 48   | 1              | 1             | 1           | 1134-1770-01 | Tension roller     |                     |
| 52   | 1              | 1             | 1           | 1134-1893-01 | Spring attachment  |                     |
| 53   | 2              | 2             | 2           | 9699-0062-02 | Flat washer        |                     |
| 54   | 1              | 1             | 1           | 9997-0865-12 | Screw              |                     |
| 55   | 1              | 1             | 1           | 1134-1322-01 | Spring             |                     |
| 56   | 1              | 1             | 1           | 9987-5338-12 | Screw              |                     |
| 57   | 1              | 1             | 1           | 1134-9012-01 | V-belt             | = 9585-0056-00      |
| 60   | 1              | 1             | 1           | 1134-3654-01 | Finger guard       |                     |
| 61   | 2              | 2             | 2           | 9739-0631-22 | Nut                |                     |
| 62   | 2              | 2             | 2           | 9959-0612-16 | Screw              |                     |
| 63   | 1              | 1             | 1           | 1134-2381-01 | Belt guide         |                     |
| 64   | 2              | 2             | 2           | 9942-0816-16 | Screw              |                     |
| 66   |                | 1             |             | 1134-3400-01 | Angle plate        |                     |
| 67   |                | 2             |             | 9959-0816-16 | Screw              |                     |
| 91   | 1              | 1             | 1           | 9739-1031-22 | Nut                |                     |
| 92   | 1              | 1             | 1           | 1134-0041-03 | Collar             |                     |
| 93   | 1              | 1             | 1           | 9997-1070-12 | Screw              |                     |

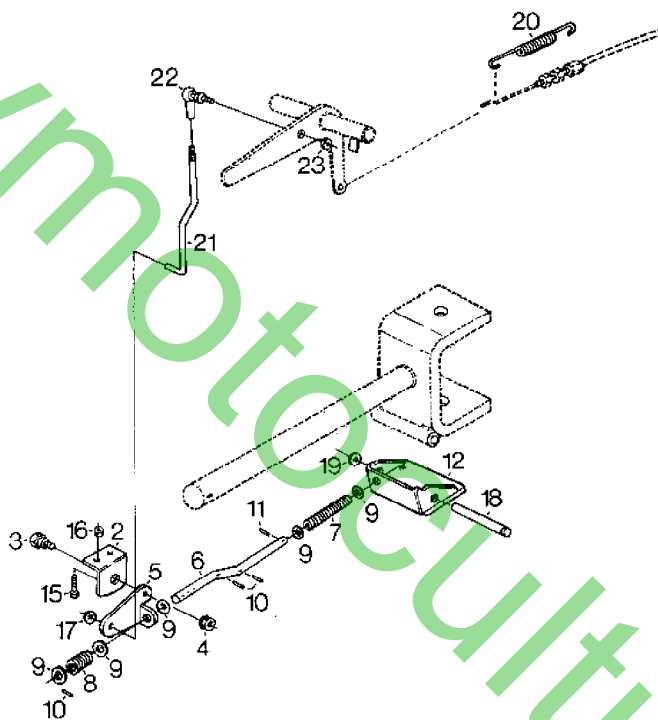

## Section: PARK CLASSIC- PRESIDENT-PRO 16 PTO-BRAKE

| Pos. | Quantity | Spare part No | Description | Kit | Notes | New |
|------|----------|---------------|-------------|-----|-------|-----|
|------|----------|---------------|-------------|-----|-------|-----|

|      |      |      |  |  |  |  |
|------|------|------|--|--|--|--|
| 1258 | 1358 | 1458 |  |  |  |  |
| 1442 | 1443 | 1446 |  |  |  |  |

|    |   |   |   |              |                    |  |
|----|---|---|---|--------------|--------------------|--|
| 2  | 1 | 1 | 1 | 1134-2518-01 | Console            |  |
| 3  | 1 | 1 | 1 | 1134-0245-00 | Shoulder screw     |  |
| 4  | 1 | 1 | 1 | 9747-0831-02 | Lock nut           |  |
| 5  | 1 | 1 | 1 | 1134-2522-01 | Plate              |  |
| 6  | 1 | 1 | 1 | 1134-2520-02 | Stay               |  |
| 7  | 1 | 1 | 1 | 1134-2663-01 | Compression spring |  |
| 8  | 1 | 1 | 1 | 1134-2529-01 | Compression spring |  |
| 9  | 5 | 5 | 5 | 9699-0025-02 | Washer             |  |
| 10 | 3 | 3 | 3 | 9595-0110-00 | Locating pin       |  |
| 11 | 1 | 1 | 1 | 9595-0153-00 | Locating pin       |  |
| 12 | 1 | 1 | 1 | 1134-2524-01 | Brake              |  |
| 15 | 2 | 2 | 2 | 9959-0612-16 | Screw              |  |
| 16 | 2 | 2 | 2 | 9739-0631-22 | Nut                |  |
| 17 | 1 | 1 | 1 | 9675-0009-02 | Starlock           |  |
| 18 | 1 | 1 | 1 | 1134-2521-01 | Shaft              |  |
| 19 | 2 | 2 | 2 | 9675-0009-02 | Starlock           |  |
| 20 | 1 | 1 | 1 | 1134-3633-01 | Spring             |  |
| 21 | 1 | 1 | 1 | 1134-2519-03 | Stay               |  |
| 22 | 1 | 1 | 1 | 9570-0004-00 | Elbow link         |  |
| 23 | 1 | 1 | 1 | 9799-0631-02 | Nut                |  |