



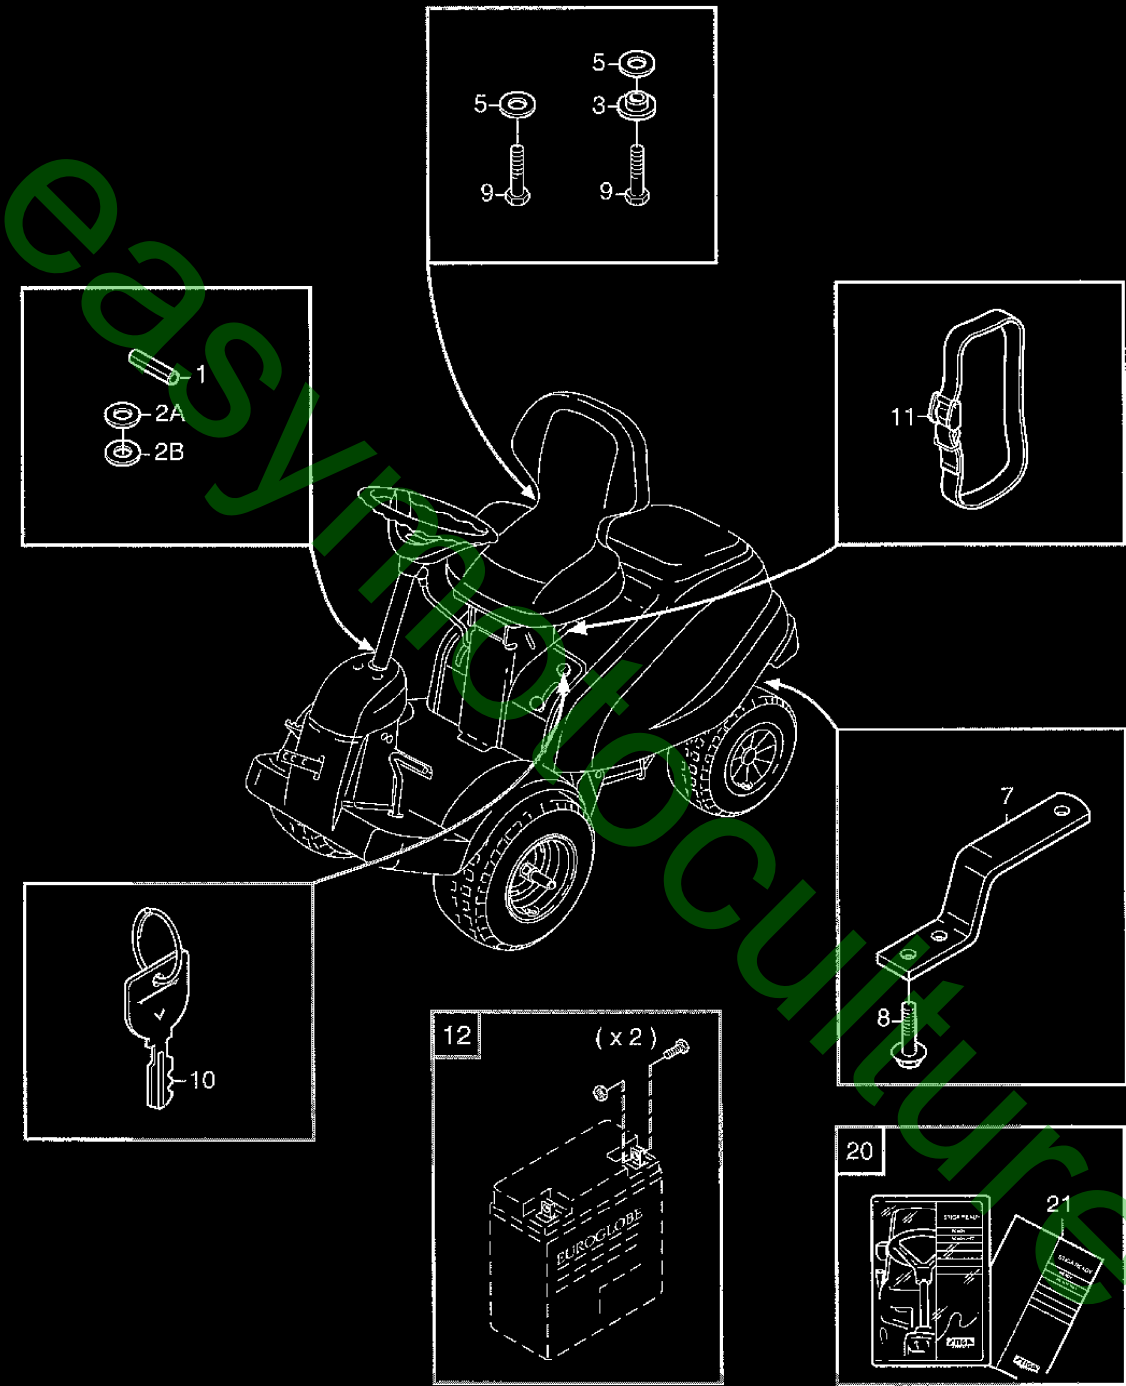


Section: READY ASSEMBLY PARTS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
0	1	1134-4664-06	Assembly parts			
1	1	9595-0262-00	.Locating pin			
2A	1	9699-0103-02	.Flat washer		0.5 mm	
2B	1	9699-0114-02	.Flat washer		1.0 mm	
3	2	1134-4185-01	.Flange washer			
5	4	9699-0056-02	.Flat washer			
7	1	1134-4627-01	.Tow bar			
8	2	9959-0820-16	.Screw			
9	4	9997-0820-16	.Screw			
10	1	1134-6125-01	.Ignition key			
11	1	1134-5245-01	.Battery strap			
12	1	1134-6113-01	.Battery screws			
20	1	1134-3771-80	Folder w.manuals			
21	1	8211-2002-03	.Warranty card			
21	1	8211-0209-13	.Safety regulations			
21	1	8211-0346-01	.Owner's manual			
21	1	8211-0347-01	.Owner's manual			

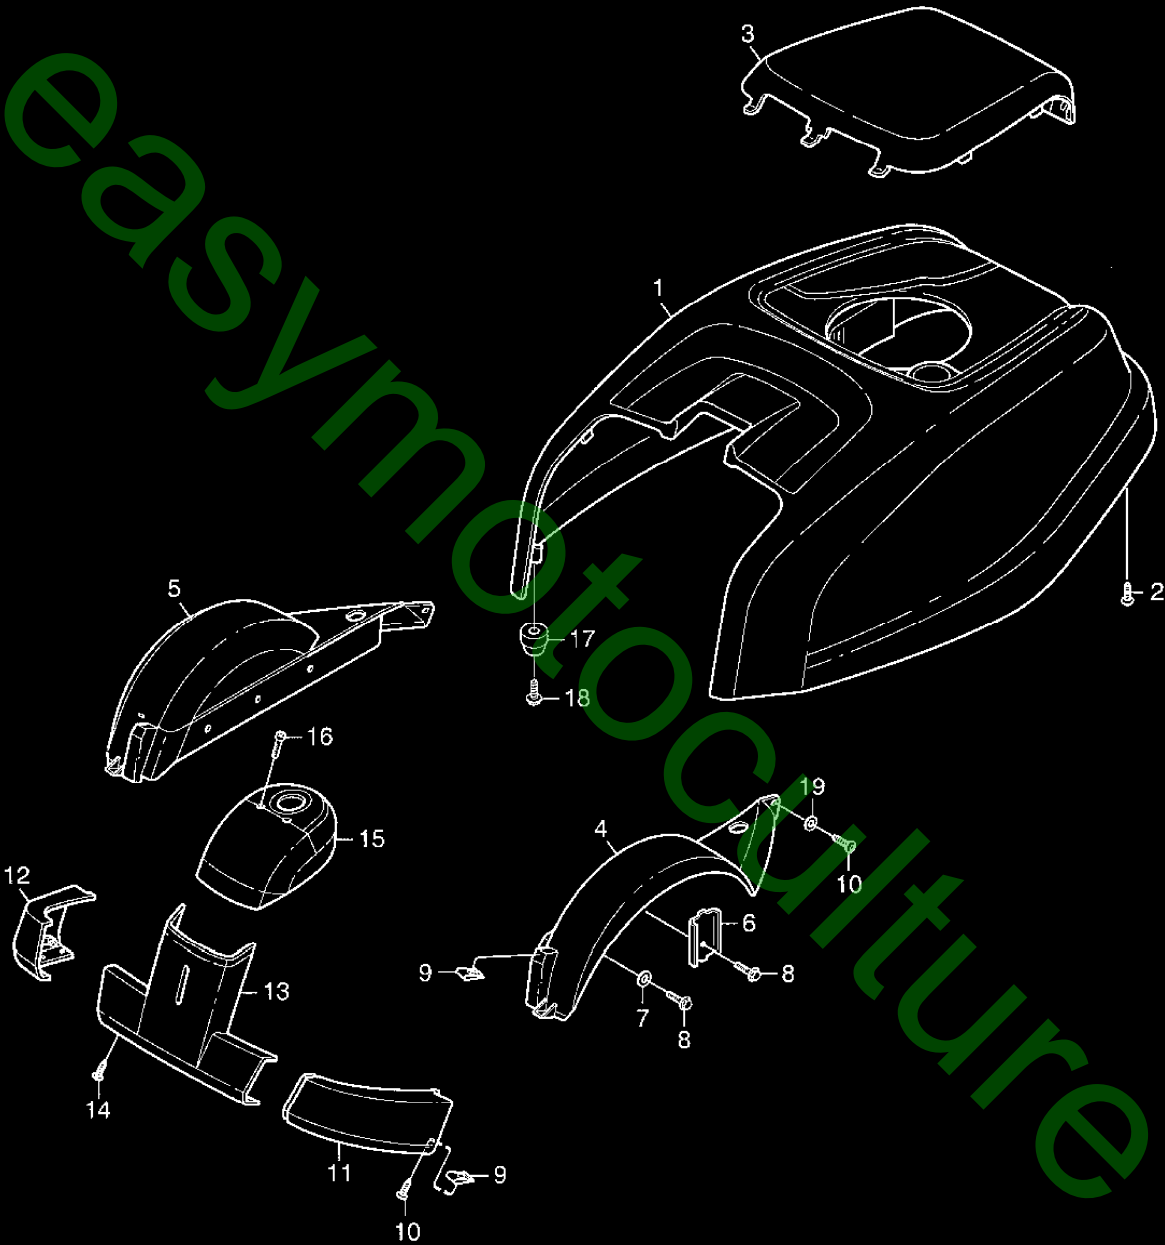


Section: READY BODY WORK

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
2715 2716						
1	1	1	1134-5283-01	Engine hood-grey		
2	7	7	9838-9530-12	Screw		
3	1	1	1134-5284-01	Engine cover-yellow		
4	1	1	1134-5307-01	Mud guard-LH, grey		
5	1	1	1134-5307-02	Mud guard-RH, grey		
6	2	2	1134-0225-00	Support plate		
7	4	4	9699-0056-02	Flat washer		
8	6	6	9945-0816-16	Screw		
9	4	4	1134-4176-01	Clips		
10	4	4	9893-0616-16	Screw		
11	1	1	1134-5306-01	Bumper, front-LH		
12	1	1	1134-5306-02	Bumper, front-RH		
13	1	1	1134-5305-01	Front plate-lower		
14	6	6	9893-0616-16	Screw		
15	1	1	1134-5304-01	Front-upper		
16	2	2	9946-0525-16	Screw		
17	2	2	1134-4790-02	Hood guide		
18	2	2	9838-9530-12	Screw		
19	2	2	9699-0060-02	Flat washer		
99		1	1134-5591-02	Label kit		
99	1		1134-5591-01	Label kit		

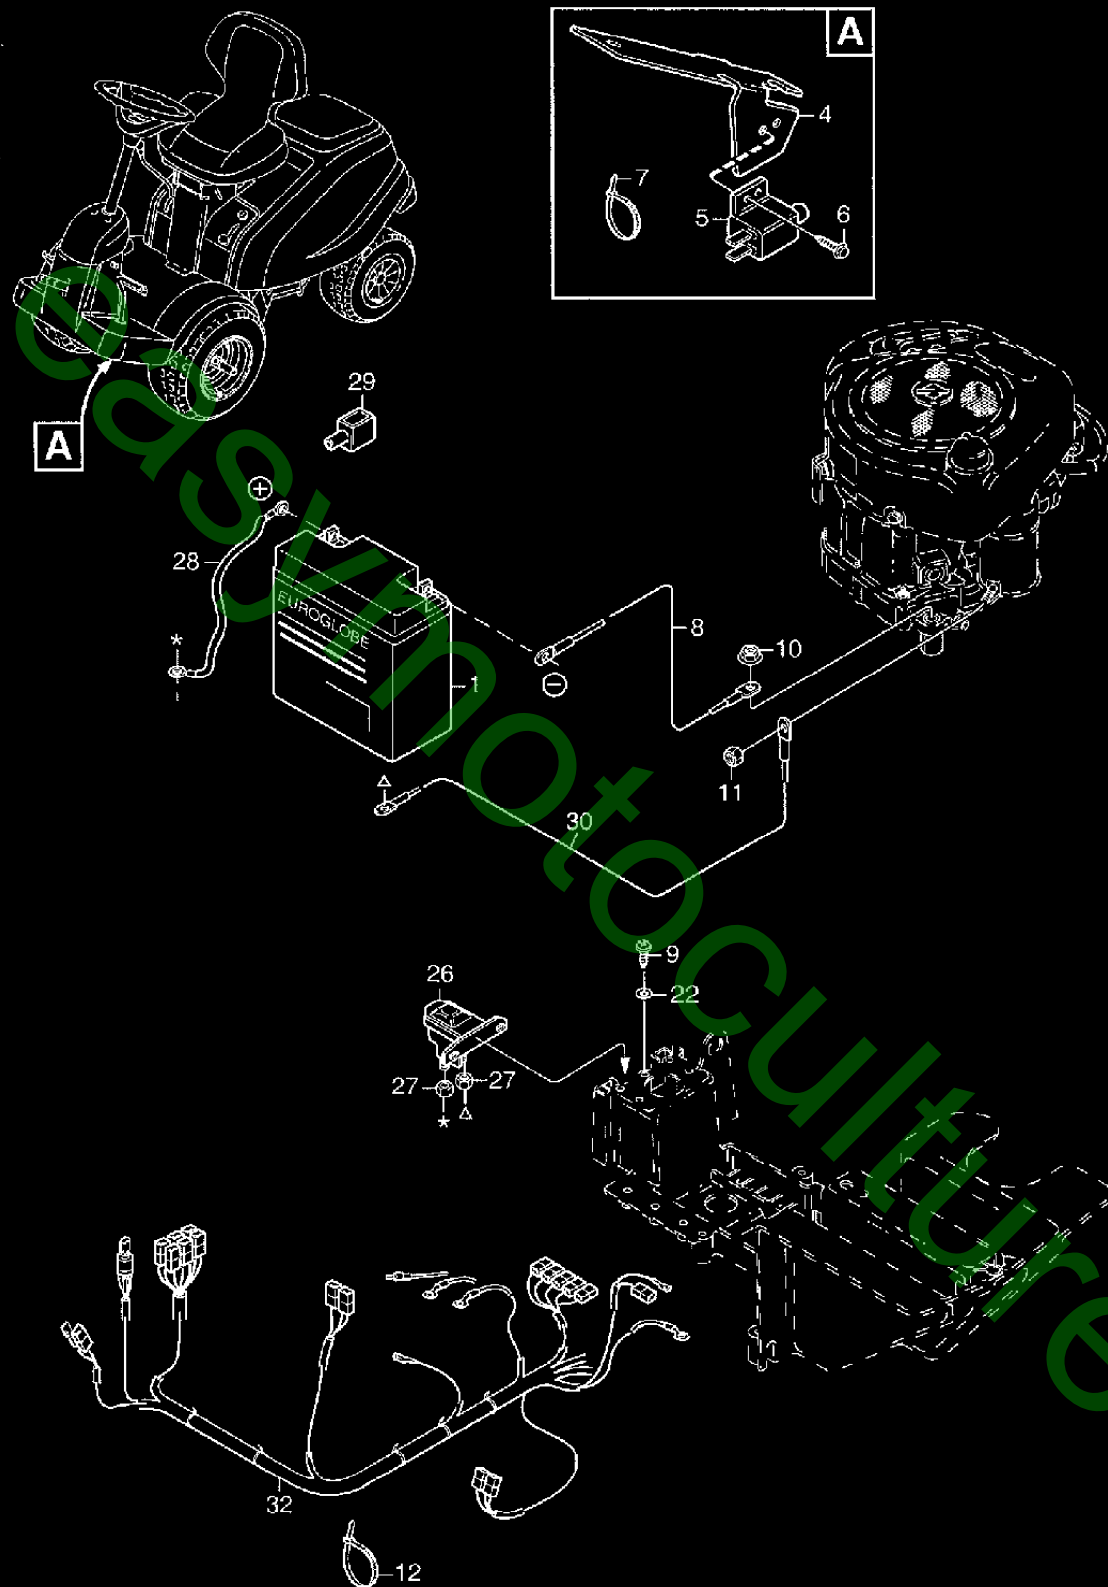


Section: READY EL. EQUIPMENT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715	2716				
1	1	1	1134-4804-01	Battery		
4		1	1134-4610-01	Switch bracket		
5		1	1134-3399-02	Switch		
6		2	9852-8013-16	Screw		
7		3	9579-0003-00	Cable holder		
8	1	1	1134-2042-02	Cable-black	L = 350 mm	
9	1	1	9838-9516-12	Screw		
10	1	1	9747-0831-02	Lock nut		
11	1	1	9795-3531-02	Nut	1/4 UNC	
12	3	3	9579-0003-00	Cable holder		
22	1	1	9699-0060-02	Flat washer		
26	1	1	1134-2962-01	Solenoid assy		
27	2	2	9794-5131-02	.Nut		
28	1	1	1134-4702-01	Cable-red	L = 380 mm	
29	1	1	1134-2310-01	Guard cap		
30	1	1	1134-4702-02	Cable-red	L = 480 mm	
32		1	1134-5767-01	Harness		
32	1		1134-5766-01	Harness		

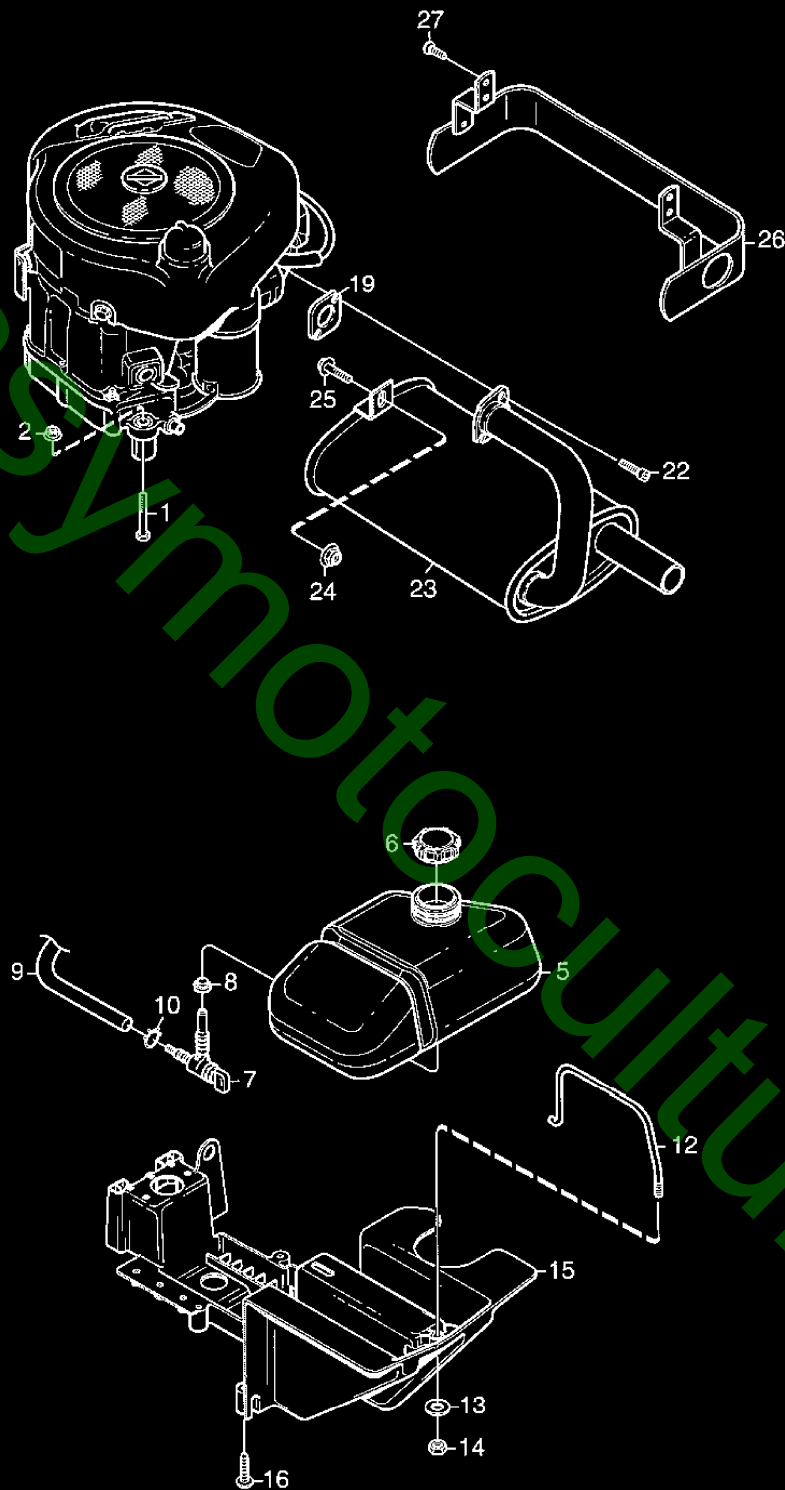

Section: READY ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
1	4	9997-0840-16	Screw			
2	4	9747-0831-02	Lock nut			
5	1	1134-5266-01	Fuel tank			
6	1	1134-5532-01	Fuel tank cap			
7	1	1134-3224-01	Fuel shut-off valve			
8	1	1134-3225-01	Grommet			
9	1	1134-2975-05	Fuel hose		L = 460 mm	
10	2	9578-0023-02	Hose clamp			
12	1	1134-4808-01	Tank clamp			
13	1	9699-0060-02	Flat washer			
14	1	9747-0631-02	Lock nut			
15	1	1134-4807-02	Tank/battery shelf			
16	4	9829-8830-12	Screw			
19	1	1134-0433-00	Muffler gasket			
22	2	1134-4930-01	Screw			
23	1	1134-5455-01	Muffler			
24	1	9739-0831-22	Nut			
25	1	9959-0820-16	Screw			
26	1	1134-5457-01	Heat guard			
27	4	9893-0616-16	Screw			

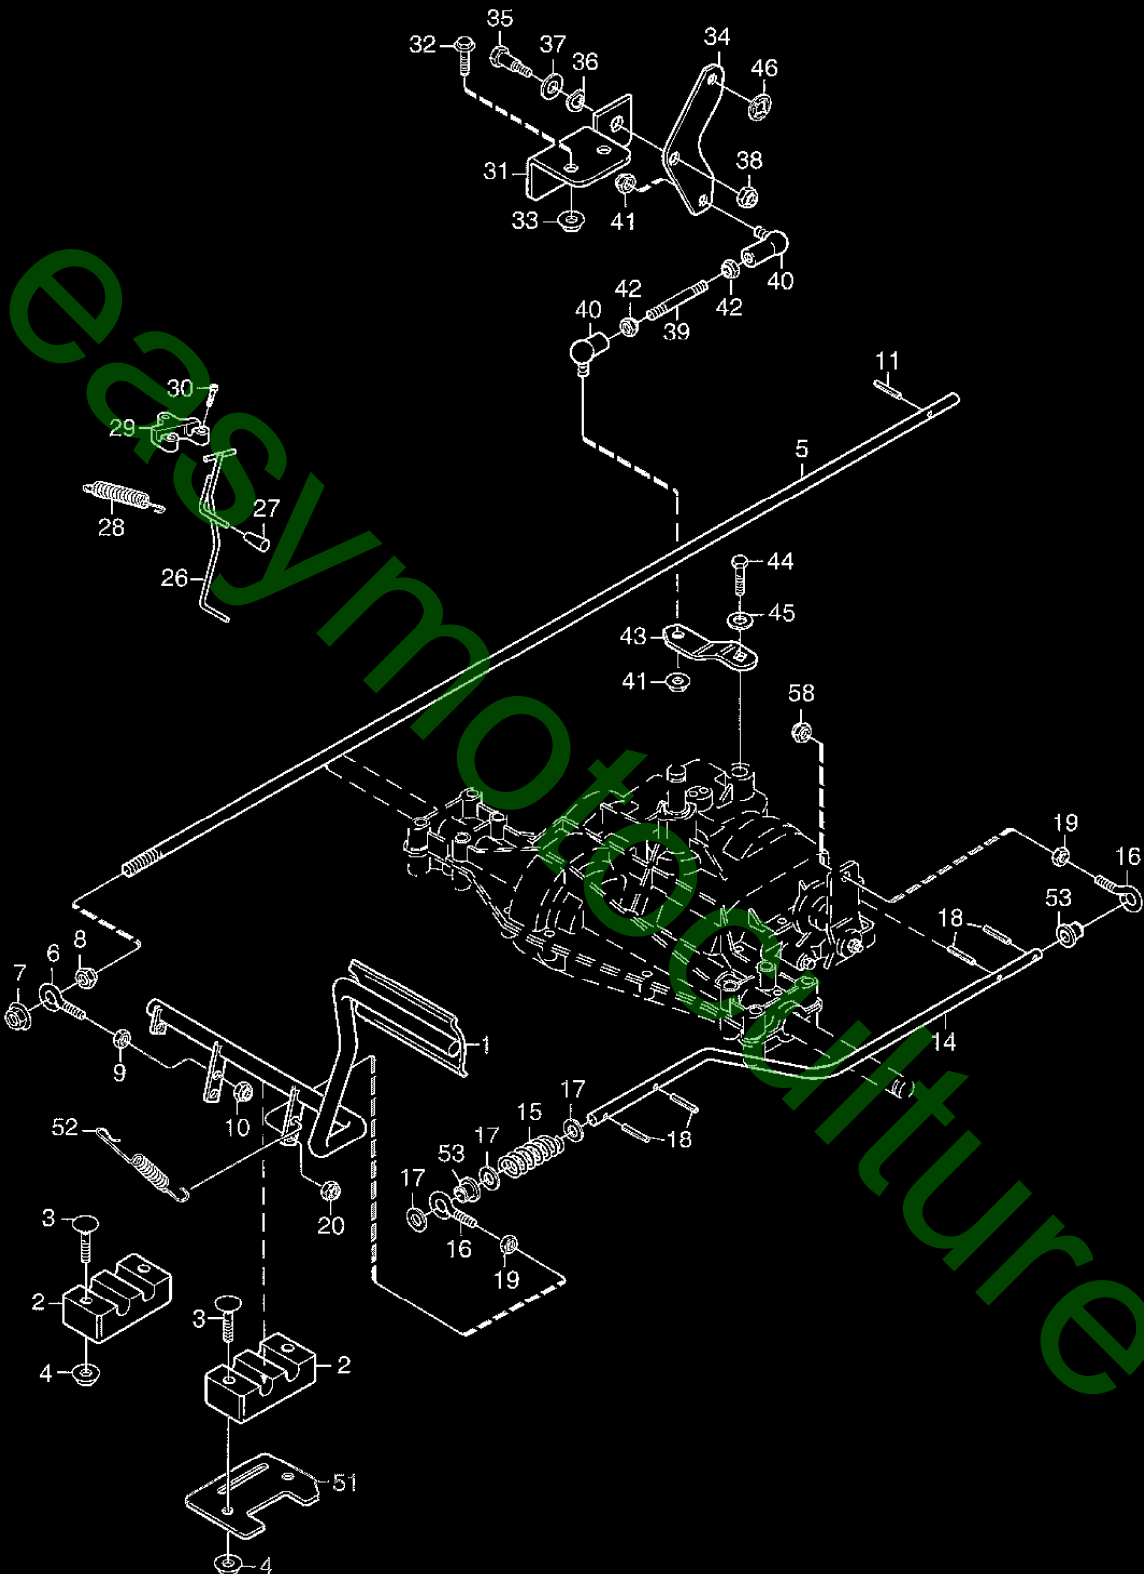


Section: READY FOOT CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
2715						
1	1	1134-4802-01	Pedal			
2	2	1134-4624-01	Bearing			
3	4	9897-0640-12	Screw			
4	4	9739-0631-22	Nut			
5	1	1134-4795-01	Clutch rod			
6	1	1134-2138-01	Eye bolt			
7	1	9739-1031-22	Nut			
8	1	9747-1031-02	Lock nut			
9	1	9739-0831-22	Nut			
10	1	9747-0831-02	Lock nut			
11	1	9595-0208-00	Locating pin			
14	1	1134-4777-01	Brake rod			
15	1	1134-4617-01	Spring			
16	2	1134-2138-01	Eye bolt			
17	3	9699-0035-02	Flat washer			
18	4	9595-0208-00	Locating pin			
19	2	9739-0831-22	Nut			
20	1	9747-0831-02	Lock nut			
26	1	1134-5353-01	Brake rod			
27	1	1134-2786-01	Plastic knob			
28	1	1131-1497-01	Spring			
29	1	1134-4002-01	Brake rod attachment			
30	3	9838-9516-12	Screw			
31	1	1134-4714-01	Angle bracket			
32	2	9959-0820-16	Screw			
33	2	9739-0831-22	Nut			
34	1	1134-4715-01	Triangular plate			
35	1	1134-0240-00	Shoulder screw			
36	1	9694-0001-00	Washer			
37	1	9699-0036-02	Flat washer			
38	1	9747-0831-02	Lock nut			
39	1	1134-4717-02	Threaded rod			
40	2	9570-0004-00	Elbow link			
41	2	9747-0631-02	Lock nut			
42	2	9739-0631-22	Nut			
43	1	1134-5279-01	Shift lever			
44	1	9987-5016-16	Screw			
45	1	9699-0060-02	Flat washer			
46	1	9675-0009-02	Starlock			
51	1	1134-4793-01	Stop plate			


Section: READY FOOT CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
52	1	4231-0013-00	Spring			
53	2	1134-4779-01	Plastic bushing			
58	1	9747-0831-02	Lock nut			

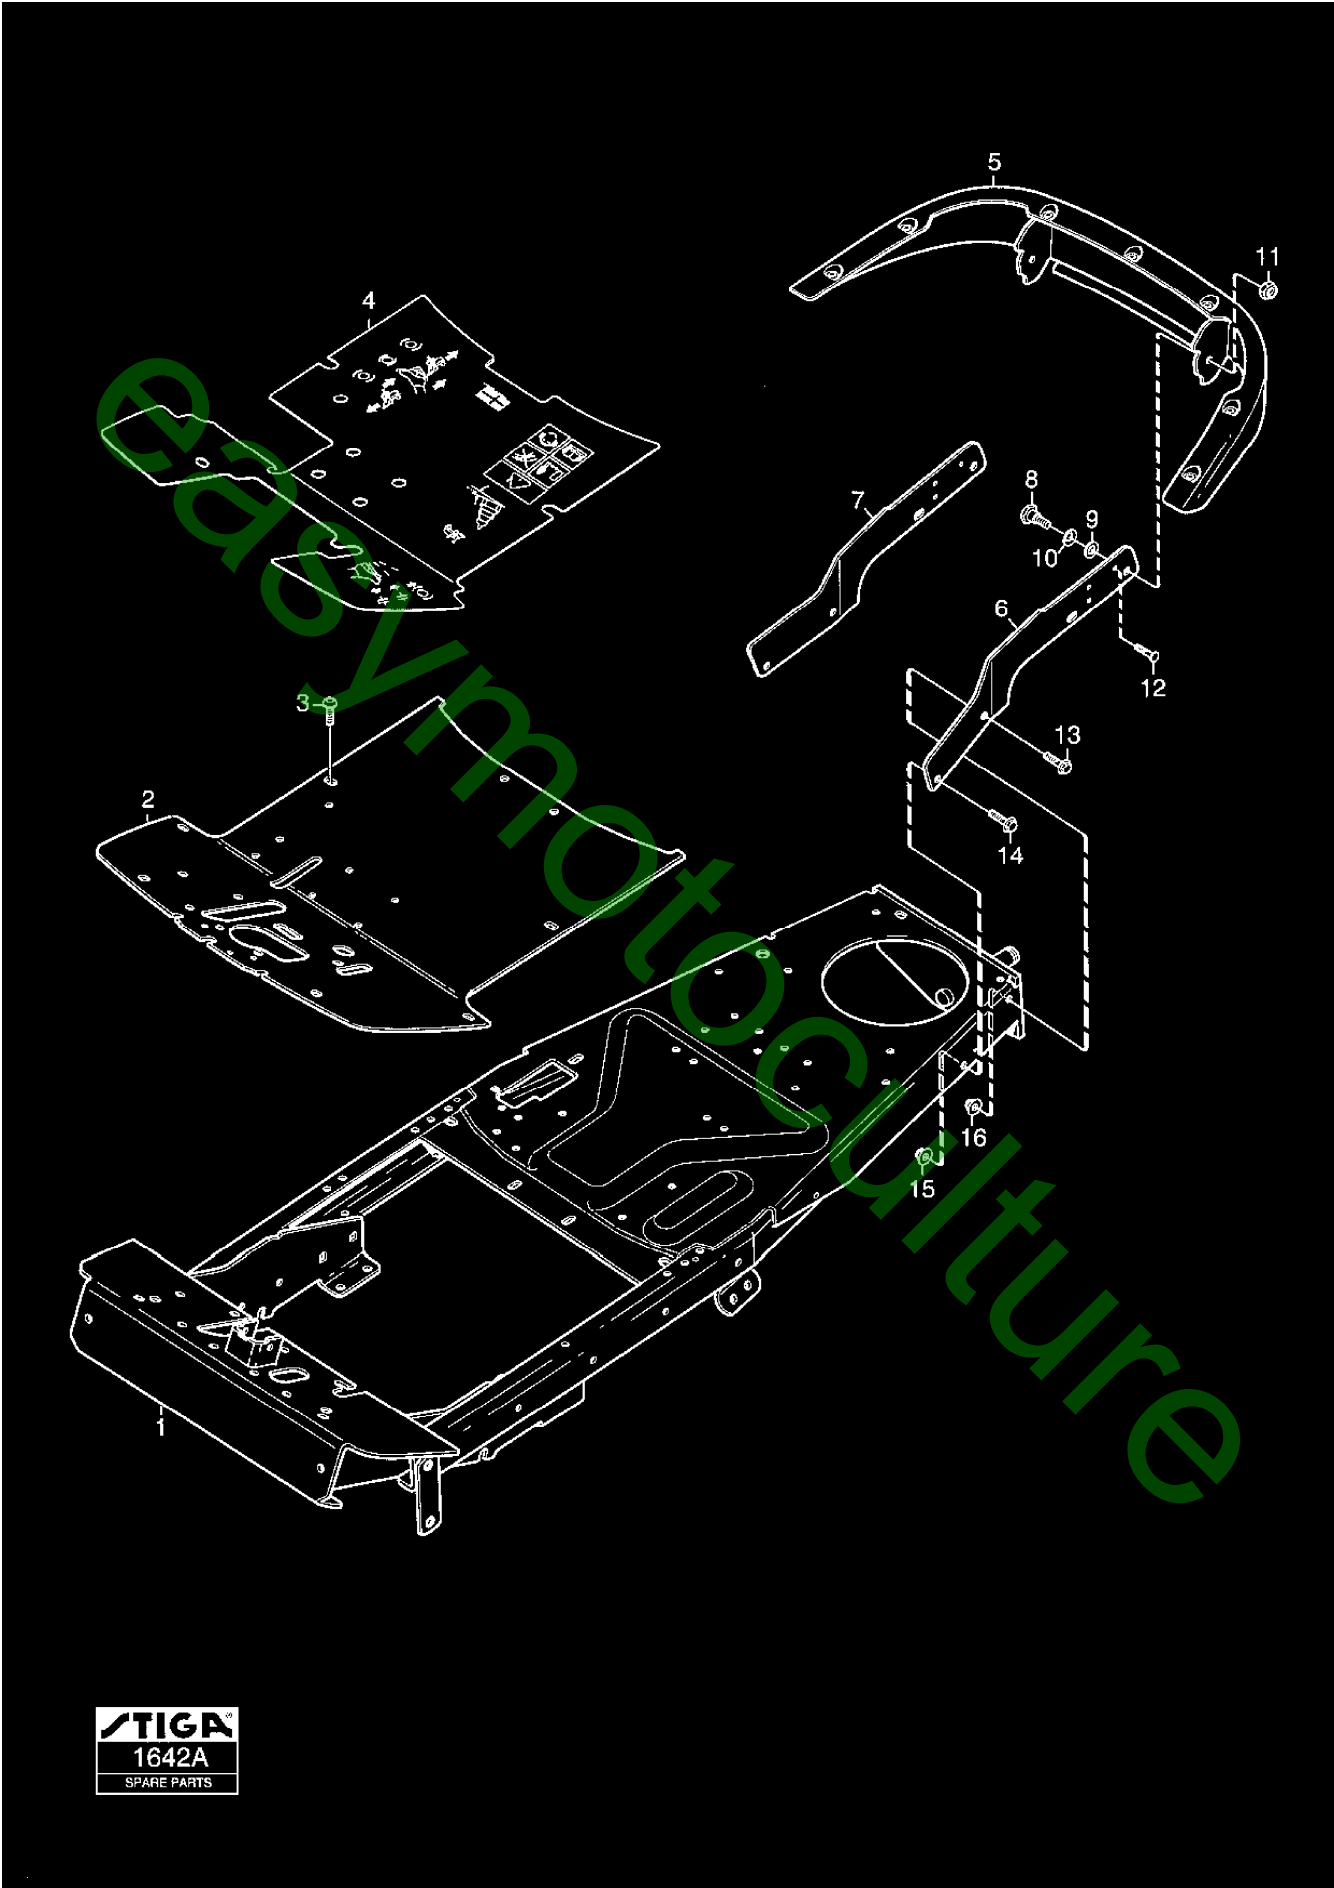

Section: READY FRAME

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	2715	2716					
1	1	1	1134-5546-02	Frame			
2	1	1	1134-5293-01	Floor plate			
3	2	2	9893-0616-16	Screw			
4	1		1134-5338-01	Floor mat			
4		1	1134-5339-01	Floor mat			
5	1	1	1134-5453-01	Bumper-rear			
6	1	1	1134-5334-01	Attachment-LH			
7	1	1	1134-5334-02	Attachment-RH			
8	2	2	1134-0240-00	Shoulder screw			
9	2	2	1134-4242-01	Spacer washer			
10	2	2	9694-0001-00	Washer			
11	2	2	9747-0831-02	Lock nut			
12	2	2	9943-0516-16	Screw			
13	2	2	9959-0820-16	Screw			
14	2	2	9959-0825-16	Screw			
15	1	1	9739-0831-22	Nut			
16	3	3	9739-0831-22	Nut			

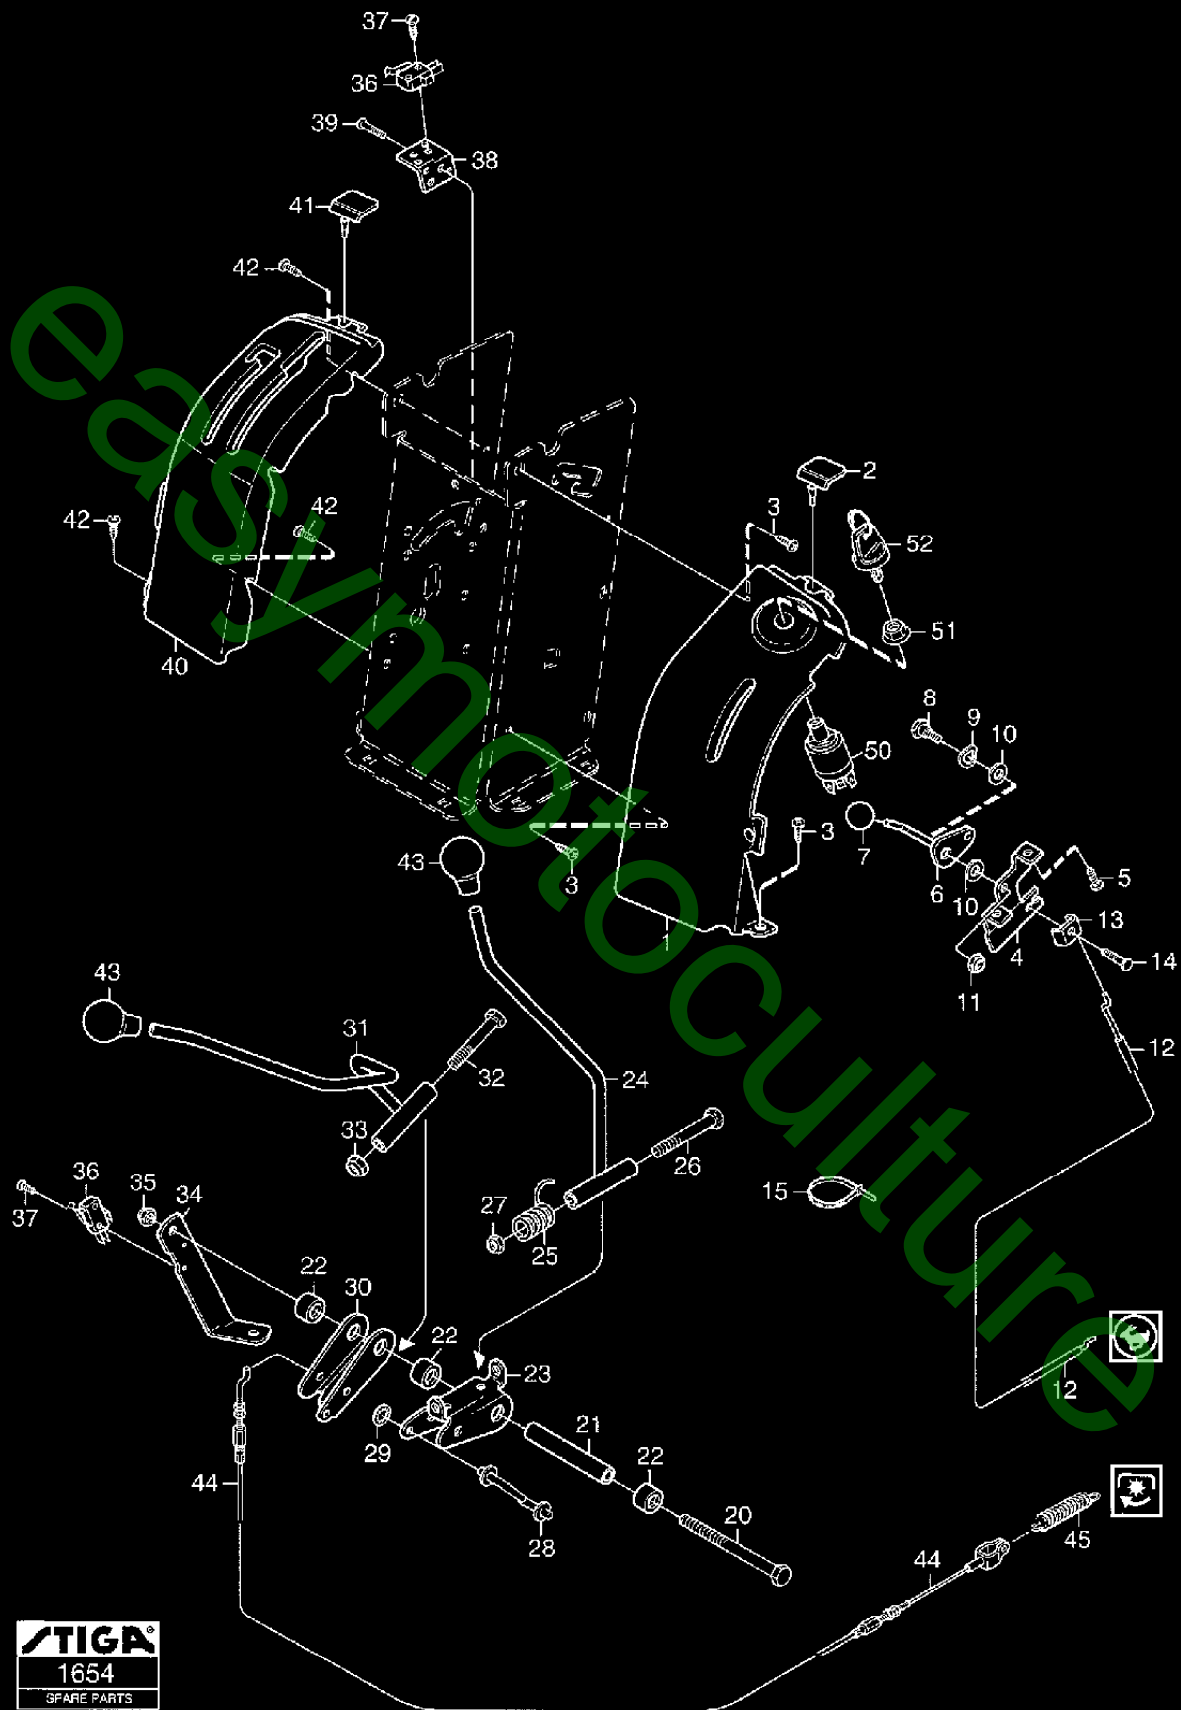

Section: READY HAND CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
2715						
1	1	1134-5286-01	Control panel-LH			
2	2	1134-5531-01	Absorber			
3	3	9893-0616-16	Screw			
4	1	1134-5357-01	Bracket			
5	2	9838-9516-12	Screw			
6	1	1134-4077-01	Throttle control			
7	1	1134-4078-01	Knob			
8	1	1134-0240-00	Shoulder screw			
9	1	9694-0001-00	Washer			
10	2	1134-4242-01	Spacer washer			
11	1	9747-0831-02	Lock nut			
12	1	1134-1597-13	Throttle cable			
13	1	9500-9991-00	Cable clamp			
14	1	9943-0516-16	Screw			
15	1	9579-0003-00	Cable holder			
20	1	9997-0812-02	Screw			
21	1	1134-5274-02	Spacer			
22	3	1134-3047-01	Spacer			
23	1	1134-5271-01	Control bracket			
24	1	1134-5275-01	Gear shift lever			
25	1	1134-5535-01	Spring			
26	1	9997-0890-12	Screw			
27	1	9747-0831-02	Lock nut			
28	1	1134-5268-01	Shifter rod			
29	1	9675-0009-02	Starlock			
30	1	1134-5271-01	Control bracket			
31	1	1134-5276-01	Control lever			
32	1	9997-0890-12	Screw			
33	1	9747-0831-02	Lock nut			
34	1	1134-5356-01	Strut			
35	1	9747-0831-02	Lock nut			
36	2	9400-0312-01	Micro switch			
37	4	9840-7716-16	Screw			
38	1	1134-5358-01	Switch bracket			
39	2	9943-0516-16	Screw			
40	1	1134-5285-01	Control panel-RH			
41	2	1134-5531-01	Absorber			
42	4	9893-0616-16	Screw			
43	2	1134-2551-01	Knob			
44	1	1134-3573-06	PTO cable			





Section: READY HAND CONTROLS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
45	1	1134-1242-02	Spring			
50	1	1134-4093-01	Ignition switch			
51	1	1134-4749-01	Nut			
52	1	1134-4734-01	Ignition key			



Section: READY LIFTING DEVICE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
1	1	1134-4117-01	Bracket			
2	2	9959-1025-16	Screw			
3	2	9739-1031-22	Nut			
4	2	1134-2684-01	Bearing			
5	1	1134-4945-01	Lift catch assy			
9	1	9404-0027-01	.O-ring			
10	1	9650-0039-04	.Lock ring			
11	1	9595-0276-01	.Locating pin			
12	1	9997-0640-12	.Screw			
13	1	9747-0631-02	.Lock nut			
15	1	9897-0820-16	.Screw			
16	1	9747-0831-02	Lock nut			
17	1	1134-4860-01	Lift fork			
18	2	1134-0240-00	Shoulder screw			
19	1	1134-4938-01	Lift pedal			
20	2	9997-0625-16	Screw			
21	2	9739-0631-22	Nut			
22	1	4231-0013-00	Spring			

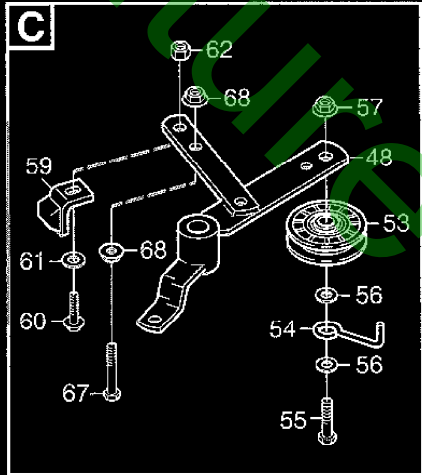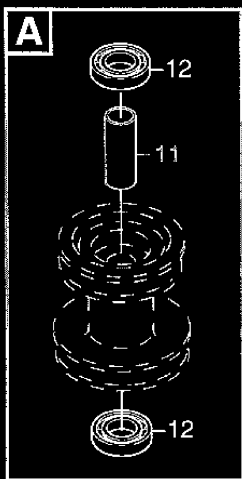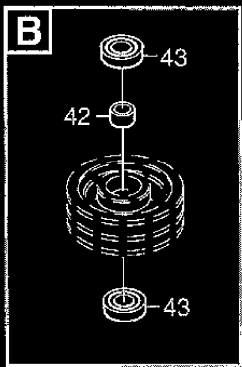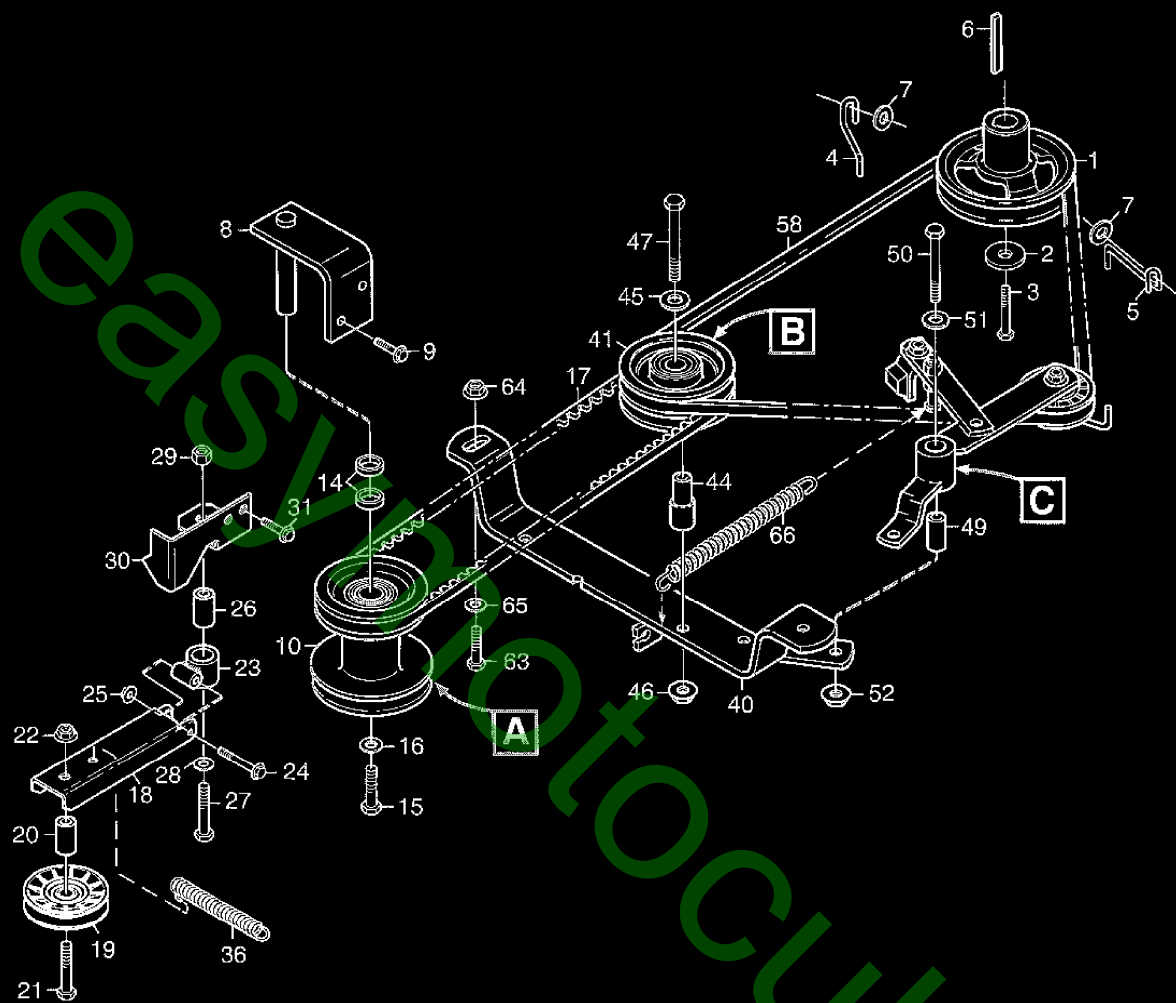


Section: READY POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
1	1	1134-5046-01	Engine belt pulley			
2	1	1134-5017-01	Washer			
3	1	9987-5332-16	Screw			
4	1	1134-5058-01	Belt guide			
5	1	1134-5057-01	Belt guide			
6	1	9600-0251-01	Key		L = 2 1/2"	
7	2	9699-0056-02	Flat washer			
8	1	1134-4650-01	Pulley bracket			
9	2	9945-0816-16	Screw			
10	1	1134-4643-01	Intermediate pulley			
11	1	1134-0051-12	.Spacer			
12	2	9549-0019-00	.Ball bearing			
14	2	1134-0052-00	Bearing spacer			
15	1	9997-1040-16	Screw			
16	1	9699-0035-02	Flat washer			
17	1	1134-9079-01	Drive belt		= 9585-0139-01	
18	1	1134-5231-01	Tension arm			
19	1	1134-9027-01	Tension roller			
20	1	1134-4619-01	Spacer			
21	1	9997-1060-12	Screw			
22	1	9747-1031-02	Lock nut			
23	1	1134-5232-01	Attachment			
24	1	9997-0640-12	Screw			
25	1	9747-0631-02	Lock nut			
26	1	1134-4619-01	Spacer			
27	1	9997-1050-16	Screw			
28	1	9699-0035-02	Flat washer			
29	1	9747-1031-02	Lock nut			
30	1	1134-4708-02	Bracket			
31	2	9945-0816-16	Screw			
36	1	1131-1507-00	Spring			
40	1	1134-5037-01	Bracket			
41	1	1134-1769-03	Centre pulley assy			
42	1	1134-0051-09	.Spacer			
43	2	9549-0019-00	.Ball bearing			
44	1	1134-1839-02	Shaft			
45	1	9699-0035-02	Flat washer			
46	1	9739-1031-22	Nut			
47	1	9997-1070-12	Screw			
48	1	1134-5541-01	Clutch lever			


Section: READY POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
49	1	1134-1565-10	Spacer			
50	1	9997-0860-16	Screw			
51	1	9699-0056-02	Flat washer			
52	1	9739-0831-22	Nut			
53	1	1134-9027-01	Tension roller			
54	1	1134-1795-01	Belt stirrup			
55	1	9997-1040-16	Screw			
56	2	9699-0035-02	Flat washer			
57	1	9739-1031-22	Nut			
58	1	1134-9078-01	Drive belt		= 9585-0138-01	
59	1	1134-4164-03	Brake pad			
60	1	9959-0820-16	Screw			
61	1	9699-0090-02	Flat washer			
62	1	9747-0831-02	Lock nut			
63	2	9959-0820-16	Screw			
64	2	9739-0831-22	Nut			
65	1	9699-0056-02	Flat washer			
66	1	1131-1506-00	Spring			
67	1	9997-0860-16	Screw			
68	2	9739-0831-22	Nut			

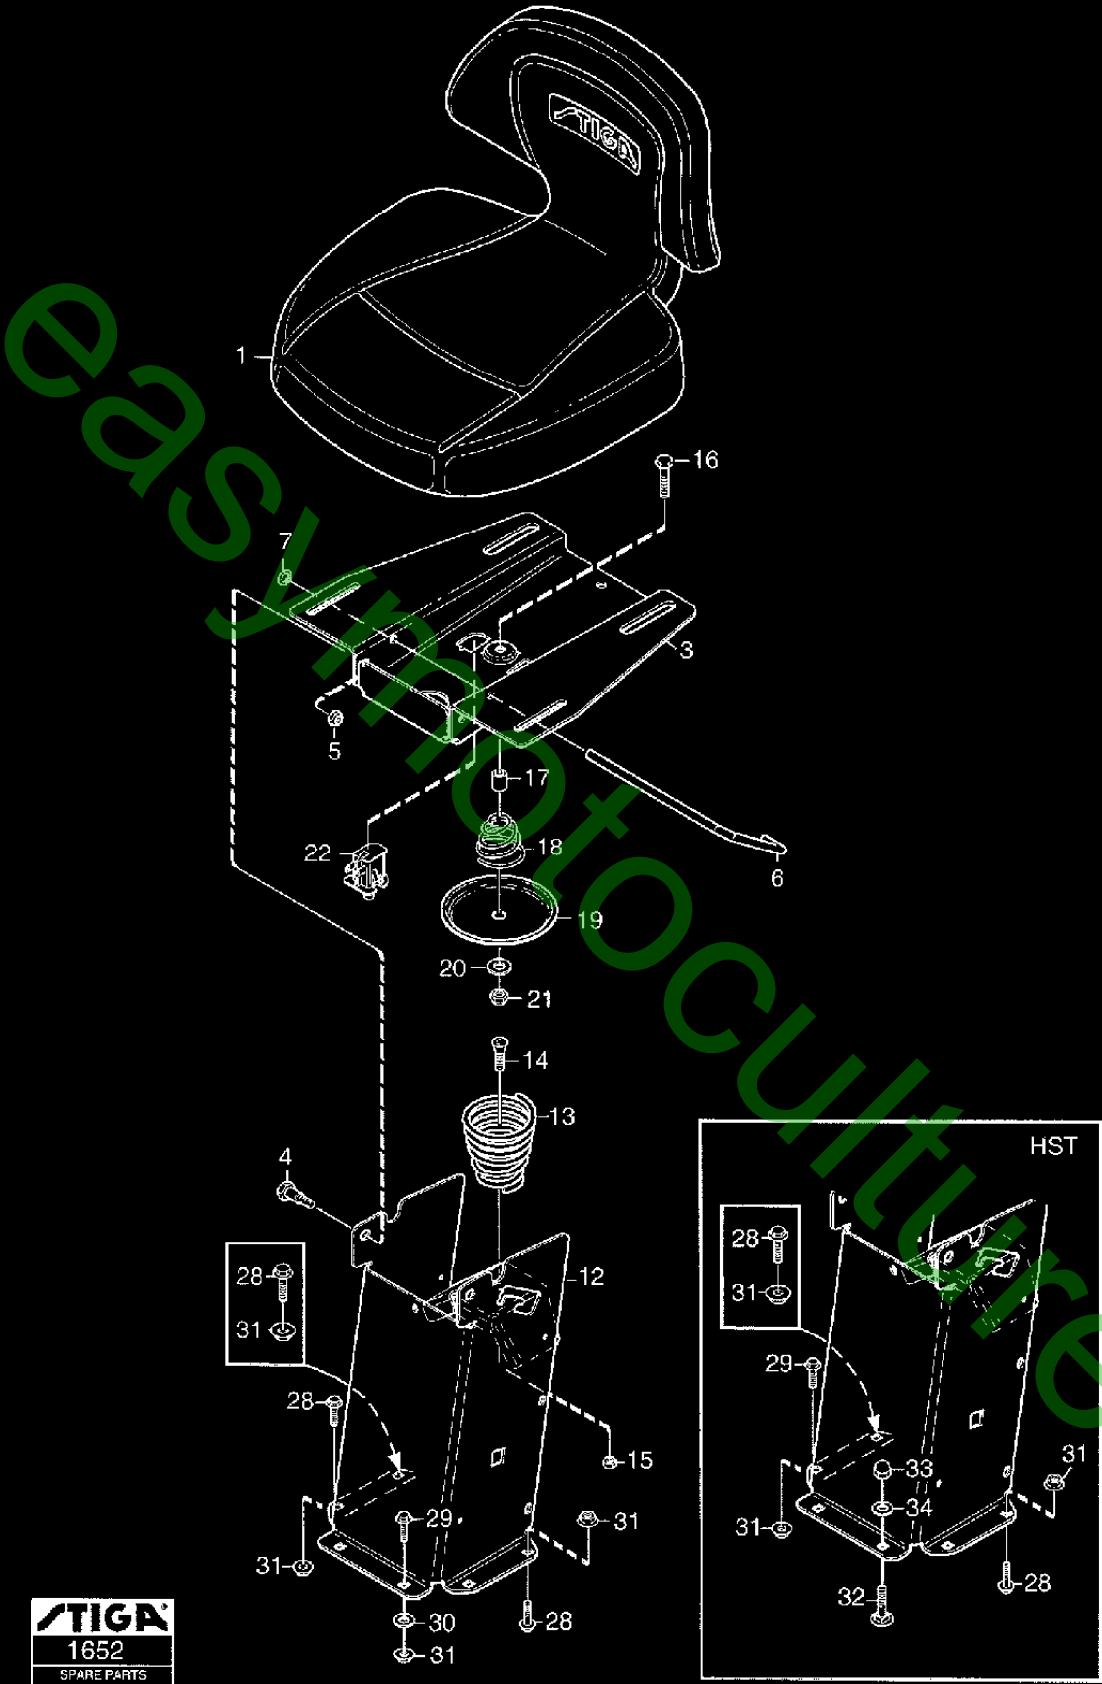


Section: READY SEAT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
2715 2716						
1	1	1	1134-5506-01	Seat		
3	1	1	1134-5301-01	Seat plate		
4	2	2	1134-0240-00	Shoulder screw		
5	2	2	9747-0831-02	Lock nut		
6	1	1	1134-5454-01	Catch		
7	1	1	9675-0012-02	Locking washer		
12	1	1	1134-5296-04	Seat bracket-yellow		
13	1	1	1134-4256-01	Seat spring		
14	1	1	9924-1235-19	Screw		
15	1	1	9747-1231-02	Lock nut		
16	1	1	9997-0840-16	Screw		
17	1	1	1134-1565-06	Spacer		
18	1	1	1134-5302-01	Spring		
19	1	1	1134-5299-01	Push plate		
20	1	1	9699-0090-02	Flat washer		
21	1	1	9747-0831-02	Lock nut		
22	1	1	1134-3156-02	Switch (grey)		
28	4	3	9959-0820-16	Screw	L = 20 mm	
29	2	1	9959-0825-16	Screw	L = 25 mm	
30	2		9699-0056-02	Flat washer		
31	6	4	9739-0831-22	Nut		
32		2	9897-0820-16	Screw		
33		2	9757-0821-02	Cap nut		
34		2	9699-0028-02	Flat washer		

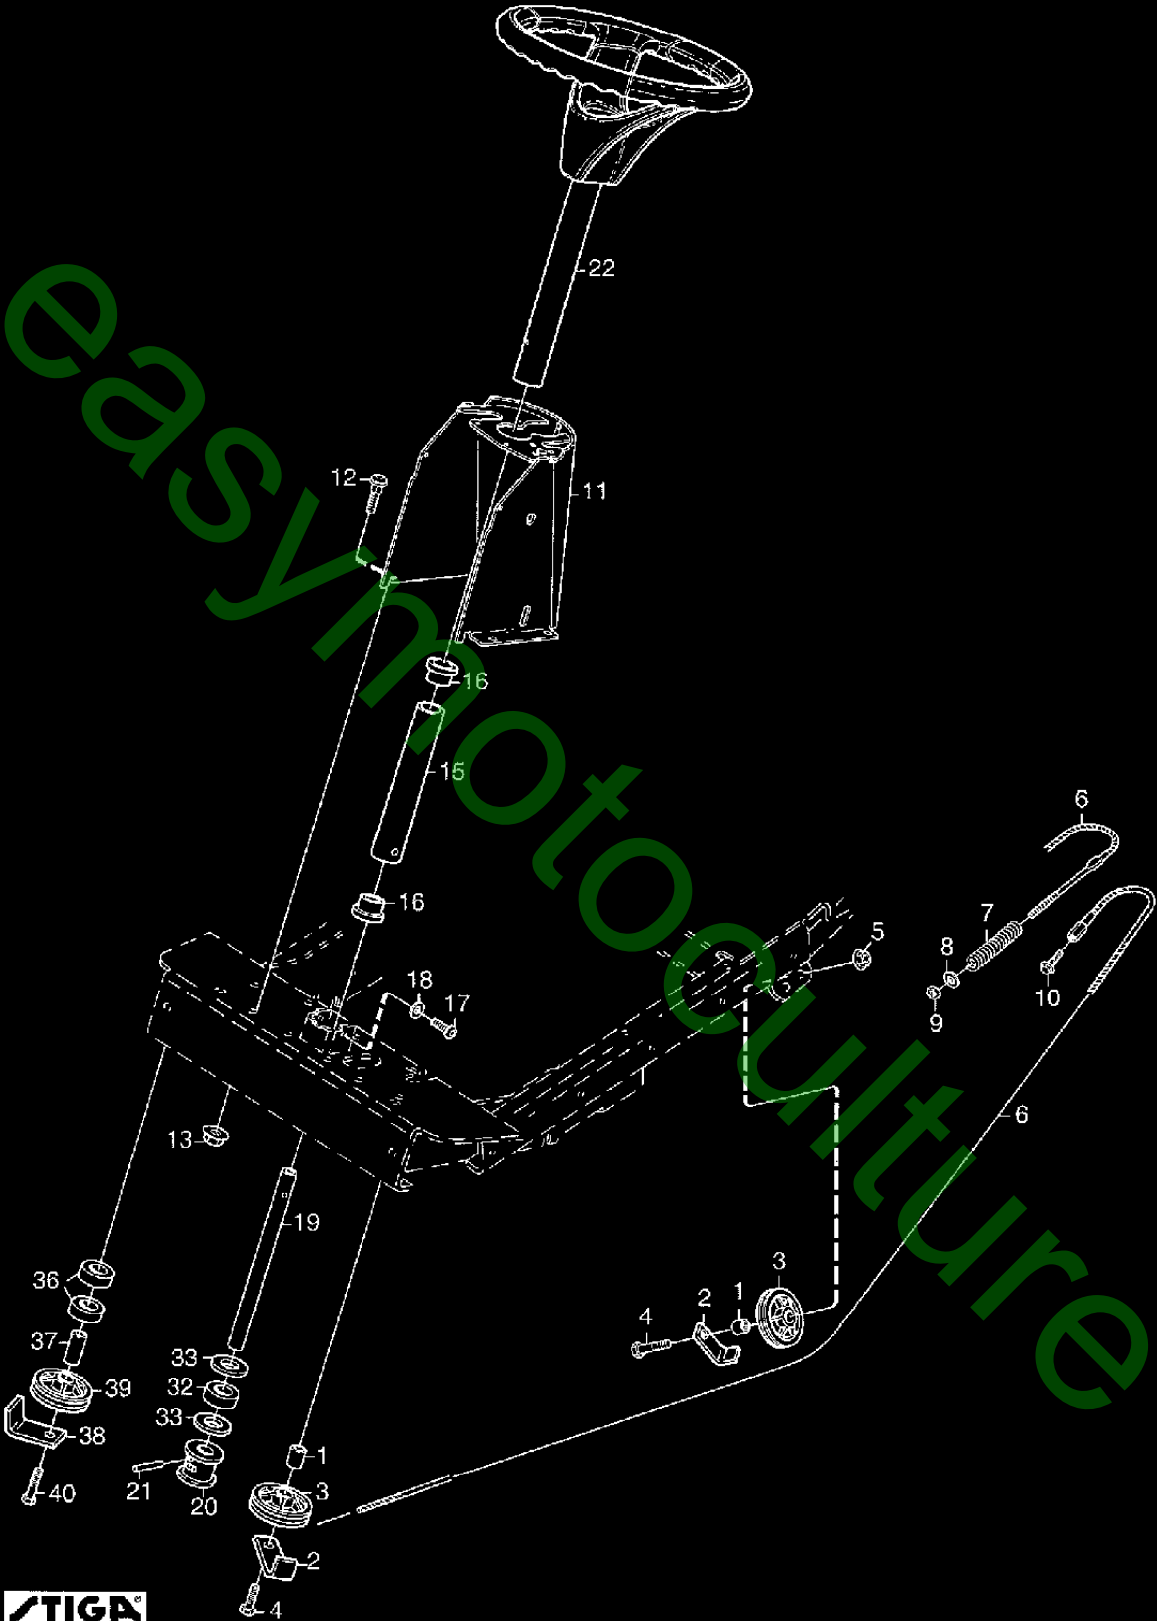


Section: READY STEERING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
1	3	1134-0041-01	Bushing			
2	3	1134-3022-01	Cable holder			
3	1	1134-9025-01	Steering pulley-kit		Sats 2 st/kit of 2	
4	3	9997-1040-16	Screw			
5	2	9739-1031-22	Nut			
6	1	1134-2032-04	Steering cable			
7	1	1134-1310-01	Compression spring			
8	1	9699-0056-02	Flat washer			
9	1	9747-0831-02	Lock nut			
10	1	9959-0820-16	Screw			
11	1	1134-5349-03	Steering console-grey			
12	4	9897-0820-16	Screw			
13	4	9739-0831-22	Nut			
15	1	1134-1305-05	Steering column-lower			
16	2	1134-1901-01	Bearing			
17	2	9893-0616-16	Screw			
18	2	9699-0060-02	Flat washer			
19	1	1134-5495-01	Steering rod			
20	1	1134-1933-01	Steering pulley			
21	1	9595-0262-00	Locating pin			
22	1	1134-5496-01	Steering wheel			
32	1	1134-3047-01	Spacer			
33	2	9699-0104-02	Washer			
36	2	1134-3047-01	Spacer			
37	1	1134-0041-05	Bushing			
38	1	1134-3022-01	Cable holder			
39	1	1134-9025-01	Steering pulley-kit		Sats 2 st/kit of 2	
40	1	9997-1060-12	Screw			

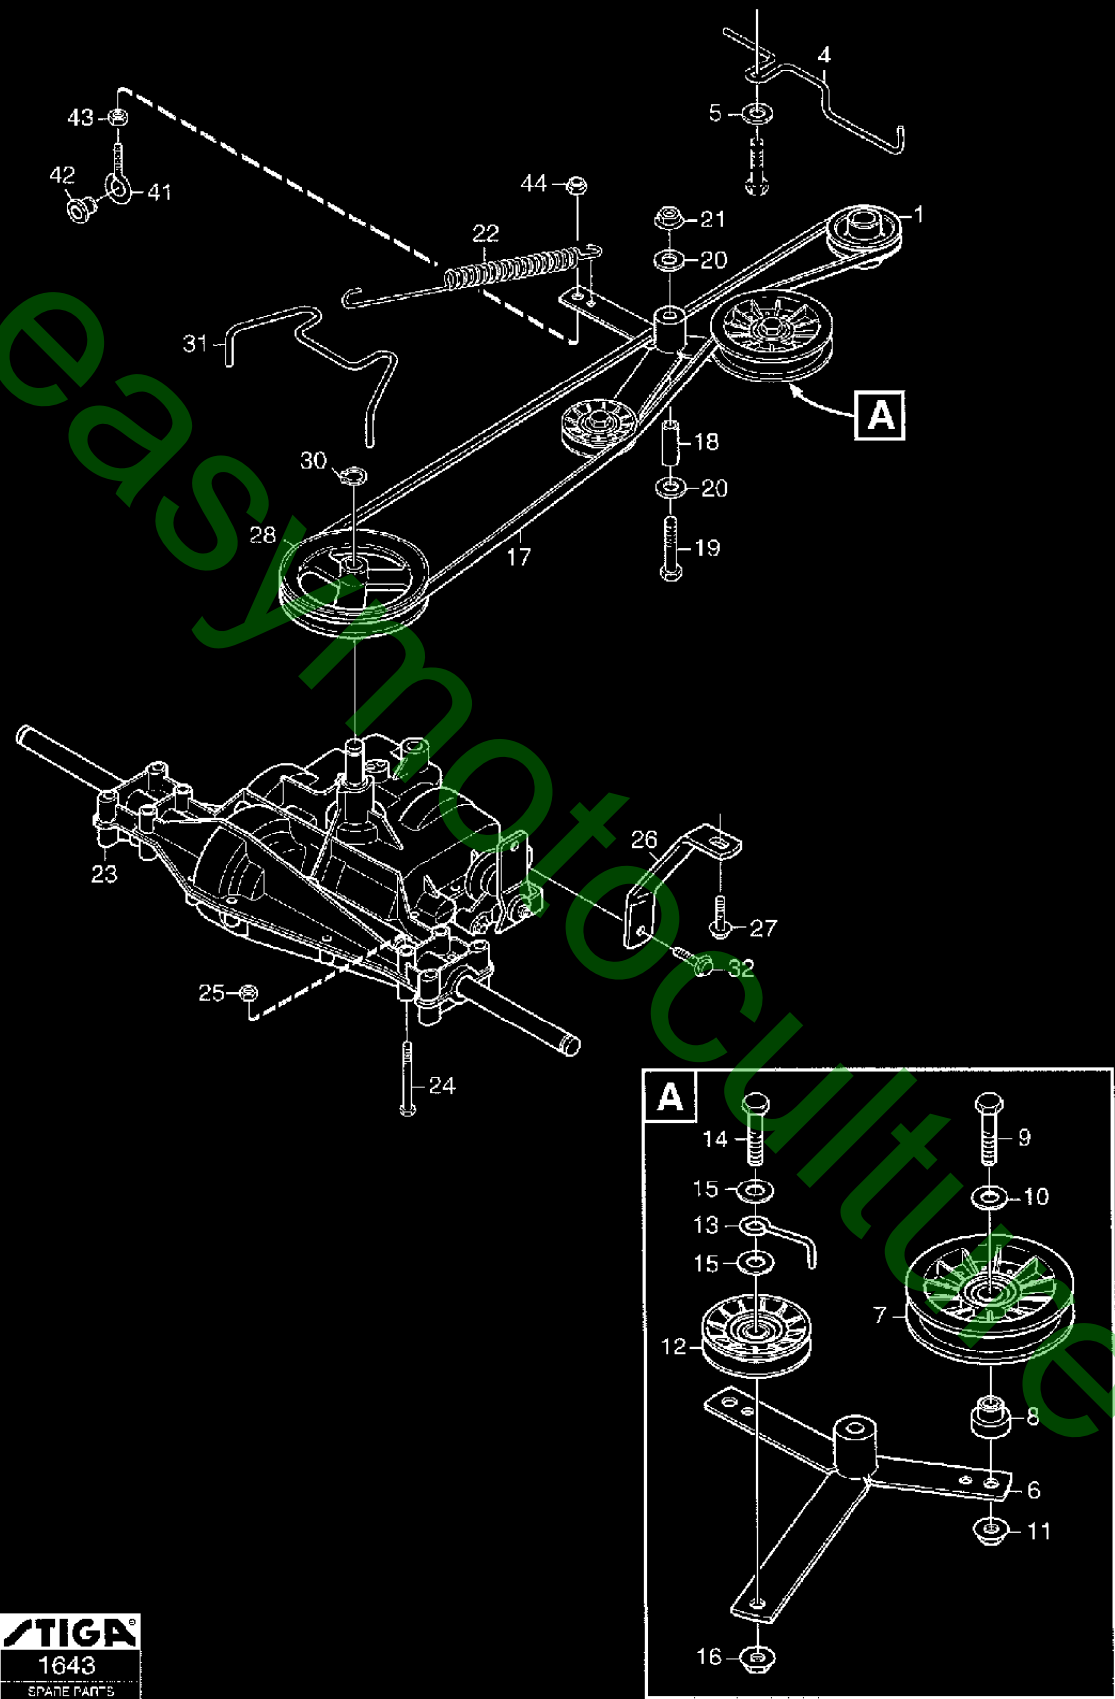


Section: READY TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
2715						
1	1	1134-4611-01	Engine belt pulley			
4	1	1134-5414-01	Belt guide			
5	1	9699-0056-02	Flat washer			
6	1	1134-4519-01	Tension arm			
7	1	1134-9091-01	Tension roller			
8	1	1134-4614-01	Shoulder spacer			
9	1	9997-1040-16	Screw			
10	1	9699-0035-02	Flat washer			
11	1	9739-1031-22	Nut			
12	1	1134-9027-01	Tension roller			
13	1	1134-1795-01	Belt stirrup			
14	1	9997-1040-16	Screw			
15	2	9699-0035-02	Flat washer			
16	1	9739-1031-22	Nut			
17	1	1134-9065-01	Drive belt		= 9585-0124-01	
18	1	1134-1565-08	Spacer			
19	1	9997-0865-12	Screw			
20	2	9699-0056-02	Flat washer			
21	1	9739-0831-22	Nut			
22	1	1134-5214-01	Spring			
23	1	1134-5281-01	Transaxle assy		Dana 4360-197	
24	4	9997-0865-12	Screw			
25	4	9747-0831-02	Lock nut			
26	1	1134-4687-01	Strut			
27	1	9945-0816-16	Screw			
28	1	1134-1849-01	Belt pulley			
30	1	9650-0016-04	Lock ring			
31	1	1134-4707-01	Belt guide			
32	1	9942-0820-16	Screw			
41	1	1134-2138-01	Eye bolt			
42	1	1134-4779-01	Plastic bushing			
43	1	9739-0831-22	Nut			
44	1	9747-0831-02	Lock nut			

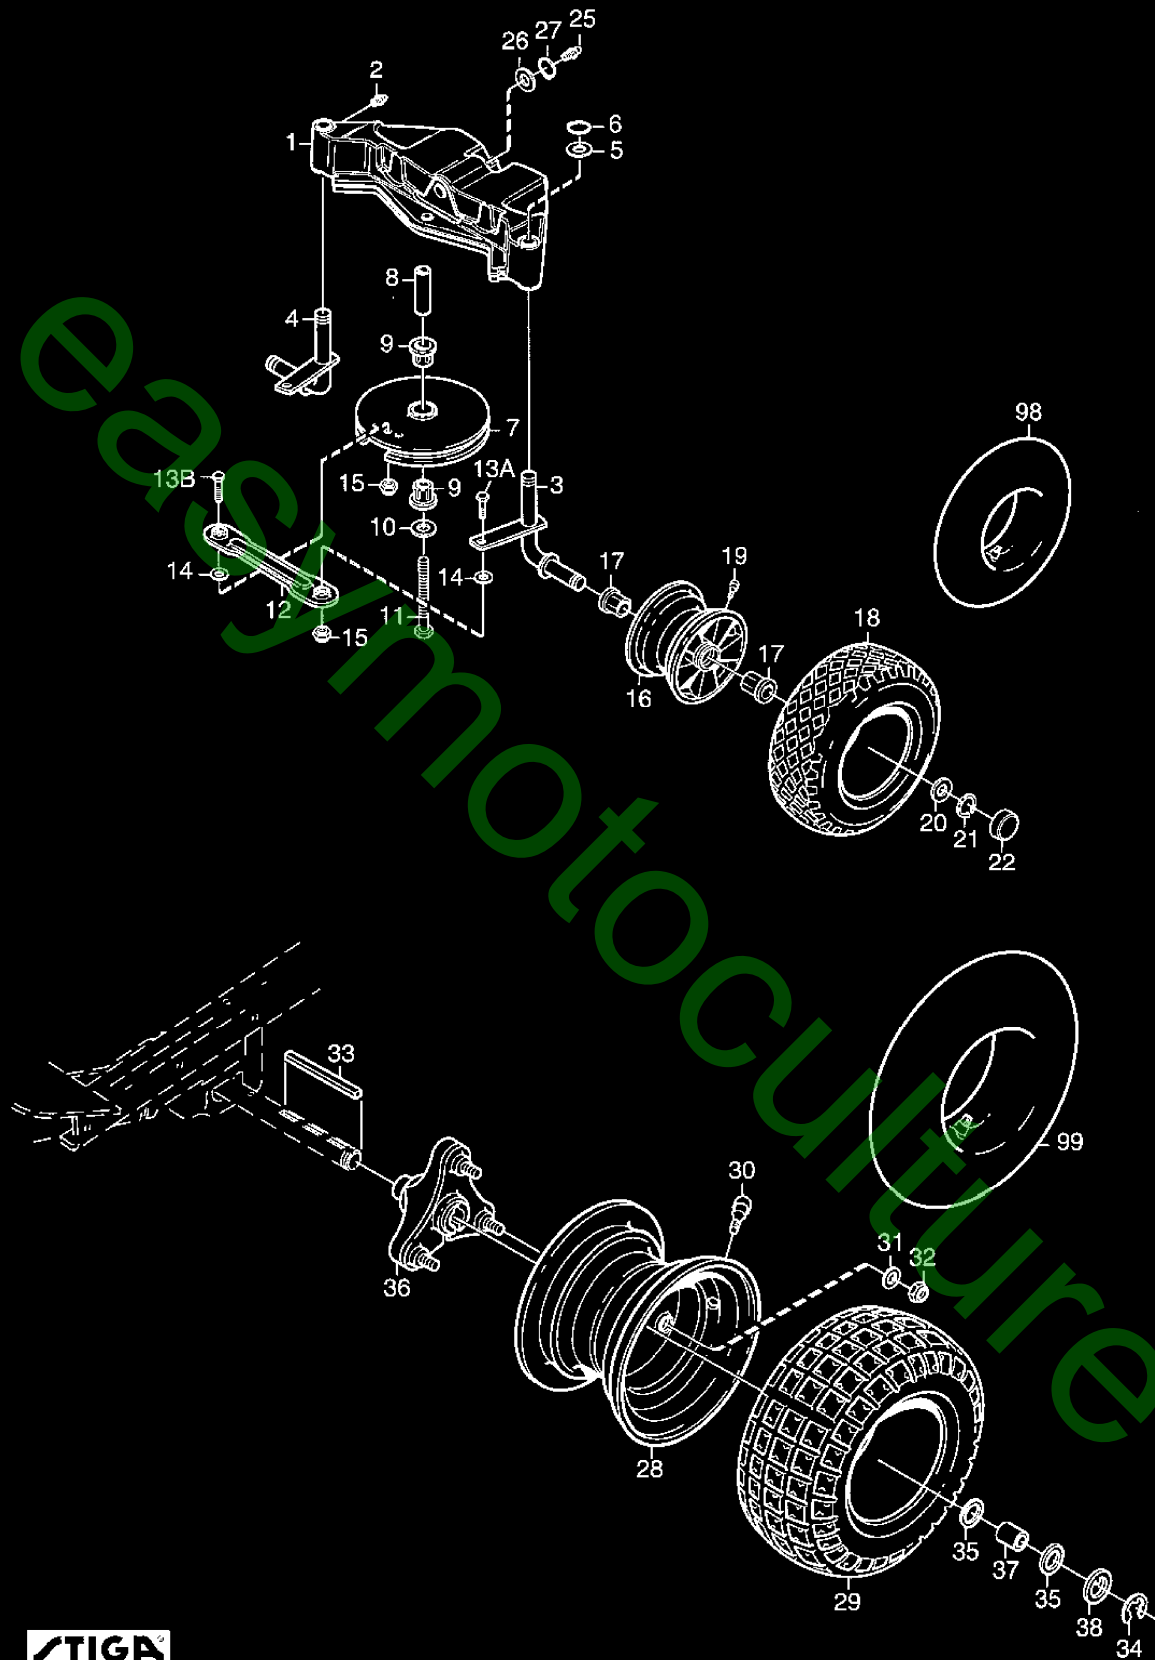

Section: READY WHEELS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2715					
	2716					
1	1	1134-5894-01	Rear axle			
2	2	9501-0500-00	Grease joint			
3	1	1134-5009-02	Spindle-LH			
4	1	1134-5009-01	Spindle-RH			
5	2	9699-0088-02	Flat washer			
6	2	9650-0020-04	Circlip			
7	1	1134-5316-01	Steering pulley			
8	1	1134-5575-01	Spacer			
9	1	1134-9024-01	Bearing		Sats 4 st/kit of 4	
10	1	9699-0104-02	Washer			
11	1	9997-1680-12	Screw			
12	2	1134-3247-05	Tie rod			
13A	2	9997-0825-16	Screw		L = 25 mm	
13B	1	9997-0835-12	Screw		L = 35 mm	
14	2	9699-0028-02	Flat washer			
15	3	9747-0831-02	Lock nut			
16	2	1134-4706-01	Rim			
17	1	1134-9026-01	Bearing bush kit		Sats 4 st/kit of 4	
18	2	9545-0117-00	Tyre		13 x 5.00 - 6	
19	2	9545-0500-00	Valve			
20	2	1134-0341-01	Washer			
21	2	9650-0020-04	Circlip			
22	2	1134-4344-01	Hub cap			
25	1	9501-0500-00	Grease joint			
26	1	9699-0088-02	Flat washer			
27	1	9650-0020-04	Circlip			
28	2	1134-5255-01	Rim			
29	2	9545-0126-01	Tyre		16 x 6.00 - 8	
30	2	9545-0500-00	Valve			
31	6	9699-0035-02	Flat washer			
32	6	9747-1031-02	Lock nut			
33	2	1134-2471-03	Key			
34	2	9653-0001-04	Lock ring			
35	4	1134-0341-01	Washer			
36	2	1134-4844-02	Wheel hub			
37	2	1134-4845-01	Hub sleeve			
38	2	1134-4981-01	Washer			
98		9545-0204-00	Inner tube		Reservdel/spare part	
99		9545-0203-00	Inner tube		Reservdel/spare part	

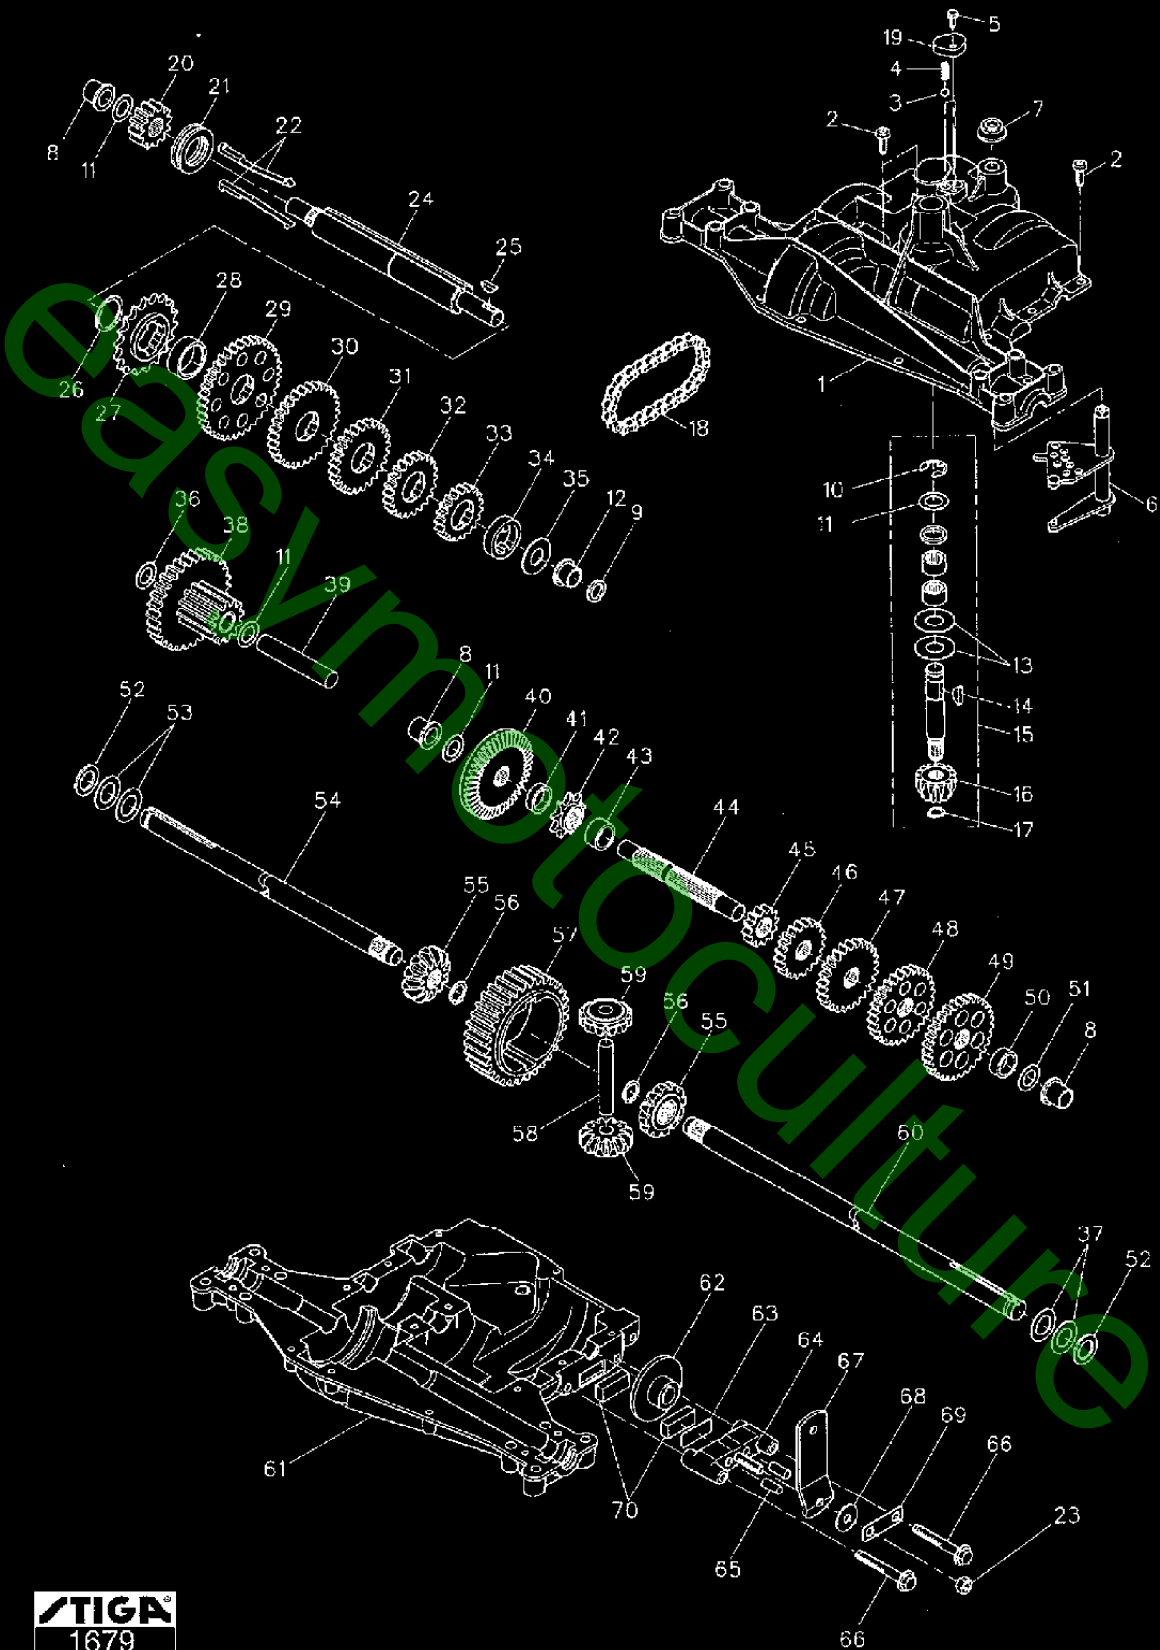

Section: DANA TRANSAXLE 4360-197

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4360 -197					
0	1	1134-5281-01	Transaxle assy			
1	1	F000-7033-00	Housing-upper			
2	16	F000-1919-00	Screw			
3	2	F000-5947-00	Ball			
4	2	F000-5948-00	Spring			
5	1	F084-0052-00	Screw			
6	1	F000-6517-00	Shifter kit			
7	1	F000-7010-00	V-ring			
8	3	F000-5510-00	Flange bearing			
9	1	F000-5508-00	Oil seal			
10	1	F000-1106-00	Retaining ring			
11	4	F000-4689-00	Kit-shim			
12	1	F000-5511-00	Flange bearing			
13	2	F000-3876-00	Washer			
14	1	F000-1746-00	Key			
15	1	F000-6205-00	Input shaft assy			
16	1	F000-5620-00	Bevel pinion		12T	
17	1	F000-3624-00	Retaining ring			
18	1	F000-3625-00	Chain		24 link	
19	1	F000-5950-00	Cover			
20	1	F000-5627-00	Gear		12T	
21	1	F000-5303-00	Shifter boot			
22	1	F000-4758-00	Kit-clutch keys			
23	1	F000-3847-00	Lock nut			
24	1	F000-5737-00	Intermediate shaft			
25	1	F000-1375-00	Woodruff key			
26	1	F000-3627-00	Retaining ring			
27	1	F000-3830-00	Sprocket		18T	
28	1	F000-3841-00	Spacer			
29	1	F000-5365-00	Gear, spur		37T	
30	1	F000-3867-00	Gear, spur		30T	
31	1	F000-3783-00	Gear, spur		25T	
32	1	F000-3869-00	Gear, spur		22T	
33	1	F000-5202-00	Gear, spur		19T	
34	1	F000-5027-00	Spacer			
35	1	F000-3628-00	Washer			
36	1	F000-1425-00	Washer			
37	1	F000-4691-00	Kit-shim			
38	1	F000-6358-00	Gear comb.		12T+30T	
39	1	F000-3967-00	Idler shaft			

Section: DANA TRANSAXLE 4360-197

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4360 -197					
40	1	F000-7003-00	Bevel gear		36T	
41	1	F000-3630-00	Spacer			
42	1	F000-3645-00	Sprocket		9T	
43	1	F000-5016-00	Spacer			
44	1	F000-5015-00	Drive shaft			
45	1	F000-5364-00	Gear, spur		12T	
46	1	F000-3866-00	Gear, spur		20T	
47	1	F000-3719-00	Gear, spur		25T	
48	1	F000-3868-00	Gear, spur		28T	
49	1	F000-3683-00	Gear, spur		31T	
50	1	F000-3714-00	Spacer			
51	1	F000-1145-00	Washer			
52	2	F000-5130-00	Seal			
53	2	F000-3184-00	Washer			
54	1	F000-7031-10	Wheel axle-LH			
55	2	F000-5622-00	Miter gear		12T	
56	2	F000-5270-00	Retaining ring			
57	1	F000-3839-00	Gear, spur		32T	
58	1	F000-3919-00	Cross shaft			
59	2	F000-5623-00	Miter gear		12T	
60	1	F000-7031-20	Wheel axle-RH			
61	1	F000-5304-M0	Housing-lower			
62	1	F000-5960-00	Brake disc			
63	1	F000-3758-00	Spacer			
64	1	F000-5554-00	Brake jaw			
65	2	F000-3843-00	Dowel pin			
66	2	F000-5562-00	Screw			
67	1	F000-7032-00	Actuating lever			
68	1	F000-3760-00	Washer			
69	1	F000-5555-00	Bracket			
70	2	F000-3907-00	Friction puck			
98		F000-4300-00	Grease		Ej ill/not ill.	